





Table of Contents

1	Introduction
	My Book World Edition in Your Network—The Basics 1
2	About Your WD Product2
	Kit Contents
	Optional Accessories 2
	System Requirements
	Updating Your Operating System
	Recording Your WD Product Information
	Registering Your Product 3
	Free Technical Support
	Handling Precautions 3
3	Getting Started4
	Format and Configuration
	My Book World Edition Front and Rear View
	Power Button
	LED Indicators
	Power/Activity LED 5
	Capacity Gauge
	Rear View Ports
4	Hardware Setup6
5	WD Anywhere Access Setup
6	 Using WD Anywhere Access
	Bemete Accesso 12
	Remote Access
	inviting Others to Share

7	Replacing a Drive	18
8	Troubleshooting	21
9	Appendix A - Shared Storage Manager	24
	Accessing Shared Storage Manager.	24
	Shared Storage Manager Setup	25
	General Setup	27
	File Sharing	. 34
	Drive Management	41
10	Appendix B - Regulatory and Warranty	43
	Regulatory Compliance	43
	Warranty Information	44
	GNU General Public License ("GPL").	45
	WD Service and Support	46
	 Index	47

1

Introduction

My Book World Edition in Your Network—The Basics

Congratulations on purchasing a My Book World Edition remote access storage system. Designed for home users, creative professionals, workgroups, small offices, and anyone looking for shared storage, WD's My Book World Edition offers a surprisingly simple and secure way to access and share data, photos, and music at home, in the office, and anywhere in the world—even when your local computer is turned off.^{*}

Follow the steps in this manual to set up centralized storage and make it available to local and remote computers.



Note: The dual-drive My Book World Edition II is preformatted for maximum capacity as a large, spanned single volume. To change the format to RAID 1 for additional protection, see "Drive Management" on page 41. If WD Anywhere Access is not currently installed, you must first run the Initial Setup wizard (see "Appendix A -Shared Storage Manager" on page 24) before you can access Drive Management. Once configuration is complete, you can start saving files to the device, or return to the beginning of this manual for instructions on setting up the device with WD Anywhere Access for remote file sharing and management.

Some file formats may be copy protected and cannot be shared by WD Anywhere Access. For a list of these file types, search for knowledge base article 1495 at support.wdc.com.

2

About Your WD Product

This user manual provides step-by-step installation instructions and other important information regarding your WD product. For the latest WD product information and news, visit our website at *www.westerndigital.com*.

Kit Contents



Optional Accessories

For more information on optional accessories for this product, visit *store.wdc.com* (U.S. only). Outside the U.S., visit *support.wdc.com*.

System Requirements

- Available 10/100/1000Base-T Ethernet connection (network adapter, router, switch, or hub port)
- 500 MB of available local hard drive space
- CD-ROM or DVD-ROM drive
- 512 MB of RAM
- Pentium[®] III class, 500 MHz or newer
- Windows 2000 or Windows XP Home/Pro
- Web browser (Mozilla[™] Firefox[™] 1.0.3, Internet Explorer 6.0 or later)
- Broadband internet connection

Note: Compatibility may vary depending on user's hardware configuration and operating system.

Important: For highest performance and reliability, it is recommended that you install the latest updates and service pack (SP). Go to the **Start** menu and select **Windows Update**.

Updating Your Operating System

Go to the **Start** menu and click **Windows Update**. For more information regarding updating your system, visit *windowsupdate.microsoft.com*.

Recording Your WD Product Information

In the following table, write the serial number and model number of your new WD product found on the large label on the back panel of the device. This information is necessary for setup and technical support. Also, record the account information you used when setting up WD Anywhere Access.

Serial Number:
Model Number:
Purchase Date:
System and Software Notes:
WD Anywhere Access account info:
User name:
Password:
E-mail:
Storage device name:

Registering Your Product

Registering your My Book device enables access to WD services such as news about your product, tips, and updates. Registration is quick and easy. Go to *register.wdc.com* and follow the instructions as prompted.

Free Technical Support

Your WD product includes 30 days of free technical support during the applicable warranty period for your product. The 30-day period commences on the date of your first telephone contact with WD technical support.

Handling Precautions

WD products are precision instruments and must be handled with care during unpacking and installation. Drives may be damaged by rough handling, shock, or vibration. Be aware of the following precautions when unpacking and installing your external storage product:

- Do not drop or jolt the device.
- Do not move the device during activity.
- Do not use My Book as a portable device.
- Do not block air slots on the underside, top, or rear of the enclosure.
- Do not stack any objects on top of the device.



Getting Started

Format and Configuration

My Book World Edition is preformatted as a Linux file system. The dual-drive model My Book World Edition II is pre-configured for maximum capacity as a large single spanned volume. For more information, see "Drive Management" on page 41.

My Book World Edition Front and Rear View

Capacity Gauge LED (inner ring)
Power Button
Power/Activity LED (outer ring)
USB Port (for drive expansion only)
Ethernet Port
Power Port
Recovery Button
Kensington Security Slot

Power Button

The power button turns the device on or off. To turn on the device, press the power button and hold down until the LED flashes once, then release. The LEDs will remain off (up to 30 seconds) as the device powers up. Holding the button down for four seconds powers off the device.

Important: The device powers on automatically upon initial connection to power, which may take up to three minutes.

LED Indicators

The Power/Activity and Capacity Gauge LEDs are two concentric rings on the front panel of the drive. The outer ring is the Power/Activity LED and the inner ring is the Capacity Gauge LED.

Power/Activity LED

Appearance	Description
Steady	Power-on state or power- save mode
Outer LED ring rotating clockwise	Device in use
Alternate flashing between inner and outer LED rings	RAID degraded mode. See section 7 for drive replacement instructions.
Rotating inner LED ring which increments as the rebuild percentage increases	RAID rebuild mode
Simultaneous flashing of both inner and outer LED rings	Device is overheating. Shut down the My Book device.

Capacity Gauge

The Capacity Gauge (inner LED) consists of six sections which illuminate in a clockwise direction to indicate space used on the drive. Each section represents approximately 1/6 (one sixth) of disk space. Because this drive is preformatted and contains software and utilities, the first section is illuminated upon installation.

Rear View Ports

- **Ethernet port**—Connects to an open router, hub, or network switch port using an Ethernet cable.
- **USB 2.0 port**—Connects an external USB hard drive.
- **Power port**—Connects to the supplied power adapter and cable.

Recovery Button

Pressing the recover button while powering up the device resets the admin user name and password to default without erasing shared folders or volumes. The recovery button also resets network configuration to DHCP.

Note: The default user name is **admin** and the default password is **123456**.

Kensington[®] Security Slot

For drive security, this My Book device is equipped with a Kensington Security Slot, which supports a standard Kensington security cable (sold separately). For more information on the Kensington Security Slot and available products, visit *www.kensington.com*.

Hardware Setup

- 1. Connect one end of the Ethernet cable into the Ethernet port located on the back of the unit.
- 2. Connect the other end of the Ethernet cable directly into a router or network switch port.
- 3. Plug the AC adapter into an electrical outlet.
- 4. Connect the other end of the adapter into the DC power supply socket located on the back of the unit. The unit powers up automatically after approximately 30 seconds indicated by an LED illuminated on the outer ring.

Important: Wait for the drive to finish powering up (approximately three minutes) before installing WD Anywhere Access.



5

WD Anywhere Access Setup

This section contains instructions to get your My Book World Edition quickly set up and running. To use My Book World Edition, installing WD Anywhere Access is required.

Note: WD Anywhere Access is a custom version of MioNet. If the regular version of MioNet is already installed in your system, you must uninstall it before installing WD Anywhere Access.

1. Insert the software CD into your CD-ROM drive. The program autoruns and displays the My Book World Edition main menu. In Step 1, click **Install**.



If AutoPlay is disabled on your computer, you must install utilities manually. Click the **Start** button and point to **My Computer**. Double-click the WD Installer icon, the WDAnywhereAccess folder, and Setup.exe.

2. Read the license agreement. Click the I agree with the above terms and conditions check box, then click Next.

To proceed with the installation	n, you must accept this License	W
Agreement. Please read it care	efully.	
END USER LICENSE AGREEMENT This End User License Agreement ("Agreement") is a legal agreeme entity ("You"), and Senvid, Inc. (Senvid client application software electronic documentation ("Docur Documentation collectively referr YOU SHOULD CAREFULLY READ BEFORE USING THE SOFTWARE, installing, copying or otherwise u have read and agree to be boun not agree to the terms of this AG Software.	FOR MIONET, A PRODUCT OF SENVID t For MioNet, a product of Senvid Inc. nt between you, either an individual or "Senvid"), regarding your use of MioNe a (the "Software"), and related online or mentation") (the Software and the red to herein as the "Software"). THE FOLLOWING TERMS AND CONDITI BY CLICKING THE "I ACCEPT" BUTTON sing the Software, you acknowledge th d by the terms of this AGREEMENT. If REEMENT, you are not authorized to u	INC. a single it, the r I BELOW, at you you do ise the
I agree with the above terms	and conditions	

3. Click Finish. WD Anywhere Access (powered by MioNet) is initialized.

B	MioNet has been successfully installed!	
000 C	Click Finish to complete the installation.	
	Finish	

4. The WD Anywhere Access Registration Wizard starts. Click I am creating my new WD Anywhere Access account if new to MioNet, then click Next. If adding the computer to your existing account, click I am adding this computer to my existing WD Anywhere Access account, enter your user name and password in the next screen, click Next, and proceed to step 6.



5. If creating a new account, fill out all fields then click **Next**.

Note: The user name and password you enter here changes the admin user name and password of the My Book World Edition device.

Please fill out the follo	wing information to create your	
account.	nternally for setup and maintenance	
(All fields are required)	nternany for setup and maintenance.	
First name	MRWE	
l ast name		
Ilsemame	MBWEuser	
Password (eight or more characters)	*****	
Confirm password	******	
E-mail address (will be used for verification)	mbweuser@coox.com	
Confirm e-mail address	mbweuser@0000c.com	
□ I would like to receive in companies on relevant	nformation from third party products and services. Privacy Policy	

6. Enter easy-to-remember names in the **Computer Name** (name by which WD Anywhere Access references your computer) and **Storage Device Name** (name of the My Book World Edition device) fields, then click **Next**.

egistration Wizard			<u>_ ×</u>
VD ANYWHERE Access* Powered by MioNet	-	Choose I	Name
Please name your con	nputer.		^
Use a name such as "Home	Computer" or "Office_	_Laptop .	
Computer Name	Home_Computer]
Storage Device Name	MyBookWorld]
9		I Back	Cancel

Note: The Storage Device Name field is prepopulated with 'MyBookWorld' as the recommended default name. If you need to change this field, note that the Storage Device Name is limited to 15 alphanumeric characters. Spaces and special characters are not supported.

7. WD Anywhere Access account setup is complete. Click Finish.



8. You may now install EMC[®] Retrospect[®] Backup Software from the WD Installer screen (click **More info** under the bottom **Install** button for further details about this software). Click **Install** next to the EMC logo in Step 2.

For more information on EMC Retrospect Express including user documentation, visit *www.emcinsignia.com/supportupdates*.



9. Return to the WD Installer screen and click Exit in the lower right corner.

10. Click Restart Now.

G Fo	Getting Started ollow these steps for set up your drive:			Western Digital
	Restart your computer			
	The software installed requires that you restart your computer.			
l	Restart Now Restart Later			
Insta	II Adobe Acrobat Reader	Register your drive	WD User Guide	

Congratulations! My Book World Edition is now installed and mapped as a drive letter on your system. Continue to section 6 to install remote access and share My Book World Edition.

Using WD Anywhere Access

Signing In

1. After restarting or when starting up your computer, the WD Anywhere Access welcome screen displays. Click **Sign In Now**.



2. Enter the WD Anywhere Access password you created in section 5 and click OK.

minionet - 5	ign in	
WD AN	NYWHERE ACCESS ed by MioNet	<u>Sign In</u>
Please en and passy	iter your MioNet userr word to sign in.	name
	mbweuser	
Osemame	moweuser	a a
Password	*****	- 📁
Password	Sign me in automatical	, 🔰
Password	Sign me in automatical	y vord

3. Click **OK** to the e-mail verification request.

4. The WD Anywhere Access screen displays all connected systems and folders accessible for storage and sharing.



Remote Access

1. To remotely access files in the My Book device from another location, install a WD Anywhere Access client from the software CD on the computer that you are using.

Note: My Book World Edition comes with up to five free installation licenses. Go to www.mionet.com to download your free licenses.

2. Once the CD is inserted into the CD-ROM drive, the program autoruns. When prompted, accept the license terms and conditions by clicking the checkbox and then click **Next**.

Note: If AutoPlay is disabled on your computer, you must install utilities manually. Go to the desktop. Double-click My Computer, the WD Installer icon, the WDAnywhereAccess folder, and Setup.exe.

3. Enter the same username and password you assigned when you first set up and installed your My Book device.

🞯 Registration Wiza	rd	<u>-</u> ×
WD ANY	WHERE ACCESS MioNet -	Sign In
Please ent	er your username and password to sign in.	—
Username	MBWEuser	
Password	****	
8		
	🝦 Back) 🛸 Ne	ext 🔀 Cancel

4. Click I am adding this computer to my existing WD Anywhere Access account.

Registra	tion Wizard		<u>_ ×</u>
WD . Po		Wel	come
Softw	are installation is finished, now register thi	is computer.	
۲	I am adding this computer to my existing WD Anywhere Access account	2 🗢 题	
0	I am creating my new WD Anywhere Access account		
F			
	- Back	🔿 Next	Cancel

5. Enter a name for this new computer.



- 6. A screen appears to confirm the added computer. Click Finish.
- 7. The main WD Anywhere Access screen appears with the newly added systems and folders that you can access.

MBWEuser on Home_Computer - MioN	et	
File View Language Help	Buy Now!	You are ONLINE
Invite Alerts	WD ANYWHERE ACCESS Powered By MioNet	Profile Help
🍏 Quick Help 🔇	My Resources Shared with Me	
Getting Started	Access all your connected computers and cameras	
MioNet Overview	WyBoktWord - root Work_Computer - C Drive UHome_Computer - Desktop Folder UHome_Computer - My Documents	
Access your computers remotely	Work_Computer - Desktop Folder Work_Computer - My Documents Home_Computer - Desktop	
Access shared computers and webcams	Vork_Computer - Desktop	
Share with other MioNet users		_
MioNet users		

Inviting Others to Share

1. From the WD Anywhere Access main screen, select the tab **Shared with Others** and click the **Share with** button.



2. If your person with whom you wish to share files does not currently have a WD Anywhere Access account, click **Invite new person**.

sample files	
Available people:	
	Invite new person
	🚨 Find MioNet user
	×

3. Enter this person's email address when prompted.

	-Enter e-mail address here-
ubject:	<enter here="" message="" of="" subject="" the="" your=""></enter>
lessage:	<enter here="" message="" your=""></enter>
o be share	d: 🏳 sample files
] Show em	ail preview below

4. If your designated person already has a WD Anywhere Access account, click **Invite Mionet user** for the software to locate this person's information. Once located, click **OK**.

5. From the **Select Permissions** screen, set the permission level for this user and click **OK**.



6. A screen displays the name of the designated person including the shared file folder name and device.



7. After successful setup, the existing Mionet user receives an alert.



The person without a Mionet account receives an email with a link to your share.

Replacing a Drive

Note: This section applies only to the dual-drive My Book World Edition II.

My Book World Edition II is a limited user-serviceable product which allows for servicing of one or both internal hard drives in the enclosure. In the event a fault occurs and you would like to service the device yourself, visit WD Technical Support at *support.wdc.com* and search for our knowledge base article 8 for detailed instructions on obtaining a replacement drive. When contacting Technical Support, have the following items ready: My Book serial number, date of purchase, and the serial number of the internal hard drive(s) which require replacement. Once you have the replacement drive(s), follow the steps below to service My Book.

Important: To avoid ESD problems, ground yourself by touching the metal chassis of the computer before handling the device. Because articles of clothing generate static electricity, do not allow clothing to come in direct contact with the hard drive or circuit board components.

Before getting started, power off the unit and disconnect all of its cables.

- 1. On a clean and stable surface, gently turn the unit, power button face down.
- 2. Using a cross-tip (Phillips) screwdriver, remove all four screws from the unit and set aside.
- 3. Lift up the cover to remove it, then set it aside.
- 4. Gently turn the unit upside down (WD logo upside down).



- 5. Loosen the screw that secures the drive cage cap.
- 6. Slide the cage cap away from the screw, lift up to remove, and set aside.
- 7. Gently pull the connector of the drive interface/power cable until it is disconnected from the drive and gently push it out of the way.

8. Pull the drive bracket tabs towards each other and gently slide the bracket and drive assembly up and out of the unit.



Note: Each drive is designated A or B by a color coded decal. The components (bracket assembly, cables, connectors) for each drive match the color of the decal.

9. Gently slide the replacement drive assembly into the unit, decal side up, until the brackets click into place.

Important: Do not disassemble the drive and slider bracket assembly components. Return the entire assembly intact to WD.

10. Reconnect the drive interface/power cable.



- 11. Replace the cage cap and tighten the screw.
- 12. Carefully replace the cover by gently sliding it into place and securing it with the four screws.

CAUTION: DO NOT overtighten the screws. The threaded inserts could be stripped if overtightened.



- 13. Reconnect the cables and power on the unit.
- 14. Return the replacement drive following the instructions provided in the WD knowledge base article 8.

Important: Do not disassemble the drive and slider bracket assembly components. Return the entire assembly intact to WD.

15. Go to "Appendix A - Shared Storage Manager" on page 24 for instructions on setting up the new drive(s).

For information on rebuilding a mirrored RAID array, search for our knowledge base article 1496 from *support.wdc.com*.

Troubleshooting

To search the WD technical support knowledge base and to view a complete list of FAQs for your product, visit our support Web site at *support.wdc.com*.

Q: Why can't WD Anywhere Access find My Book World Edition?

Storage	Device Not Found
?	No Storage Devices were found in your local network. If you are installing a new storage device, please make sure that your device is connected to your local network, and that it is plugged in and turned on.
	Do you want to search for the storage device again?
	Yes No

A: If you encounter one of the screens above, do one or more of the following:

- **Check power LED**—ensure that the My Book World Edition is powered on and that the power LED (outer ring) illuminates blue steadily.
- Check connections—make sure you have connected an Ethernet cable from the My Book World Edition Ethernet port to a network switch or an open port on your router.
- Check the IP address and your router settings—make sure that your computer and the My Book World Edition IP addresses are listed in the same subnet.

Q: Why does the device not power up?

A: Make sure the power cord and power supply are connected correctly and securely. After connecting the power cord, the device takes approximately 30 seconds to spin and power up. The area surrounding the button illuminates blue when the drive is ready.

If using a power strip or a UPS (uninterruptible power supply), unplug the My Book World Edition power cord and connect it directly to a power outlet.

Q: Why is the device not recognized under "My Computer" or on the computer desktop?

A: Make sure WD Anywhere Access is installed and running.

Q: What if I have forgotten or misplaced my password?

A: For the My Book World Edition, use the recover button to revert to the default password. See "Recovery Button" on page 5. For WD Anywhere Access, click the **Forgot username and password** link in the sign in screen (see "Signing In" on page 12) and follow the instructions as prompted.

Q: Why does the interface report "failed drive" even after the bad drive is already replaced?

A: The system detects the new drive in the device as failed until the new drive is formatted. Refer to "Format New Internal Drive" on page 42 for instructions.

Q: *My* router, hub, or switch has failed or is not available. How do I access my data in the My Book World Edition?

- **A:** Do the following:
- 1. Connect the My Book World Edition directly to the computer's Ethernet port.



 To connect to a shared folder on the My Book World Edition, right-click on the My Network Places or Network Neighborhood icon on the desktop, then click Map Network Drive... Type in the name of the My Book World Edition shared folder (e.g., \\mybook world\public).

Map Network Drive	Iows can help you connect to a shared network folder assign a drive letter to the connection so that you can ss the folder using My Computer. ify the drive letter for the connection and the folder you want to connect to:
Driv Fold	Z: Impbookworld\public Frowse Example: \\server\share Reconnect at logon Connect using a different user name. Sign up for online storage or connect to a network server.
	< Back Finish Cancel

Q: How do I connect a USB external drive to the device?

- **A:** Do the following:
- 1. Connect and power on the USB external drive.
- 2. Connect one end of the USB cable to the external drive.
- 3. Connect the other end of the USB cable to the available USB port on the My Book World Edition.



4. My Book automatically detects the external USB drive. Information about the USB drive is displayed under System Summary in the Shared Storage Manager. See "Safely Remove the Device" on page 42 for instructions on how to safely remove the external drive.



Appendix A - Shared Storage Manager

CAUTION: Shared Storage Manager is a web interface for configuring My World Book Edition and is recommended only for advanced users.

Shared Storage Manager is a LAN access only application used for configurating this product as well as managing local files and data. For most users, WD Anywhere Access is the recommended application for sharing files.

Accessing Shared Storage Manager

WD Anywhere Access Installed

1. Open your browser and enter the Storage Device Name you selected in section 5. Click **Go**.

Address	m ybook world	💌 🛃 Go
19		Section Constants

2. The Shared Storage Manager screen appears, displaying the device name, firmware version, drive status, and user name in the upper right corner. The System Summary box in the right section of the screen displays storage (internal and external drives) and network information.

iñ	D	Shared Stora Shared Storage conf	ge Manager			Device Fi Drive	e Name: MyBookWorld rmware: 01.01.06 e Status: Synchronizing
Tu	iesday, Jai						User: MBWEuser
Tu	iesday, Jar	Home Home Welcome to the M General Configure us and upprate File Sha This option Trename, del Drive Mi Drive Mi Drive Mi Drive Mi	General Setup General Setup ty Book World Editi Setup ermane and password, date firmware. rring will allow you to create of upd ete, permissions) anagement (AnAnced perment should be used to vie anage volumes (create, resti	File Sharing	Drive Management	System Summa Storage Internel drive(s) Totel Space: Available Space: Percentage Free: Percentage Free: Network WØAnywhere Access: Speed:	Ver: MBWEuser VD Site VD Site 77 476,726,416K 476,535,189K 99%. 244,130,352K 244,077,409K 99%. Active 100Mb/s
						IP Address: Default Gateway: Workgroup:	192.168.1.101 192.168.1.1 WORKGROUP

3. The Enter Network Password screen will appear when you click on any of the configuration tabs. Enter the user name and password you created in section 5 of this manual, then click **OK**.

🄊 This	secure We	eb Site (at mybook	world) requires you	to log on.
Plea	se type the	User Name and F	^o assword that you	use for nas admin
User	Name	MBWEuser		•
Pass	word	*****		
	Save this p	assword in your p	assword list	
			ΠΚ	Cancel

Shared Storage Manager Setup (WD Anywhere Access Not Installed)

1. Open your browser and enter 'mybookworld' in the Address field. Click Go.

ddroce	mybookworld	
auress	πιγρουκνιστια	

💌 🔁 Go

2. The Initial Setup wizard displays. Click **Next**.

ivid	Shared Storage Shared Storage conf	ge Manager ^{guration}			Devic F Driv	e Name: MyBookWorl irmware: 01.01.09 e Status: OK	ld
Tuesday, J	anuary 16, 2007 / 9:59pm UTC						
		9				W	D Site
6	Home	General Setup	File Sharing	Drive Management			
	Welcome to the My	Book World Edition	n Initial Setup wizar	d.	System Summa	ry	
	This wizard will guide you the use in your home or office ne	rough the steps necessary stwork.	to configure your MyBook ^y	World Edition for	Storage Internal drive(s) Total Space:	953,454,724K	
	Please click "Next" when yo	u are ready			Available Space: Percentage Free: Network	953,250,072K 99%	
	HEAT? DUCK				WDAnywhere Access: Speed:	Active 100Mb/s	
L					IP Address: Default Gateway: Workgroup:	192.168.1.101 192.168.1.1 workgroup	

3. Enter the default user name (admin) and password (123456) and click OK.

Enter Net	work Passwo	rd	x
? >	This secure \	Veb Site (at mybookworld) requires you to log on.	
ζ η	Please type t	he User Name and Password that you use for nas admin	
	User Name	admin	
	Password	*****	
	Save this	s password in your password list	
		OK Cancel	

4. The End User License Agreement displays. Scroll to the bottom of the page and click **I Accept**.



5. The Initial User & Password Setup screen displays. Click in the **Admin username** and **Password** fields to type in the new user name and password. Type in the password again in the **Confirm Password** field, then click **Next**.

Important: WD recommends setting the user name and password fields to protect unauthorized access to the Shared Storage Manager. Once set, record them in "Recording Your WD Product Information" on page 3.

ŴD	Shared Stora Shared Storage cor	age Manager			Fi	rmware: 01.01.09 e Status: OK
Tuesday, Ja	nuary 16, 2007 / 10:04pm UTC					User: adm
<u> </u>	Home	General Setup	File Sharing	Drive Management		WD 8
Y	Initial User & Pass	word Setup		ĺ	System Summa	γ
	Admin Username: MBW/ New Password: ••••• Confirm Password: ••••• Next> Back	Euser			Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere	953,454,724K 953,250,072K 99%
					Access: Speed: IP Address:	100Mb/s 192.168.1.101

The Initial Date & Time Setup screen displays. Click in the lists next to the New Date, New Time, and Time Zone fields to select the correct date and time. Confirm that the date/time settings are correct, then click Next.

iñiD	Shared Storage Conf	ge Manager			Device Name: MyBookWorld Firmware: 01.01.09 Drive Status: OK
Tuesday, J	anuary 16, 2007 / 10:10pm UTC				User: admir
<u> </u>	Home	General Setup	File Sharing	Drive Management	WD Site
	Initial Date & Time & Current Date: Tuesday, Jan Current Time: 22:09:59 GM New Date: 16 ¥ Janu New time: 22 ¥ : 09 TimeZone: America/Los Next >> Back	Setup uary 16, 2007 any v 2007 v v s_Angeles v			System Summary Storage Internal drive(s) Total Space: 953,454,724K Available Space: 953,250,072K Percentage Free: 99% Network WDAnywhere Access: Active Speed: 100Mb/s IP Address: 192,168,1.101 Default Gateway: 192,168,1.1 Workgroup: workgroup

7. The Initial Setup Wizard Finished screen displays and shows a summary of settings. Click **Update Settings** to begin using Shared Storage Manager.

iñ	D	Shared Stora	ge Manager			Devic F Driv	e Name: MyBookWorld irmware: 01.01.09 e Status: OK
Т	iesday, Ja	nuary 16, 2007 / 10:09pm PST					User: admin
6	<u>b</u>	Home	General Setup	File Sharing	Drive Management		WD Site
		Initial Setup Wizard Summary of settings: Admin Username: MBWEus New Date: 16-01-2007 New time: 22-09 TimeZone: America/Los_An You have completed the init Cancel Update sett	I Finished ser geles ial setup wizard and you ma	ay now continue to update .	your settings.	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	ry 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168.1.101 192,168.1.1 vvorkgroup

General Setup

1. Click the **General Setup** tab. The General Setup screen appears, displaying the following options.

iñ	D	Shared Stora Shared Storage co	age Manager			Devic F Driv	e Name: MyBookWorld rmware: 01.01.09 e Status: OK
TI	Jesday, Jar	nuary 16, 2007 / 10:15pm PST					User: MBWEuser
0 0 0	Lesday, Jar	Home Home Configure the bar Update Change Update Config Upgrac	General Setup sic settings of My Bo Admin Username a e Current Date and T e Device/Workgroup ure the Network Setti le the System Firmw	File Sharing bok World Edition nd Password [Adva "ime Names ings rare	Drive Management	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere Access: Spacet	953,454,724K 953,250,072K 99% Active
		WD Ar	ywhere Access sett	ings		Speed: IP Address: Default Gateway: Workgroup:	100Mb/s 192.168.1.101 192.168.1.1 workgroup

Update Admin Username and Password

- 1. Click Update Admin Username and Password.
- 2. Click in the **Admin username** and **Password** fields to type in the new user name and password. Confirm the password in the **Confirm Password** field, then click **Update**.

iń	Shared Storage Manager Shared Storage configuration	Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Ţ	Tuesday, January 09, 2007 / 6:28pm UTC	User: admin
	Home General Setup File Sharing Drive M	WD Site
	Update Admin Username and Password [Advanced]	System Summary Storage
	New Password: Confirm Password: Update >> Cancel	Internal drive(s) Total Space: 953,454,724K Available Space: 953,250,072K Percentage Free: 99% Network
		WDAnywhere Access: Active Speed: 100Mb/s IP Address: 192.168.1.101 Default Gateway: 192.168.1.1 Workgroup: WORKGROUP

- 3. Click the **General Setup** tab to return to the configuration menu.
- 4. The Enter Network Password screen appears. Enter your new username and password, then click **OK**.

Enter Nets	vork Password	×
? >	This secure Web Site (at mybookworld) requires you to log on.	
3	Please type the User Name and Password that you use for nas admin.	
	User Name MBWEuser	
	Password XXXXXX	
	Save this password in your password list	
	OK Cancel	

Change Current Date and Time

- 1. Click Change Current Date and Time.
- 2. Click in the lists next to the **New Date, New Time, and Time Zone** fields to select the correct date and time. Confirm that the date/time settings are correct, then click **Update**.

ivi	Shared Stora Shared Storage co	age Manager			Device	e Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tu	iesday, January 09, 2007 / 6:32pm UTC					User: MBWEuser
	Home	General Setup	File Sharing	Drive Management		WD Site
	Date and Time Se Current Date: Tuesday, Ja Current Time: 18:31:59 Gf New Date: 9 V Jan New time: 18 V jan TimeZone: America(1	ttings Inuary 9, 2007 MT Inuery V 2007 V In Inuery V 2007 V Inuery 9, 2007			System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	Py 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1,101 192,168,1,1 192,168,1,1 VVORKGROUP

Update Device/Workgroup Names

CAUTION: The Device Name and Workgroup Name determine how the My Book World Edition is identified on the network. Changing these settings is recommended only for advanced users, requiring a custom network configuration.

- 1. Click Update Device/Workgroup Names.
- 2. Click in the **Device Name** and **Workgroup Name** fields to type in the new names. Click **Update** when finished.

ivi	D	Shared Stora Shared Storage con	ge Manager			Device	e Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
							User: MBWEuser
Tue S	esday, Jai	Home Home Update Device/Wc New Name: MBWE New Workgroup: WORKG Applying these changes wi do this at this time. Update Cancel	General Setup rkgroup Names ROUP I require you to reboot your I	File Sharing	Drive Management	System Summai Storage Internal drive(s) Total Space: Available Space: Percentage Free: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Geteway: Workgroup:	User: MBWEuser WD Site IV 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168.1.101 192,168.1.11 VVORKGROUP

Configure the Network Settings

This section is intended only for advanced users who require specific My Book settings. If you are not familiar with this field or are unsure about editing it, cancel the wizard.

Obtain a Network Address Automatically

- 1. Click Configure the Network Settings.
- 2. Click Begin Wizard.
- 3. Click Automatic in the Obtain Network Address list, then click Next.

ivid	Shared Storage Manager Shared Storage configuration			Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday, Ja	anuary 09, 2007 / 6:34pm PST			User: MBWEuser
<u> </u>	Home General Setup	File Sharing	Drive Management	WD Site
	Network Address Wizard - Step 1 Obtain Network Address: Automatic V Next>> Back Cancel		S s k	ystem Summary torage ternal drive(s) Total Space: 953,454,724K Available Space: 953,250,072K Percentage Free: 99% letwork WDAnywhere: Active Access: Active Speed: 100Mb/s IP Address: 192.168.1.101 Default Gateway: 192.168.1.1 Workgroup: WORKGROUP

4. Click Finish.

Sha	nared Stora	ge Manager			Device	e Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday, January 09,	2007 / 6:35pm PST					User: MBWEu
<u>~</u>	Home	General Setup	File Sharing	Drive Management		WD
Finis Worl	hed Gathering d Edition with t	Information. Click I he new settings	Finish to update th	ne MyBook	System Summa	γ
Finist Applyir do this Back	g these changes will at this time.	require you to reboot your f	₽C. Please click Cancel i	f you do not wish to	Storage Internal drive(s) Total Space: Available Space: Percentage Free: ModAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1,101 192,168,1,1 WORKGROUP

5. Reboot your computer to update the network settings.

Manual Network Address Configuration

My Book provides automatic assignment of TCP/IP addresses through Dynamic host configuration protocol client (DHCP). You can change these assignments manually using the Obtain Network Address wizard.

- 1. Click Configure the Network Settings.
- 2. If you know how to manually configure a network, click Begin Wizard.
- 3. Step 1-Network Address Wizard. To change TCP/IP address information, click Manual in the Obtain Network Address list, then click Next.

WD	Shared Storage Manager Shared Storage configuration			Device	e Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday, Ja	inuary 09, 2007 / 10:39am PST				User: MBWEuser
9 9	Home General Setup Network Address Wizard - Step 1 Obtain Network Address: Manual Next>> Back Cancel	File Sharing	Drive Management Syst Inter Netv	em Summar age nal drive(s) Total Space: Available Space: Vork WDAnywhere Access: Speed: IP Address: Vorkgroup:	WD Site y 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1.101 192,168,1.1 WORKGROUP

CAUTION: The Obtain Network Address wizard allows you to change the My Book World Edition network settings to a specific configuration. If you are unsure about manually configuring a network, cancel this wizard.

4. Step 2 - Network Address and Subnet Settings. Set a static IP address (an address other than the one assigned to the computers on the network switch or hub) in this screen by typing in changes to the settings in the Network Address and Subnet fields. Click Proceed to Gateway Page.

iñ	Shared Storage Manager Shared Storage configuration	Devic	e Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tu			User: MBWEuser
	Home General Setup File Sharing Drive Management		WD Site
	Step 2 : Network Address and Subnet Settings Network Address and Mask: 192 . 168 . 1 . 128 / 24 Recommended subnet mask is 255.255.255.0 which is equivalent to 24 in mask input box Proceed to Gateway Page >> Back Cancel	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere Access: Speed: IP Address:	y 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168.1.101

5. **Step 3-Gateway**. The gateway address is the location of your router. Only change this value if it is not the address of your router. Click **Next**.

WD	Shared Storage Man Shared Storage configuration	nager		Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday,	, January 09, 2007 / 10:40am PST			User: MBWEuser
	Home Genera	al Setup File Sharing	Drive Management	WD Site
	Step 3 : Gateway [192] [193] DNS Servers: [129] [263] [28] [29] [263] [28] [29] [263] [28] [29] [26] [25] [25] [25] [25] [25] [25] [26]		Syst Stor Inter Netv	em Summary age al drive(s) Total Space: 953,454,724K svailable Space: 953,250,072K vork: VVDAnywhere Access: Active Speed: 100Mb/s IP Address: 192,168,1,101 efault Gateway: 192,168,1,1 VVorkgroup: WVDRKGROUP

6. Click Finish.

iń	iD	Shared Stora Shared Storage cor	age Manager			Devic	e Name: MyBookWoi Firmware: 01.01.0 Drive Status: OK	rid 6
Ţ	uesday, Ja	nuary 09, 2007 / 10:48am PST					User: MBW	Æuser
		-					V	VD Site
2		Home	General Setup	File Sharing	Drive Management			
0		Finished Gathering World Edition with Finish Applying these changes wi do this at this time. Back Cancel	g Information. Click F the new settings Il require you to reboot your F	Finish to update the	ə MyBook you do not wish to	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	7y 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1,101 192,168,1,1	

7. Reboot your computer to update the network settings.

Upgrade the System Firmware

- 1. Click Upgrade the System Firmware.
- 2. If new firmware is available, click Click to download and install.

ivid	Shared Storage Manager Shared Storage configuration		Device Fi Drive	e Name: MyBookWorld rmware: 01.01.07 e Status: OK
Monday, J	anuary 15, 2007 / 3:51pm PST			User: adn
<u> </u>	Home General Setup File Sharing	Drive Management		WD S
<u>.</u>	New firmware available		System Summa	ry
	New firmware available Click to download and install • The upgrade process takes approximately 30minutes depending connection speed and general network activity. • The user must NOT power off the NAS during the upgrade proce • The user must NOT power off the NAS during the upgrade proce • The user should NOTE, the NAS LEDs will • flicker during firmware download • extinguish all LEDs for approximately 15 minutes, whilst ap firmware • illuminate all LEDs when firmware upgrade is complete	g on internet SS. oplying the	Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere Access: Speed; IP Address: Default Gateway: Workgroup:	953,454,724K 953,250,068K 99% Active 100Mb/s 129,253,226,112 129,253,226,254 workgroup

CAUTION: Upgrading the firmware takes approximately 30 minutes and must not be interrupted in any way. During this time, DO NOT perform any browser operations or power off the device. Interruption to the firmware upgrade process will result in complete and irrecoverable data loss and a damaged My Book World Edition.

3. After approximately 30 minutes, the device will automatically log off and reboot. When all LEDs on the device are illuminated, close the open browser. Your updated My Book World Edition is now ready to use.

WD Anywhere Access Settings

- 1. Click WD Anywhere Access settings.
- 2. Click Start, Stop, or Reset. MioNet status displays after each selection.

ivi	Shared Storage Manager Shared Storage configuration	Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tues	ay, January 09, 2007 / 10:51am PST	User: MBWEuser
	Home General Setup File Sharing Drive Management	WD Site
	WD Anywhere Access - powered by MioNet	System Summary
	Current Status: MioNet is running	Storage Internal drive(s)
	Start Stop Reset	Total Space: 953,454,724K Available Space: 953,250,072K
		Percentage Free: 99% Network
		WDAnywhere Access: Active Speed: 100Mb/s
		IP Address: 192.168.1.101 Default Gateway: 192.168.1.1
		Workgroup: WORKGROUP

File Sharing

1. Click **File Sharing**. The File Sharing screen appears, listing the shared folders accessible through the network.

iñ	iD	Shared Storage conf	ge Manager			Device	9 Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Τι							User: MBWEuser
т.	esday, Ja	Home File Sharing Current Shared Folder Settin Share Name PUBLIC User Man Add a Sh Rename a Remove a Update S	General Setup agement ared Folder a Shared Folder a Shared Folder ecurity Settings	File Sharing	Drive Management Syste Stora Intern A P Netw Dr	erm Summa ge al drive(s) Total Space: valiable Space: or k WDAnywhere Access: Speed: IP Address: fault Gateway: Workgroup:	User: MBWEuser WD Site Ty 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1.101 192,168,1.11 WORKGROUP
						Workgroup:	WORKGROUP

User Management

The User Management option allows you to add or delete users of the device. It also allows the changing of user passwords.

Change a User Password

- 1. Click User Management.
- 2. Click a user name in the **Username** list, then enter the new password in the **New Password** and **Confirm Password** fields.
- 3. Click Change Password.

iiiD	Shared Storage Manager Shared Storage configuration			Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday, J	anuary 09, 2007 / 11:15am PST			User: MBWEuser
4	Home General Setup	File Sharing	Drive Management	WD Site
•	User Management Existing Users: MBWEuser Delete MBWEuser I MBWEuser I New Password Confirm Password Confirm Password Change Password Create User		Syste Stora Intern A Pe Netw Dr	ge al drive(s) Total Space: 953,454,724K valiable Space: 953,250,072K creatage Free: 99% ork WDAnywhere Access: Active Speed: 100Mb/s IP Address: 152,168.1.101 sfault Gateway: 132,168.1.1 Workgroup: WORKGROUP

Create a New User

- 1. Click User Management.
- 2. Click Create User.
- 3. Enter the new user name in the **New User Name** field, then enter the new password in the **Password** and **Confirm Password** fields.
- 4. Set share permissions for the new user by clicking **Full**, **Read Only**, or **None** next to each share name.
- 5. Click Create User.

iiiD	Shared Storag Shared Storage config	e Manager					Device	e Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday,	January 09, 2007 / 10:55am PST							User: MBWEuse
¥	Home	General Setup	File Sharing		Drive Mar	nagement		WD Si
	Create User New User Name: MBWEus New Password: Confirm Password: Share Permissions Share Name PUBLIC Create User Cancel	ser2 • •		Full	Read Only ©	None C	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	y 953,454,724K 953,250,072K 99%. Active 100Mb/s 192,168,1,101 192,168,1,1 WORKGROUP

Delete a User

- 1. Click User Management.
- 2. Click **Delete** next to the user name you want to delete.
- 3. Click **Delete this user**.

	Shared Storage Manager Shared Storage configuration			Device	Name: MyBook/ Firmware: 01.01 rive Status: OK	/orld .06
Tuesday, January (09, 2007 / 11:15am PST				User: MB	WEuser
Desiday, daribar u	Home General Setup elete User s page will delete the selected user er Name: MBWEuser2 Delete this user Cancel	File Sharing	Drive Management Syst Interr P Netw D	em Summan age Ial drive(s) Total Space: Verlable Space: ercentage Free: VDAnywhere Access: Speed: IP Address: efault Gateway: Workgroup:	953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1.101 192,168,1.1 WORKGROUP	WEISE WD Site
			P P Netw D	Available Space: ercentage Free: wDAnywhere Access: Speed: IP Address: efault Gateway: Workgroup:	953,250,1 99% Active 100Mb/s 192.168.' 192.168.' WORKGF	1.101 1.1 ROUP

Add a Shared Folder

- 1. Click Add a Shared Folder.
- 2. Click Begin Wizard.
- 3. Step 1-Create Shared Folder Name. Type in the name of the shared folder in the Shared Folder Name field, then click Next.

iń	iD	Shared Storage Manager Shared Storage configuration		Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Т	uesday, Ja	nuary 09, 2007 / 11:19am PST		User: MBWEuser
		Home General Setup File Sharing	Drive Management	WD Site
	3	Step 1: Create Shared Folder Name	System	n Summary
		New Shared Folder Name : Photos	Storage Internal o Ava	≱ trive(s) Total Space: 953,454,724K iilable Space: 953,250,072K
		Back Cancel	Perc Networ W	entage Free: 99% k /DAnywhere Access: Active
			Defa	Speed: 100Mb/s IP Address: 192.168.1.101 uit Gateway: 192.168.1.1 Workgroup: WORKGROUP

4. Step 2-Select Volume. Click Main in the Volume list. Click Next.

Note: The shared folder will be created in the volume that you select.

iñiD	Shared Storage confi	ge Manager			Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday, J	January 09, 2007 / 11:19am PST				User: MBWEuser
*	Home Step 2: Select Volu Volume: Main • Next >> Back Cancel	General Setup me	File Sharing	Drive Management Syste Stora Interne A Pe Netw De	WD Site Pm Summary ge al drive(s) Total Space: 953,454,724K vailable Space: 953,250,072K proentage Free: 99% ork WDAnywhere Active Access: Active Speed: 100Mb/s IP Address: 192,168,1.101 offault Gateway: 192,168,1.1 Workgroup: WORKGROUP

iŵD	Shared Storag	ge Manager			Device	Name: MyBookWorld Firmware: 01.01.06 Prive Status: OK
Tuesday, Janu						User: MBWEuser
						WD Site
22	Home	General Setup	File Sharing	Drive Management		
	Step 3: Access Set	be created	j	Dive management Syste Stora; Interna Av Per Netwo Def	In Summar Je drive(s) Total Space: aliable Space: centage Free: rk WDAnywhere Access: Speed: IP Address: aut Gateway: Workgroup:	y 953,454,724K 953,250,072K 99% Active 100Mb/s 192,1681.1 192,1681.1 WORKGROUP

5. Step 3-Access Setting. A CIF share type is created. Click Next.

6. CIF: Step 4-Security Setting. Set share permissions for each user by clicking Full, Read Only, or None next to each user name. Click Next.

ivid	Shared Storag Shared Storage config	e Manager					Device Dr	Name: MyBookWorld Firmware: 01.01.06 rive Status: OK
Tuesday, Ja	anuary 09, 2007 / 11:20am PST							User: MBWEuser
¥	Home	General Setup	File Shar	ing	Drive Manage	ement		WD Site
	Step 4: Security Sett Share Name: PHOTOS Share Type: CIF User Name MBWEuser Everyone (Set Minimum Perm Next >> Back Cancel	nissions)	Full © C	Read Only C	None C C	System Storage Internal d Avai Perce Networl W	h Summary krive(s) Total Space: entage Free: k DAnywhere Access: Speed: IP Address: ut Gateway: Workgroup:	/ 953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1.101 192,168,1.1 192,168,1.1 WORKGROUP

7. **Submit Setting**. Click **Create Share Folder**. The new share name appears on the File Sharing main page.

Rename a Shared Folder

Note: Renaming a shared folder erases the drive mappings. You will need to remap the drive after renaming it.

- 1. Click Rename a Shared Folder.
- 2. In the **Existing Share Name** list, click the shared folder to be renamed.
- 3. In the **New Share Name** field, type in the new name of the shared folder. Click **Rename Shared Folder**.

iiiD	Shared Storage Manager Shared Storage configuration		Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK
Tuesday,			User: MBWEuser
¥	Home General Setup File Sharing Drive N	vlanagement	WD Site
	Rename a Shared folder Enter the new name for the share and press "Rename Shared folder" button" Pick a Share to rename PHOTOS • The new name: Old Photos Rename Shared folder Cancel	System S Storage Internal drive Tot Availabl Percent Network WDA IP, Default C V4	Summary (s) al Space: 953,454,724K le Space: 953,250,066K age Free: 99% Accres: 99% Accres: 100Mto/s Address: 192,168,1,101 Jateway: 192,168,1,11 orkgroup: WORKGROUP

4. The File Sharing main page displays, listing the renamed shared folder. *Note:* Renaming a shared folder erases the drive mappings. You will need to remap the drive after renaming it.

Remove a Shared Folder

This section is intended only for advanced users who require specific My Book World Edition settings. If you are not familiar with this field or are unsure about editing it, cancel the wizard.

1. Click Remove a Shared Folder.

Note: A shared folder cannot be removed if it or any of its files are currently open.

2. In the **Select Shared Folder To Delete** list, click the shared folder to be removed. Click **Remove Shared Folder Now**.

iñid	Shared Storage Manager Shared Storage configuration					Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK	
Tuesday, Jai	nuary 09, 2007 / 11:25am PST					User: MBWEuser	
****	Home Remove a Shared I If you delete a Shared Folde To perform the delete you m Select Shared Folder to dele Do you want to delete this s IMPORTANT: If this share is on an externa on this devices internal disk Enter 'yes' into this box to p Delete Shared Folder	General Setup Folder r it and all of its contents ust type "yes" into the co te OLD PHOTOS hare? Il device plugged into the ALL THE DATA WILL <u>BE</u> erform the removal: <u>yes</u> r Now Cancel	File Sharing will be deleted nfirmation box below devices usb port no data wi REMOVED.	Drive Management	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	WD Site	

CAUTION: This permanently deletes the shared folder and cannot be recovered.

3. Click **OK**. The File Sharing configuration screen no longer displays the shared folder.

Update Security Settings

- 1. Click Update Security Settings.
- 2. Pick a share from the list, then click **Next**.
- 3. Reset share permissions by clicking **Full Access**, **Read Only**, or **None** next to each user name.

iŵD	Shared Storage Manager Shared Storage configuration					Device Name: MyBookWorld Firmware: 01.01.06 Drive Status: OK		
Tuesday, January 09, 2007 / 11:29am PST User: MBWEuser								
¥	Home General Setup	File	Sharing	Drive Management		WD Site		
	Update Security Settings Settings for PUBLIC CIFS sharing User Everyone (Set Minimum Permissions) MBWEuser Set permissions above Update Cancel	Full Access © ©	Read Only C C	None C C	System Summa Storage Internal drive(s) Total Space: Available Space: Percentage Free: Percentage Free: Network WDAnywhere Access: Speed: IP Address: Default Gateway: Workgroup:	953,454,724K 953,250,072K 99% Active 100Mb/s 192,168.1.101 192,168.1.1 WORKGROUP		

4. Click Update.

Drive Management

1. Click **Drive Management**. The Drive Management screen appears, displaying the following options.

ivid	Shared Storage Manager Shared Storage configuration					Device Name: MyBookWorld Firmware: 01.01.09 Drive Status: OK	
Tuesday, Ja	anuary 16, 2007 / 10:17pm PST					User: MBWEuser	
<i>•</i>	Home Drive Management	General Setup	File Sharing	Drive Management	ystem Summa	WD Site	
	Change [Format N Safely Re	Drive Type ew Internal Drive emove USB drive			Storage nternal drive(s) Total Space: Available Space: Percentage Free: NoDAnywhere Active WDAnywhere Speed: IP Address: Default Gateway: Workgroup:	953,454,724K 953,250,072K 99% Active 100Mb/s 192,168,1,101 192,168,1,1 192,168,1,1 workgroup	

Change Drive Type

Use this option to change the drive from the pre-configured, default large single spanned volume for maximum capacity to a secure volume for data protection.

- 1. Click Change drive type.
- 2. Click Secure volume, then Change Drive Type.

in	D	Shared Storage Manager Shared Storage configuration					Device Name: MyBookWorld Firmware: 01.01.09 Drive Status: OK	
Tu	iesday, Ja						User: MBWEuser	
		Home	General Setup	File Sharing	Drive Management		WD Site	
	¢	Drive Management What type of storage would you like? Current drive type: linear				ry		
					Storage			
						Internal drive(s) Total Space:	953,454,724K	
		C Large Single Volume (li	near)			Available Space:	953,250,072K	
		Change Drive Type Cancel				Network	33%	
						WDAnywhere Access:	Active	
						Speed	100Mb/s	
						IP Address:	192.168.1.101	
						Workgroup:	workgroup	

3. Click **Yes**, I'm sure if you want to reformat the device. All data will be lost.

CAUTION: All folders and files in My Book will be deleted when changing the drive type.

Note: Rebuilding the RAID 1 configuration may take up to several hours, but you can begin using the device as soon as the interface is enabled and allows you to start using it (approximately 30 minutes).

Format New Internal Drive

If the Drive Status message in the upper right corner of Shared Storage Manager indicates that one of the drives in the device has failed, follow the instructions in "Replacing a Drive" on page 18. Then, select this option to format the new drive.

- 1. Click Format New Internal Drive.
- 2. The replacement drive is detected by Shared Storage Manager. Click Format New Internal Drive.



3. Once format is complete, device status should indicate "OK." The device status is located in the upper right corner of the screen.

Safely Remove the Device

- 1. Click Safely Remove USB Drive.
- 2. You may now safely disconnect the external USB drive.



10

Appendix B - Regulatory and Warranty

Regulatory Compliance

FCC Class B Information

This device has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. Any changes or modifications not expressly approved by WD could void the user's authority to operate this equipment.

The following booklet, prepared by the Federal Communications Commission, may be helpful: *How to Identify and Resolve Radio/TV Interference Problems*. This booklet is Stock No. 004-000-00345-4 available from the US Government Printing Office, Washington, DC 20402.

CSA Notice

Le prent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B préscrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

This digital apparatus does not exceed the Class B limits for radio noise for digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Underwriters Laboratories Inc.

Approved for US and Canada. CAN/CSA-C22.2 No. 60950-1, UL 60950-1. Information Technology Equipment - Safety - Part 1: General Requirements (File E101559).

This product is intended to be supplied by a listed limited power source, double insulated, or direct plug-in power unit marked "NEC" or "Class 2."

CE Compliance for Europe

Verified to comply with EN55022 for RF Emissions and EN50082-1 for Generic Immunity, as applicable.

Warranty Information

Obtaining Service

WD values your business and always attempts to provide you the very best of service. If this Product requires maintenance, either contact the dealer from whom you originally purchased the Product or visit our product support Web site at *support.wdc.com* for information on how to obtain service or a Return Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided on your return paperwork. Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via *support.wdc.com*. WD shall have no liability for lost data regardless of the cause, recovery of lost data, or data contained in any Product placed in its possession.

Limited Warranty

WD warrants that the Product, in the course of its normal use, will be free from defects in material and workmanship for a period of three (3) years, unless otherwise required by law, and will conform to WD's specification therefor. This limited warranty period shall commence on the purchase date appearing on your purchase receipt. WD shall have no liability for any Product returned if WD determines that the Product was stolen from WD or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures, unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at support.wdc.com), accident or mishandling while in the possession of someone other than WD. Subject to the limitations specified above, your sole and exclusive warranty shall be, during the period of warranty specified above and at WD's option, the repair or replacement of the Product. The foregoing warranty of WD shall extend to repaired or replaced Products for the balance of the applicable period of the original warranty or ninety (90) days from the date of shipment of a repaired or replaced Product, whichever is longer.

The foregoing limited warranty is WD's sole warranty and is applicable only to products sold as new. The remedies provided herein are in lieu of a) any and all other remedies and warranties, whether expressed, implied or statutory, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose, and b) any and all obligations and liabilities of WD for damages including, but not limited to accidental, consequential, or special damages, or any financial loss, lost profits or expenses, or lost data arising out of or in connection with the purchase, use, or performance of the Product, even if WD has been advised of the possibility of such damages. In the United States, some states do not allow exclusion or limitations of incidental or consequential damages, so the limitations above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

GNU General Public License ("GPL")

Firmware incorporated into WD's My Book World Edition[™] Network Hard Drive includes third party copyrighted software licensed under the GPL ("GPL Software"). In accordance with the GPL: 1) the source code for the GPL Software may be obtained at *support.wdc.com/download/gpl*; 2) you may re-use, re-distribute and modify the GPL Software; 3) with respect solely to the GPL Software, no warranty is provided, to the extent permitted by applicable law; and 4) a copy of the GPL is included on the enclosed CD, may be obtained at *www.gnu.org*, and may also be found at *support.wdc.com/download/gpl*.

WD Service and Support

If you need additional information or help during installation or normal use of this product, visit our product support Web site at *support.wdc.com* and choose from these topics:

- Warranty Services Obtain warranty information, warranty status, extended warranty, product replacement, RMA status, and shipping and packaging information.
- **Downloads Library** Download installation software and drivers.
- **Technical Information** Access product specifications, technical tips, and the online forum.
- **Knowledge Base** Explore our expert knowledge base and Frequently Asked Questions.
- Service Partners Find available WD-approved service and support in your region.
- **Contact Support** Contact a support representative by e-mail.
- **Rebates** Check the status of rebate submissions.
- **Localized Support** Display service and support information in various languages.

When contacting WD for support, have your WD product serial number, system hardware, and system software versions available.

support.wdc.com www.westerndigital.com

 800.ASK.4WDC
 North America

 949.672.7199
 Spanish

 +800.6008.6008
 Asia Pacific

 +31.20.4467651
 EMEA

Western Digital 20511 Lake Forest Drive Lake Forest, California 92630 U.S.A.

 $\ensuremath{\mathbb{C}}$ 2007 Western Digital Technologies, Inc. All rights reserved.

2779-701026-A01 Mar 2007

Information furnished by WD is believed to be accurate and reliable; however, no responsibility is assumed by WD for its use nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of WD. WD reserves the right to change specifications at any time without notice.

Western Digital, WD, and the WD logo are registered trademarks; and My Book, and World Edition are trademarks of Western Digital Technologies, Inc. Other marks may be mentioned herein that belong to other companies.

Index

A

Adding a shared folder 36

С

Capacity gauge 5 CE compliance 43 Change current date and time 29 Compliance, regulatory 43 Connections 6 CSA Notice 43

D

Date and time 29 Device connections 6 Drive configuration 4 format 4 replacing 18 Drive management 41 change drive type 41 safely remove USB drive 42

Ε

Europe, CE compliance 43 External drive safe removal 42

F

FAQs 21 FCC Class B information 43 File sharing 34 inviting others to share 16 remote access 13 user management 34 Firmware upgrade 33 Format and configuration 4 Frequently asked questions 21

G

General setup 27 file sharing 34 update date/time settings 29 update device/workgroup names 29 update user name and password 28 upgrade firmware 33 GNU general public license 45 GPL software 45

Н

Handling precautions 3 Hardware setup 6

Κ

Kensington security slot 5 Kit contents 2

L

LED indicators 4 capacity gauge 5 Limited warranty 44

Μ

Macintosh software update 3 My Book World Edition basics 1 connecting a USB external drive 23 connecting the device 6 front and rear view 4 software setup 7

Ν

Network settings obtain a network address automatically 30 obtain a network address manually 31

0

Obtain a network address automatic 30 manual 31 Obtaining service 44 Operating system, updating 3

Ρ

Password update 28 Ports rear 5 Power button 4 Product registration 3

R

RAID settings 41 Rear view ports 5 Recovery button 5 Registration, product 3 Regulatory compliance 43 Remove a shared folder39Rename a shared folder38Replacing a drive18

S

Security settings updating 40 Service packs 3 Service, WD 44, 46 Setup 7 Shared folder adding 36 removing 39 renaming 38 Shared Storage Manager 24 drive management 41 file sharing 34 general setup 27 setup 25 Software WD Anywhere Access 7 WD Anywhere Access settings 33 Software, GPL 45 Support, WD 46 System requirements 2

T

Technical support 3 Troubleshooting 21

U

UL 43 Underwriters Laboratories Inc. 43 Update username and password 28 Update date/time settings 29 Update device/workgroup names 29 Update security settings 40 Update user name and password 28 Updating, operating system 3 Upgrade firmware 33 Upgrade the system firmware 33 USB external drive connections 23 User management change a user password 34 create a new user 35 delete a user 35 Username update 28

W

Warranty 44

Warranty, limited 44 WD service 46 support 46 WD Anywhere Access inviting others to share 16 remote access 13 signing in 12 WD Anywhere Access settings 33 Windows, updating 3