



WI TECH 2.0

How to connect to CJDR Vehicles and FGA Vehicles in converged dealerships

OVERVIEW


This KB Article explains how to connect to Chrysler, Dodge, Jeep, Ram vehicles (Ex: Jeep Renegade – BU) and Fiat, Fiat Professional, Alfa Romeo, Lancia, Abarth vehicles (Ex: Fiat 500X – FB) and perform diagnostics using wiTECH 2.0 System and microPOD Devices in converged dealerships.

Connecting to CJDR vehicles:


After the microPOD is plugged into the vehicle, technician is required to enter DealerCONNECT SID, Password and the Dealer Code on the wiTECH 2.0 Login page and select “DealerCONNECT” from the drop-down option when diagnosing CJDR brand vehicles as shown in the picture below.

The screenshot shows the wiTECH 2.0 login interface. At the top, there are logos for MOPAR and WI TECH. Below the logos are four input fields: a text field for the SID (containing 's45689t'), a password field labeled 'Password', a text field for the Dealer Code (containing '13255' and highlighted with a red box), and a dropdown menu currently set to 'DealerCONNECT'. A red arrow points from a blue callout box labeled 'DealerCONNECT Dealer Code' to the red box around the '13255' in the Dealer Code field. Below the input fields are a 'Remember me' checkbox (checked) and a 'Sign in' button. In the bottom right corner, there is a link for 'Edit Preferences'.

Once logged into wiTECH 2.0 System, the technician will be able to view and diagnose the CJDR vehicles.

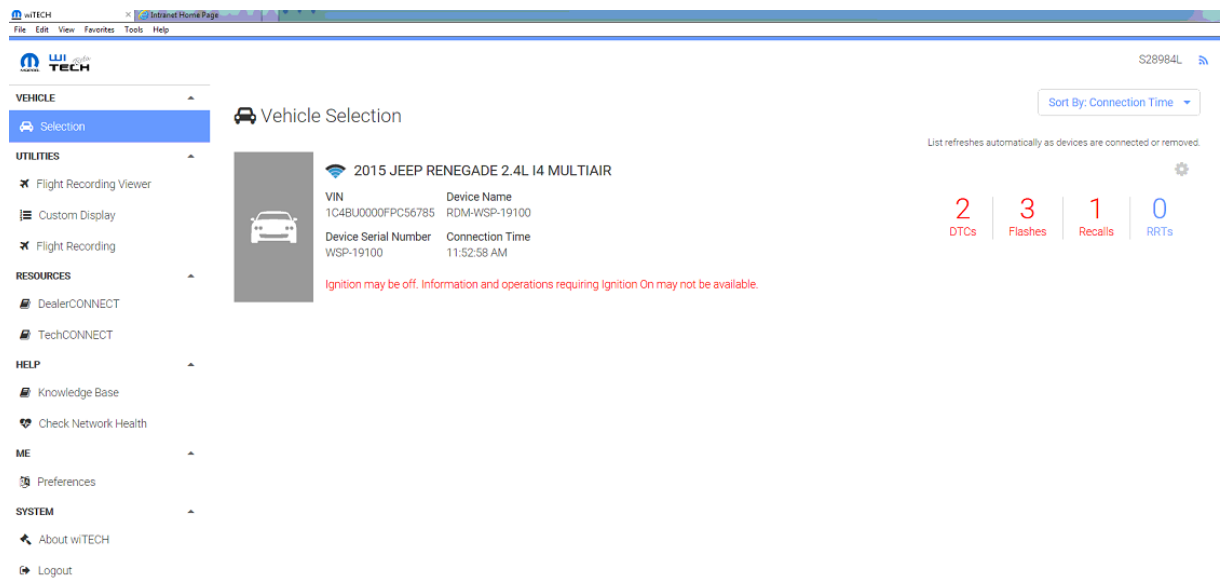

Click on the vehicle selection screen to view the vehicle topology and the available flashes will appear with a green lightning bolt.

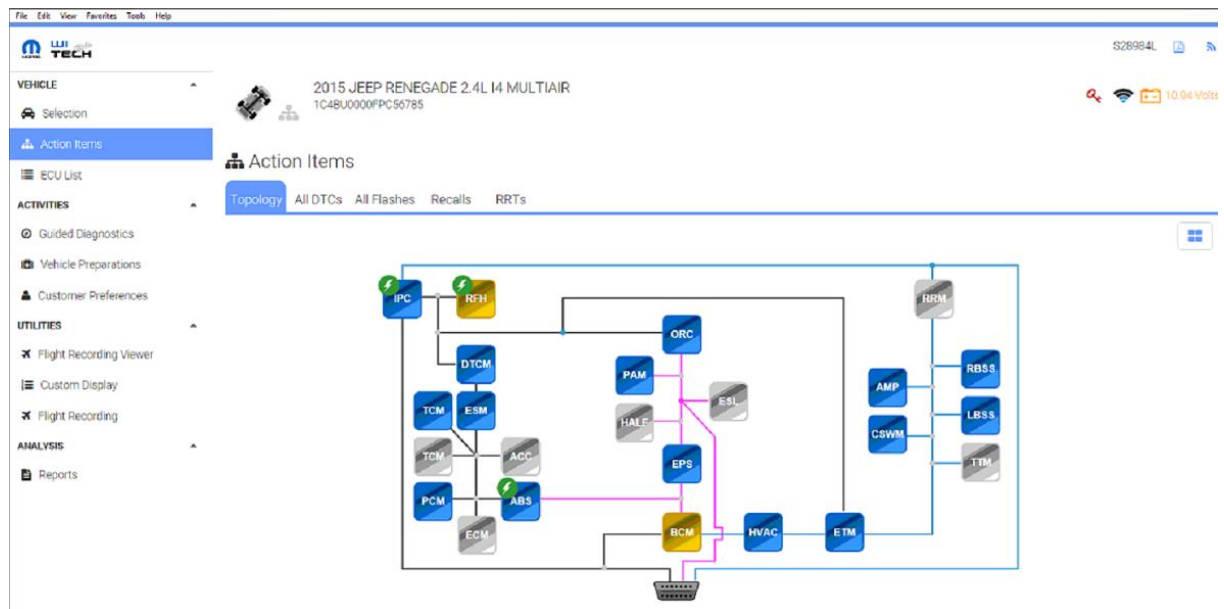

Connecting to FGA vehicles:

The vehicle information, flash updates information and service information for FGA vehicles is provided by Link.E.Entry System. So, after plugging the microPOD to the FGA vehicle, the technician is required to use his/her Link.E.Entry Login ID, Password by selecting "Link.E.Entry" from the drop-down as shown in the picture below:




Note: Please enter your DealerCONNECT Dealer Code (5 digit number Ex: 13256) and DO NOT enter your Fiat dealer code.

The login screen for the wiTECH application. It features the MOPAR and wiTECH logos at the top. Below the logos are several input fields: a user ID field containing 'AJ-0713255.D022', a password field with masked characters, a DealerCONNECT Dealer Code field containing '13255' (highlighted with a red box and a red arrow pointing to it from a blue box labeled 'DealerCONNECT Dealer Code'), and a dropdown menu for 'Link-E-Entry'. There is also a 'Remember me' checkbox and a 'Sign in' button. An 'Edit Preferences' link is located at the bottom right.


Once the correct login credentials have been entered, the vehicle selection screen will show the year, engine size, active DTCs, available flashes and Recalls/RRTs.

The Vehicle Selection screen in the wiTECH application. The left sidebar contains navigation menus for VEHICLE, UTILITIES, RESOURCES, HELP, ME, and SYSTEM. The main area displays a vehicle selection card for a '2015 500X 1.4TB MAIR'. The card shows the VIN 'ZFA45612000456845', Device Name 'RDM-WSP-20001X', Device Serial Number 'WSP-20001X', and Connection Time '11:00:21 AM'. To the right of the card, there are four colored boxes showing counts: 3 DTCs (red), 8 Flashes (orange), 2 Recalls (red), and 0 RRTs (blue). A 'Sort By: Connection Time' dropdown is located at the top right. A note at the bottom right states 'List refreshes automatically as devices are connected or removed.'

Click on the vehicle selection screen to view the vehicle topology and the available flashes will appear with a green lightning bolt.

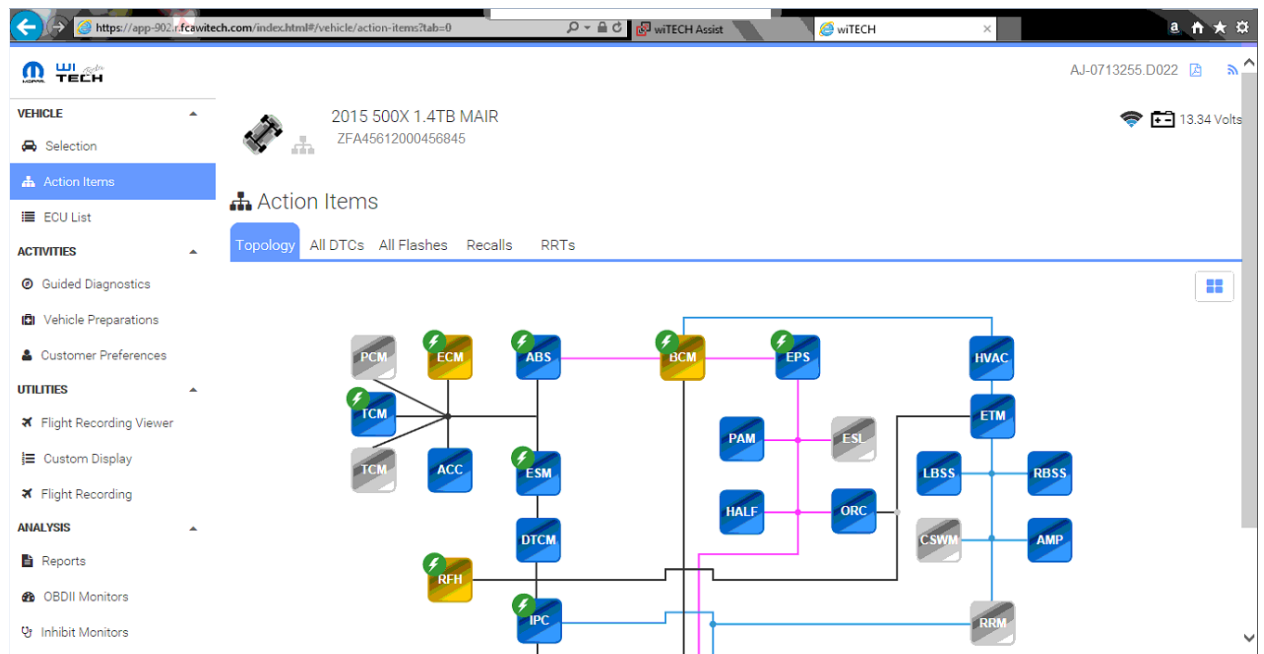

If the user selected incorrect option from the drop-down (Ex: DealerCONNECT instead of Link.E.Entry) in the login page, they will be promoted to logout and login to the correct system as shown in the picture below:

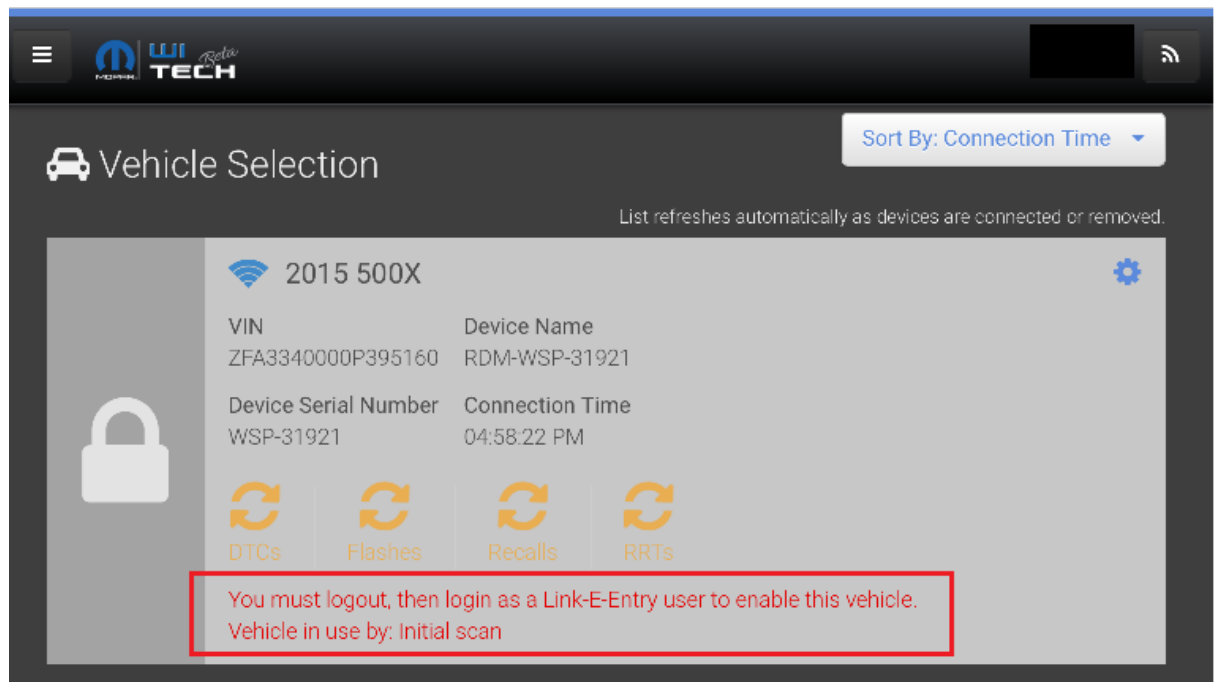

If you need further assistance, please contact the wiTECH Help Desk at 1-888-wiTECH-1 (1-888-948-3241).