

VYATTA - A BROCADE COMPANY

Vyatta System

Basic System

REFERENCE GUIDE

Using the CLI

Working with Configuration

System Management

IPv6 Functionality

User Management

Logging



Vyatta - A Brocade Company
Suite 200
1301 Shoreway Road
Belmont, CA 94002
vyatta.com
650 413 7200
1 888 VYATTA 1 (US and Canada)

COPYRIGHT

Copyright © 2005–2013 Vyatta, a Brocade company. All rights reserved.

Vyatta - A Brocade Company reserves the right to make changes to software, hardware, and documentation without notice. For the most recent version of documentation, visit the Vyatta - A Brocade Company web site at vyatta.com.

PROPRIETARY NOTICES

Vyatta - A Brocade Company is a registered trademark of Brocade, Inc.

Hyper-V is a registered trademark of Microsoft Corporation.

VMware, VMware ESX, and VMware server are trademarks of VMware, Inc.

XenServer, and XenCenter are trademarks of Citrix Systems, Inc.

All other trademarks are the property of their respective owners.

RELEASE DATE: July 2013

DOCUMENT REVISION. 6.6R1 v01

RELEASED WITH: Brocade Vyatta 6.6R1

PART NO. A0-0210-10-0018

Contents

Quick List of Examples	x
Quick List of Commands	xiv
Preface	xviii
Intended Audience	xix
Product Applicability	xix
Organization of This Guide	xix
Document Conventions	xx
Vyatta Publications	xxi
Chapter 1 Using the CLI	1
CLI Features	2
Command Modes	2
The Vyatta CLI and the System Shell	3
Accessing the CLI	4
The Predefined User Account	4
User Privilege Levels	4
“Admin” Users	4
“Operator” Users	5
Command Prompts	6
Using Special Characters in Commands	6
Command Completion	8
Command History	10
Command Editing	10
Filtering Command Output	12
Operational Commands	13
Running Operational Commands	13
Running an Operational Command in Configuration Mode	13
Basic Commands for Using the CLI	14
copy file <from-file> to <to-file>	15
delete file <file>	18
exit (operational)	20
run	21
show file <file>	22

Chapter 2 Working with Configuration	26
Configuration Basics	27
Terminology	27
Location of Configuration Information	28
Configuration Hierarchy	29
Entering and Exiting Configuration Mode	30
Navigating in Configuration Mode	30
Viewing Configuration	31
Viewing Configuration from Operational Mode	32
Changing Configuration Information	33
Adding or Modifying Configuration	33
Deleting Configuration	34
Committing Configuration Changes	35
Discarding Configuration Changes	36
Cloning a Configuration Node	36
Renaming a Configuration Node	36
Adding Comments to a Configuration Node	37
Deleting Comments from a Configuration Node	37
Managing System Configuration	37
Saving the Running Configuration	38
Loading a Saved Configuration	39
Booting from a Saved Configuration File	40
Merging Saved and Running Configurations	40
Archiving Configuration Versions on Commit	40
Rolling Back to a Previous Version	41
Comparing Configuration Versions	41
Cloning Configuration Across System Images	41
Performing File Operations on Configuration Files and Directories	42
Safeguarding Remote Configuration Sessions	42
Commands for Working with Configuration	43
clone system config <dest-image-name>	45
comment	47
commit	50
commit-confirm <minutes>	52
compare	55
configure	57
confirm	58
copy	60
delete	62
discard	64
edit	66

exit (configuration)	68
load	70
merge	73
rename	76
rollback <rev-num>	78
save	79
set	82
show	84
show configuration (operational).....	86
show system commit.	88
show system commit diff <rev-num>.....	89
show system commit file <rev-num>.....	91
system config-management commit-archive location <location>.....	93
system config-management commit-revisions <revisions>.....	95
top.....	97
up	98
Chapter 3 System Management	99
Basic System Configuration	100
Configuring Host Information	100
Host Name	101
Domain	101
IP Address	102
Default Gateway.....	102
Aliases	103
Configuring DNS.....	103
DNS Name Servers	104
Domain Search Order.....	105
Configuring Date and Time	105
Setting the Date	107
Manually Synchronizing with an NTP Server	107
Setting the Time Zone	107
Using NTP for Automatic Synchronization.....	108
Monitoring System Information.....	109
Showing Host Information.....	109
Showing the Date and Time	109
System Management Commands	110
clear console.....	113
clear interfaces counters.....	114
format system-floppy	115
monitor interfaces	117

poweroff	119
reboot	121
reset ip arp address <ipv4>	123
reset ip arp interface <ethx>	124
set date	125
set terminal	127
show arp	128
show date	130
show hardware cpu	131
show hardware dmi	133
show hardware mem	135
show hardware pci	137
show history	139
show host	141
show interfaces	143
show license	146
show ntp	148
show reboot	150
show system boot-messages	151
show system connections	153
show system kernel-messages	155
show system memory	157
show system processes	160
show system routing-daemons	163
show system storage	164
show system uptime	165
show system usb	166
show tech-support	167
show version	170
system console device <device>	174
system console network <device>	176
system console powersave	178
system domain-name <domain>	179
system domain-search domain <domain>	180
system gateway-address <address>	182
system host-name <name>	183
system name-server <address>	185
system ntp server <name>	186
system options reboot-on-panic <value>	188
system static-host-mapping host-name <name>	190
system time-zone <zone>	192

Chapter 4 IPv6	194
IPv6 Overview	195
IPv6 Configuration	195
IPv6 System Commands	196
reset ipv6 neighbors address <ipv6>	197
reset ipv6 neighbors interface <ethx>	198
show ipv6 neighbors	199
system ipv6 blacklist	201
system ipv6 disable	202
system ipv6 disable-forwarding	203
system ipv6 strict-dad	204
Chapter 5 User Management	206
User Management Configuration	207
User Management Overview	207
Login Authentication	207
RADIUS Authentication	208
TACACS+ Authentication	208
Using TACACS+ Alone	209
Using TACACS+ and the Vyatta System Together	209
Mapping Vyatta User IDs To TACACS+ Usernames	209
Specifying authentication level in TACACS+	210
Connection Type Information Sent to TACACS+	210
Troubleshooting TACACS+ Authentication Issues	211
Order of Authentication	211
SSH Access using Shared Public Keys	212
Creating “Login” User Accounts	212
Configuring for a RADIUS Server	213
Configuring for a TACACS+ Server	215
Configuring for SSH Access using Shared Public Keys	216
User Management Commands	218
loadkey	219
show login	221
show system login users	222
show users	224
system login	225
system login banner post-login <banner>	226
system login banner pre-login <banner>	228
system login radius-server <address>	230
system login tacplus-server <address>	232
system login user <user>	234

system login user <user> authentication	236
system login user <user> authentication public-keys	238
system login user <user> full-name <name>	240
system login user <user> group <group>	242
system login user <user> home-directory <dir>	244
system login user <user> level <level>	245
system tacplus-options command-accounting	247
Chapter 6 Logging	249
Logging Configuration	250
Logging Overview	250
Logging Facilities	250
Log Destinations	251
Log File Locations and Archiving	252
Log Severities	252
Logging Configuration Example	253
Enabling and Disabling Logging for Specific Features	254
Logging Commands	255
delete log file	256
show log	257
show log image <image-name>	259
system syslog	260
system syslog console facility <facility> level <level>	264
system syslog file <filename> archive	266
system syslog file <filename> facility <facility> level <level>	268
system syslog global archive	270
system syslog global facility <facility> level <level>	272
system syslog host <hostname> facility <facility> level <level>	274
system syslog user <userid> facility <facility> level <level>	276
Glossary	278

Quick List of Examples

Use this list to help you locate examples you'd like to look at or try.

Example 1-1	Copying configuration files to another system image	16
Example 1-2	Deleting configuration user data	19
Example 1-3	Running an operational command in configuration mode	21
Example 1-4	Displaying /config	23
Example 1-5	Displaying /config/config.boot	23
Example 1-6	Displaying /tmp/test1.pcap	24
Example 1-7	Displaying /config/r1.tar	24
Example 2-1	Copying /config from the running system to another system image	46
Example 2-2	Copying /config/ from the running system to another system image	46
Example 2-3	Adding comments to configuration	48
Example 2-4	Removing a comment from configuration	48
Example 2-5	Committing configuration changes	51
Example 2-6	Showing the commit-confirm command rebooting a system	53
Example 2-7	Displaying the comparison of the working and active configurations	56
Example 2-8	Displaying the comparison of configuration revisions 1 and 2	56
Example 2-9	Entering configuration mode	57
Example 2-10	Showing the confirm command confirming the commit	59
Example 2-11	Cloning configuration subnodes	61
Example 2-12	Deleting configuration	63
Example 2-13	Discarding configuration changes	64
Example 2-14	Navigating in the configuration tree	67
Example 2-15	Loading saved configuration from a file	71
Example 2-16	Merging configuration from a file	75
Example 2-17	Renaming a configuration node	77
Example 2-18	Saving configuration to a file	80
Example 2-19	Saving configuration to a file on a TFTP server	81
Example 2-20	Adding a configuration node	83
Example 2-21	Displaying configuration information	85

Example 2-22	Displaying configuration information in operational mode	86
Example 2-23	Displaying the commit history	88
Example 2-24	Displaying the comparison of two configuration file revisions	89
Example 2-25	Displaying revision 0 of the configuration file	91
Example 2-26	Displaying the comparison of two configuration file revisions	92
Example 2-27	Navigating to the top of the configuration tree	97
Example 2-28	Navigating up a level in the configuration tree	98
Example 3-1	Setting the system's host name	101
Example 3-2	Setting the system's domain	101
Example 3-3	Mapping the system's IP address to its host name	102
Example 3-4	Setting the default gateway	102
Example 3-5	Creating an alias for the system	103
Example 3-6	Specifying DNS name servers	104
Example 3-7	Setting search order for domain completion	105
Example 3-8	Setting the date and time manually	107
Example 3-9	Manually synchronizing the system with an NTP server	107
Example 3-10	Setting the time zone as a Region/Location	108
Example 3-11	Using NTP for automatic synchronization	108
Example 3-12	Showing the system host name	109
Example 3-13	Showing the system date and time	109
Example 3-14	Initializing a floppy diskette for saving configuration files	115
Example 3-15	Displaying the interface bandwidth utilization information	118
Example 3-16	Powering off the system	120
Example 3-17	Powering off the system at a specified date	120
Example 3-18	Cancel a scheduled power off	120
Example 3-19	Rebooting the system	122
Example 3-20	Rebooting the system at a specified date	122
Example 3-21	Cancel a scheduled reboot	122
Example 3-22	Set the date and time directly	126
Example 3-23	Set the date and time using an NTP server	126
Example 3-24	Displaying the ARP cache	129
Example 3-25	Displaying the system date and time	130
Example 3-26	Showing CPU information	131

Example 3-27	Showing DMI information	133
Example 3-28	Showing memory information	135
Example 3-29	Showing PCI bus information	137
Example 3-30	Displaying command history	139
Example 3-31	Looking up network hosts	141
Example 3-32	Showing network host names	142
Example 3-33	Showing the system date and time	142
Example 3-34	Showing operating system information	142
Example 3-35	Displaying interface information	144
Example 3-36	Displaying detailed interface information	144
Example 3-37	Displaying license information	146
Example 3-38	Showing configured NTP servers	149
Example 3-39	Showing information for a specific NTP server	149
Example 3-40	Showing the next scheduled reboot	150
Example 3-41	Showing no scheduled reboot	150
Example 3-42	Displaying startup messages	151
Example 3-43	Displaying active connections	153
Example 3-44	Displaying messages from the kernel	155
Example 3-45	Displaying information about memory usage	157
Example 3-46	Displaying detailed information about memory usage	158
Example 3-47	Displaying information about memory cache usage	158
Example 3-48	Displaying process information	160
Example 3-49	Displaying extensive process information	161
Example 3-50	Displaying hierarchical process information	162
Example 3-51	Displaying a list of active routing daemons	163
Example 3-52	Displaying file system and storage information	164
Example 3-53	Displaying file system and storage information	165
Example 3-54	Displaying USB peripheral information	166
Example 3-55	Displaying consolidated system information	169
Example 3-56	Displaying a summary of version information	171
Example 3-57	Displaying software package version information	171
Example 3-58	Displaying information about added software packages	172
Example 5-1	Creating a “login” user account	213

Example 5-2 Configuring for a RADIUS server.	214
Example 5-3 Configuring for a TACACS+ server	215
Example 5-4 Configuring for SSH access using shared public keys	216
Example 5-5 Displaying credential information about the current user	221
Example 5-6 Displaying information about user accounts	222
Example 5-7 Displaying information about currently logged in users	224
Example 6-1 Configuring a log to capture kernel-related alerts of critical and higher severity	253

Quick List of Commands

Use this list to help you quickly locate commands.

clear console	113
clear interfaces counters	114
clone system config <dest-image-name>	45
comment	47
commit	50
commit-confirm <minutes>	52
compare	55
configure	57
confirm	58
copy file <from-file> to <to-file>	15
copy	60
delete file <file>	18
delete log file	256
delete	62
discard	64
edit	66
exit (configuration)	68
exit (operational)	20
format system-floppy	115
load	70
loadkey	219
merge	73
monitor interfaces	117
poweroff	119
reboot	121
rename	76
reset ip arp address <ipv4>	123
reset ip arp interface <ethx>	124
reset ipv6 neighbors address <ipv6>	197
reset ipv6 neighbors interface <ethx>	198
rollback <rev-num>	78
run	21

save.	79
set date.	125
set terminal	127
set	82
show arp.	128
show configuration (operational)	86
show date.	130
show file <file>.	22
show hardware cpu.	131
show hardware dmi.	133
show hardware mem	135
show hardware pci	137
show history.	139
show host.	141
show interfaces	143
show ipv6 neighbors	199
show license.	146
show log image <image-name>	259
show log	257
show login	221
show ntp.	148
show reboot.	150
show system boot-messages	151
show system commit diff <rev-num>	89
show system commit file <rev-num>.	91
show system commit	88
show system connections.	153
show system kernel-messages	155
show system login users	222
show system memory	157
show system processes	160
show system routing-daemons	163
show system storage.	164
show system uptime	165
show system usb	166
show tech-support	167

show users	224
show version	170
show	84
system config-management commit-archive location <location>	93
system config-management commit-revisions <revisions>	95
system console device <device>	174
system console network <device>	176
system console powersave	178
system domain-name <domain>	179
system domain-search domain <domain>	180
system gateway-address <address>	182
system host-name <name>	183
system ipv6 blacklist	201
system ipv6 disable	202
system ipv6 disable-forwarding	203
system ipv6 strict-dad	204
system login banner post-login <banner>	226
system login banner pre-login <banner>	228
system login radius-server <address>	230
system login tacplus-server <address>	232
system login user <user> authentication public-keys	238
system login user <user> authentication	236
system login user <user> full-name <name>	240
system login user <user> group <group>	242
system login user <user> home-directory <dir>	244
system login user <user> level <level>	245
system login user <user>	234
system login	225
system name-server <address>	185
system ntp server <name>	186
system options reboot-on-panic <value>	188
system static-host-mapping host-name <name>	190
system syslog console facility <facility> level <level>	264
system syslog file <filename> archive	266
system syslog file <filename> facility <facility> level <level>	268
system syslog global archive	270

system syslog global facility <facility> level <level>	272
system syslog host <hostname> facility <facility> level <level>	274
system syslog user <userid> facility <facility> level <level>	276
system syslog	260
system tacplus-options command-accounting	247
system time-zone <zone>	192
top.	97
up	98

Preface

This document describes mechanisms on the Vyatta system for basic system management.

This preface provides information about using this guide. The following topics are presented:

- [Intended Audience](#)
- [Product Applicability](#)
- [Organization of This Guide](#)
- [Document Conventions](#)
- [Vyatta Publications](#)

Intended Audience

This document is intended for experienced system and network administrators. Depending on the functionality to be used, readers should have specific knowledge in the following areas:

- Networking and data communications
- TCP/IP protocols
- General router configuration
- Routing protocols
- Network administration
- Network security
- IP services

Product Applicability

This guide describes software for the following products:

- Brocade Vyatta 5410F vRouter
- Brocade Vyatta 5415F vRouter
- Brocade Vyatta 5410 vRouter
- Brocade Vyatta 5415 vRouter

Organization of This Guide

This guide has the following aid to help you find the information you are looking for:

- [Quick List of Commands](#)

Use this list to help you quickly locate commands.

- [Quick List of Examples](#)

Use this list to help you locate examples you'd like to try or look at.

This guide has the following chapters:

Chapter	Description	Page
---------	-------------	------

Chapter 1: Using the CLI	This chapter provides an overview of the Vyatta command-line interface (CLI), which is the primary user interface to the Vyatta system, and the operational mode of the CLI.	1
Chapter 2: Working with Configuration	This chapter describes configuration management utilities on the Vyatta system.	26
Chapter 3: System Management	This chapter describes Vyatta system features for basic system management tasks, such as setting host information, working with the ARP cache, and setting the system date and time.	99
Chapter 4: IPv6	This chapter describes commands for enabling IPv6 functionality on the system.	194
Chapter 5: User Management	This chapter explains how to set up user accounts and user authentication.	206
Chapter 6: Logging	This chapter describes the Vyatta system logging mechanism.	249
Glossary		278

Document Conventions

This guide uses the following advisory conventions.



WARNING A warning alerts you to situations that may pose a threat to personal safety.



CAUTION A caution alerts you to situations that might cause harm to your system or damage to equipment or that may affect service.

NOTE A note provides information you might need to avoid problems or configuration errors.

This document uses the following typographic conventions.

Monospace	An example, a command-line output, or a representation of a configuration node.
bold Monospace	Your input, that is, something you type at a command line.
bold	A command, keyword, or file name, when mentioned inline. An object in the user interface, such as a tab, button, screen, or pane.
<i>italics</i>	An argument or variable for which you supply a value.
<key>	A key on your keyboard, such as <Enter>. Combinations of keys are joined by plus signs (+), as in <Ctrl>+c.
{key1 key2}	Enumerated requirements for completing a syntax. An example is {start stop}.
[key1 key2]	Enumerated options for completing a syntax. An example is [enable disable].
num1–numN	An inclusive range of numbers. An example is 1–65535, which means 1 through 65535, inclusive.
arg1..argN	A range of enumerated values. An example is eth0..eth3, which means eth0, eth1, eth2, or eth3.
arg[arg...] arg[,arg...]	A value that can optionally represent a list of elements (a space-separated list and a comma-separated list, respectively).

Vyatta Publications

The Vyatta technical library provides full product documentation. To see what documentation is available for your release, see *Guide to Vyatta Documentation*. This guide is posted with every release of Vyatta software and provides a great starting point for finding the information you need.

Additional information is available at www.vyatta.com and www.vyatta.org.

Chapter 1: Using the CLI

This chapter provides an overview of the Vyatta command-line interface (CLI), which is the primary user interface to the Vyatta system, and the operational mode of the CLI.

Note: Configuration using the CLI is discussed in [Chapter 2: Working with Configuration](#).

This chapter presents the following topics:

- [CLI Features](#)
- [Operational Commands](#)
- [Basic Commands for Using the CLI](#)

CLI Features

This section presents the following topics:

- [Command Modes](#)
- [The Vyatta CLI and the System Shell](#)
- [Accessing the CLI](#)
- [The Predefined User Account](#)
- [User Privilege Levels](#)
- [Command Prompts](#)
- [Using Special Characters in Commands](#)
- [Command Completion](#)
- [Command History](#)
- [Command Editing](#)
- [Filtering Command Output](#)
- [Running Operational Commands](#)
- [Running an Operational Command in Configuration Mode](#)


Command Modes

There are two command modes in the Vyatta CLI: operational mode and configuration mode.

Operational mode provides access to operational commands for showing and clearing information and enabling or disabling debugging, as well as commands for configuring terminal settings, loading and saving configuration, and restarting the system. When you log on to the system, the system is in operational mode.

Figure 1-1 shows Vyatta CLI command modes.

Figure 1-1 CLI Command Modes

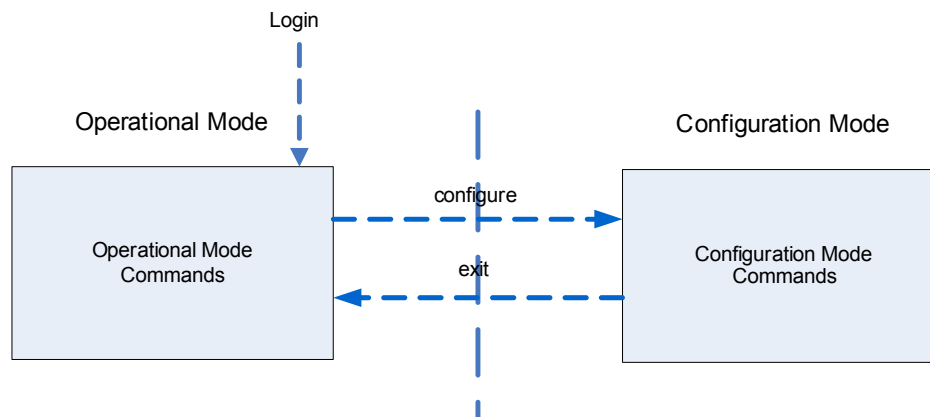

Configuration mode provides access to commands for creating, modifying, deleting, committing and showing configuration information, as well as commands for navigating through the configuration hierarchy.

- To enter configuration mode from operational mode, issue the **configure** command.
- To return to operational mode from configuration mode, issue the **exit** command. If there are uncommitted configuration changes, you must either commit the changes using the **commit** command, or discard the changes using the **discard** command (or **exit discard**), before you can exit to operational mode. If you have not saved the configuration (using the **save** command) you will be warned that configuration changes have not been saved. When the system is restarted, it will load the last saved configuration.

Issuing the **exit** command in operational mode logs you out of the system.

The Vyatta CLI and the System Shell

The CLI of the Vyatta system includes two kinds of commands:

- Vyatta-specific commands for operating and configuring the Vyatta system.
- Commands provided by the operating system shell in which the Vyatta CLI operates.

The commands you can execute depend on your user role and its privileges. However, any command you have the privileges to execute, including operating system commands, can be executed from within the Vyatta CLI.

Accessing the CLI

To access the command-line interface (CLI), you log on to the Vyatta system, either directly through the VGA console, a serial console, or remotely using an SSH or Telnet session. The VGA console also provides nine virtual console sessions. These virtual consoles (tty1-tty9) can be accessed using the key combinations **ALT-F1** (for tty1) through **ALT-F9** (for tty9). tty1 through tty6 will provide a login prompt. tty7 through tty9 are not used.

Regardless of the access method you choose, after the startup messages complete, the login prompt appears, as follows:

```
vyatta login:
```

Log on using the ID and password of a defined user account.

NOTE You can change user accounts using operating system commands, but the changes will not persist across reboots. For persistent changes to user account information, use the Vyatta CLI.

The Predefined User Account

By default, the system has one predefined user account: the user **vyatta**. The default password for the vyatta account is **vyatta**. The **vyatta** user has administrator-level privileges and can execute all Vyatta commands and all operating system commands. Note that, although the user can execute both Vyatta commands and operating system commands, command completion and CLI help show only Vyatta commands (for clarity).

User Privilege Levels

The Vyatta system supports two user roles:

- “Admin” Users
- “Operator” Users

“Admin” Users

Admin users have full access to the Vyatta CLI. Admin users can view, configure, and delete information, and execute all Vyatta operational commands. Admin users can also execute all operating system shell commands and constructs.

The default user **vyatta** is an admin user.

To create an admin user, issue the following set of commands in configuration mode.

```
vyatta@vyatta# set system login user user-name level admin
vyatta@vyatta# set system login user user-name authentication
plaintext-password password
```

```
vyatta@vyatta# commit
```

where *user-name* is the ID of the user account you want to create and *password* is the password you are assigning to the user.

Although operating system shell commands are always available to admin users, they are not shown when these users use command completion to query the CLI for available commands. This is because there are several hundred operating system shell commands and constructs available at any time: showing all available operating system shell commands would make it very difficult to distinguish available Vyatta CLI commands.

Admin users can see available commands by entering **help** at the command prompt.

You can remove the restriction on command completion by setting the **VYATTA_RESTRICTED_MODE** environment variable to **none**:

```
export VYATTA_RESTRICTED_MODE=none
```

This removes command completion restriction for all users, regardless of privilege level.

“Operator” Users

Operator users have read-only access to configuration plus the ability to execute Vyatta operational commands. Operator users can view in operational mode (using **show** commands), configure their terminal settings (using the **set terminal** command), and exit from the Vyatta CLI (using the **exit** command). Operator users cannot enter configuration mode; however, they can display configuration by issuing the **show configuration** command in operational mode.

Basic commands for displaying information (for example, **show configuration** plus the “**pipe**” commands, such as **more**, for managing display output) are available. Commands that use control constructs (such as **if**, **for**, and so on), list operators (such as “;”, “&&”, and so on), and redirection are not available to operator users.

To create an operator user, issue the following command:

```
vyatta@vyatta# set system login user user-name level operator
vyatta@vyatta# set system login user user-name authentication
plaintext-password password
vyatta@vyatta# commit
```

where *user-name* is the ID of the user account you are creating and *password* is the password you are assigning to the user.

Operating system shell commands are not available to operator users and consequently, the list of commands returned using command completion for operator-level users is restricted to Vyatta commands.

You can remove the restriction on command completion by setting the **VYATTA_RESTRICTED_MODE** environment variable to **none**, as follows:

```
export VYATTA_RESTRICTED_MODE=none
```

This removes command completion restriction for all users, regardless of privilege level.

Command Prompts

The command prompt shows you what user account you are logged on under, the hostname of the system you are logged onto, and whether you are in configuration mode or operational mode.

The format of the command prompt in configuration mode as follows:

```
username@hostname#
```

The format of the command prompt in operational mode is as follows:

```
username@hostname:~$
```

where, in both cases, *username* is the user account under which you are logged on and *hostname* is the hostname configured for the system; see [Table 1-1](#) for examples.

Table 1-1 Command prompts

The prompt shows this	And means this
vyatta@R1:~\$	User: vyatta Hostname: R1 Command mode: Operational mode
vyatta@R1#	User: vyatta Hostname: R1 Command mode: Configuration mode

Using Special Characters in Commands

The Vyatta FusionCLI management interface is based on the GNU Bash shell. When entering a command at the command prompt, keep in mind that some characters have special meaning to the shell. For example, one such special character is the space character, which denotes the end of a token in a command, as shown below.

```
prompt> show interfaces ethernet
```

In this example, the space characters separate the command line into three components: “show,” “interfaces,” and “ethernet.”

If you want to enter string that includes a literal character understood by the shell as a special character, you must enclose the character in double quotation marks. For example, if you want to enter a string that includes a space, you must enclose the string in double quotation marks as shown below.

```
vyatta@vyatta# set firewall name TEST description "external inbound"
```

In this example, the space within the string “external inbound” is within quotes and therefore loses its special meaning as a token separator.

Another example of a special character is the “pipe” character (also called the vertical bar, “|”), which separates two commands and means that the output of the left-hand side command should be processed using the right-hand side command, as shown in the following example.

```
vyatta@vyatta# show interfaces | match eth
```

In this example, the pipe character tells the shell to execute the **show interfaces** command and then process the output using the **match eth** command; as a result, only lines that contain the string “eth” will be displayed. As for the space character, if you want a literal vertical bar in a command component, you must enclose it in double quotation marks.

In addition to the space and vertical bar, the following characters have special meaning for the shell:

- ampersand (“&”)
- semi-colon (“;”)
- comma (“,”)
- left parenthesis (“(”)
- right parenthesis (“)”)
- left angle bracket (“<”)
- right angle bracket (“>”)
- backslash (“\”)
- pound sign (“#”)

In general, if you are unsure which characters are special, a good rule of thumb is to enclose anything that is not alphanumeric within double quotation marks.

Note that within a quoted string, you can include a literal quote mark by preceding it with a backslash, as follows:

```
"some \"quotes\" within quotes"
```

Of course, the rules become more complex if you want a literal backslash. As a general rule, try to avoid using quotation marks or backslashes as literal configuration values.

Command Completion

To save keystrokes, the system will accept unambiguous command prefixes in place of the full command. For example, typing **sh configu** in operational mode is equivalent to typing **show configuration**.

You can also have the system auto-complete a command syntax by entering any of the following at the command prompt:

Table 1-2 CLI Help Keystrokes

Type this:	To see this:
<Tab>	Auto-completes a command. <ul style="list-style-type: none"> If the command is unambiguous, the system generates the next token in the syntax. If more than one completion is possible, the system displays the set of possible tokens. Pressing <Tab> a second time displays command help for each possible token. (Note that the space following a command or keyword counts as a token.)
? <Alt>-?	The system displays the set of possible tokens. Pressing "?" a second time displays command help for each possible token. NOTE To enter a literal question mark, first enter <Ctrl>+v, then the question mark.

The following example finds all available commands.

```
vyatta@R1:~$ <Tab>
```

The following example requests command completion for the typed string **sh**. In this example, the command to be completed is unambiguous.

```
vyatta@R1~$ sh<Tab>
vyatta@R1~$ show
```

The following example requests command completion for the typed string `s`. In this case, there is more than one command that could complete the entry and the system lists all valid completions.

```
vyatta@R1~$:s<Tab>
set      show
```

Note that neither the `<Tab>` key nor the `<Alt>+?` key combination provides a help function when double-quoted. When used within double quotes, the `<Tab>` key generates a tab character and the `<Alt>+?` key combination generates a question mark (“?”) character.

In configuration mode, the following symbols are displayed next to nodes in their completion help text to indicate the node type:

Symbol	Node
+	Multi-node
>	Non-leaf node
+>	Tag node (multi non-leaf)

The following example shows the node symbols next to possible completions for the **interfaces ethernet** `<ethx>` command.

```
vyatta@vyatta:~$ configure
[edit]
vyatta@vyatta# set interfaces ethernet eth0<Tab>
Possible completions:
+ address      IP address
  bond-group   Assign interface to bonding group
> bridge-group Add this interface to a bridge group
> content-inspection
                  Content-inspection options
  description  Description
> dhcpv6-options
                  DHCPv6 options
  disable      Disable interface
  disable-flow-control
```

```

                                Disable Ethernet flow control (pause frames)
disable-link-detect
                                Ignore link state changes
duplex                          Duplex mode
> firewall                      Firewall options
hw-id                          Media Access Control (MAC) address
> ip                            IPv4 routing parameters
> ipv6                          IPv6 routing parameters
mac                            Media Access Control (MAC) address
mirror                          Incoming packet mirroring destination
mtu                             Maximum Transmission Unit (MTU)
+> pppoe                        PPPOE unit number
redirect                        Incoming packet redirection destination
smp_affinity                    CPU interrupt affinity mask
speed                           Link speed
> traffic-policy                Traffic-policy for interface
+> vif                          Virtual Local Area Network (VLAN) ID
> vrrp                          Virtual Router Redundancy Protocol (VRRP)

```

Command History

The Vyatta system shell supports a command history, where commands you execute are stored in an internal buffer and can be re-executed or edited.

[Table 1-3](#) shows the most important history keystrokes.

Table 1-3 Command history keystrokes

Type this:	To do this:
<Up-Arrow>	Move to the previous command.
<Control>-p	
<Down-Arrow>	Move to the next command.
<Control>-n	

Command Editing

The Vyatta system shell supports emacs-style command editing.

Table 1-4 shows the most important editing keystrokes.:

Table 1-4 Command-line editing keystrokes

Type this:	To do this:
<Left-Arrow> <Control>-b	Move backward in the command line.
<Right-Arrow> <Control>-f	Move forward in the command line.
<Control>-a	Move to the beginning of the command line.
<Control>-e	Move to the end of the command line.
<Control>-d	Delete the character directly under the cursor.
<Control>-t	Toggle (swap) the character under the cursor with the character immediately preceding it.
<Control>-<Space>	Mark the current cursor position.
<Control>-w	Delete the text between the mark and the current cursor position, copying the deleted text to the cut buffer.
<Control>-k	“Kill” (delete) from the cursor to the end of the line, copying the deleted text into the cut buffer.
<Control>-y	“Yank” (paste) from the cut buffer into the command line, inserting it at the cursor location.

If the information being displayed is too long for your screen, the screen will show the “More” indication where the information breaks.

Table 1-5 shows the keystrokes for controlling the display of information in a “More” screen.

Table 1-5 Display options within a “More” screen

Type this:	To do this:
q Q	Exit “More.”
<Space> f <Ctrl>+f	Scroll down one whole screen.
b <Ctrl>+b	Scroll up one whole screen.

Table 1-5 Display options within a “More” screen

Type this:	To do this:
d <Ctrl>+d	Scroll down one-half screen.
u <Ctrl>+u	Scroll up one-half screen.
<Enter> e <Ctrl>+e <Down Arrow>	Scroll down one line.
y <Ctrl>+y <Up Arrow>	Scroll up one line.
G	Scroll down to the bottom of the output.
g	Scroll up to the top of the output.
h	Display detailed help for “More.”

Filtering Command Output

The Vyatta system can pipe the output of commands into selected operating system shell commands to filter what is displayed on the console. Commands are piped into the filters using the vertical bar pipe operator (“|”).

Table 1-6 shows the pipe commands implemented for the Vyatta system.

Table 1-6 “Pipe” filter commands

Type this:	To do this:
count	Count occurrences.
match <i>pattern</i>	Show only text that matches the specified pattern.
more	Paginate output.
no-match <i>pattern</i>	Show only text that does not match the specified pattern.
no-more	Don't paginate output.

Operational Commands

This section presents the following topics:

- [Running Operational Commands](#)
- [Running an Operational Command in Configuration Mode](#)

Running Operational Commands

Operational commands are executed in operational mode. The operational commands available to you can be displayed by entering **help** at the command prompt in operational mode.

Running an Operational Command in Configuration Mode

You can run an operational command without leaving configuration mode using the **run** command, as in the following example.

```
vyatta@R1# run show system processes summary
20:45:46 up 1 day, 10:16, 3 users, load average: 0.00, 0.00, 0.00
vyatta@R1#
```

Basic Commands for Using the CLI

Many basic commands for using the CLI are related to configuration. These commands have their own chapter: [Chapter 2: Working with Configuration](#).

A great many shell commands are available in the operational mode of the CLI. Use command-line help to see shell commands available to you.

Feature-related commands available in operational mode are documented with the respective feature. The *Guide to Vyatta Documentation* can help you see how these features are organized with the Vyatta library of technical documentation.

This section describes the following commands.

Configuration Commands	
None	
Operational Commands	
copy file <from-file> to <to-file>	Copies files or directories.
delete file <file>	Deletes files or directories.
exit (operational)	Exits the system.
run	Runs an operational command without leaving configuration mode.
show file <file>	Displays information about files.

copy file <from-file> to <to-file>

Copies files or directories.

Syntax

copy file *from-file* to *to-file*

Command Mode

Operational mode.

Parameters

<i>from-file</i>	The source file or directory.
<i>to-file</i>	The destination file or directory.

Default

None.

Usage Guidelines

Use this command to copy a file or directory to a destination.

This command is optimized for configuration files and directories, in that command completion defaults to the **/config** directory of all known system images. For example, **running://config/** indicates the **/config** directory of the currently running system, and **test-image1://config/** indicates the **/config** directory of an image called “test-image1.” If needed, however, any other location within the file system can be specified.

Files or directories can be copied on the local machine. Only files can be copied to and from the remote machine using FTP, SCP, or TFTP.

NOTE Use this command with caution, as its effects are not reversible.

The following table shows how to specify different types of file locations.

Table 1-7 Specifying file locations

Location	Specification
FTP server	<code>ftp://user:passwd@host/file</code> where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the FTP server, and <i>file</i> is the file, including the path. If you do not specify <i>user</i> and <i>passwd</i> , the system prompts you for them.
SCP server	<code>scp://user:passwd@host/file</code> where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the SCP server, and <i>file</i> is the file, including the path. If you do not specify <i>user</i> and <i>passwd</i> , the system prompts you for them.
TFTP server	<code>tftp://host/file</code> where <i>host</i> is the host name or IP address of the TFTP server, and <i>file</i> is the file, including the path relative to the TFTP root directory.
The running (active) configuration	<code>running://path/file</code> where <i>path</i> is the path to the file, and <i>file</i> is the file.
A binary image	<code>image-name://path/file</code> where <i>image-name</i> is the name of a binary image, <i>path</i> is the path to the file, and <i>file</i> is the file.

Examples

Example 1-1 copies the contents of the `/config/x509/` directory on the currently running system to the `/config/x509/` directory of the TEST-IMAGE-1 image.

Example 1-1 Copying configuration files to another system image

```
vyatta@vyatta:~$ copy file running://config/auth/x509/ to
TEST-IMAGE-1://config/auth/x509/
sending incremental file list
created directory /live/image/boot/TEST-IMAGE-1/live-rw/config/x509
./
ca.crt          1265 100%    0.00kB/s    0:00:00 (xfer#1, to-check=5/7)
crl.pem         568 100%  554.69kB/s    0:00:00 (xfer#2, to-check=4/7)
key
```

```
      5626 100%    5.37MB/s    0:00:00 (xfer#3, to-check=3/7)
straylight-r1.crt
      3632 100%    3.46MB/s    0:00:00 (xfer#4, to-check=2/7)
straylight-r1.key
      891 100%   870.12kB/s    0:00:00 (xfer#5, to-check=1/7)
test.key
      401 100%   391.60kB/s    0:00:00 (xfer#6, to-check=0/7)

sent 12808 bytes  received 129 bytes  25874.00 bytes/sec
total size is 12383  speedup is 0.96
vyatta@vyatta:~$
```

delete file <file>

Deletes files or directories.

Syntax

delete file *file*

Command Mode

Operational mode.

Parameters

<i>file</i>	The file or directory to delete, including the path.
-------------	--

Default

None.

Usage Guidelines

Use this command to delete a file or directory.

This command is optimized for configuration files and directories, in that command completion defaults to the **/config** directory of all known system images. For example, **running://config/** indicates the **/config** directory of the currently running system, and **test-image1://config/** indicates the **/config** directory of an image called “test-image1.” If needed, however, any other location within the file system can be specified.

NOTE Use this command with caution as its effects are not reversible.

Examples

[Example 1-2](#) deletes the file `/config/user-data/xxx` on the currently running system.

Example 1-2 Deleting configuration user data

```
vyatta@vyatta:~$ delete file running://config/user-data/xxx
Do you want to erase the running://config/user-data/xxx file? (Y/N): y
File erased
vyatta@vyatta:~$
```

exit (operational)

Exits the system.

Syntax

exit

Command Mode

Operational mode.

Configuration Statement

None.

Parameters

None.

Default

None.

Usage Guidelines

Use this command in operational mode to exit from the system.

run

Runs an operational command without leaving configuration mode.

Syntax

run *command*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>command</i>	The operational command to be executed.
----------------	---

Default

None.

Usage Guidelines

Use this command to run an operational command without leaving configuration mode.

Examples

[Example 1-3](#) executes the **show date** command (an operational command) from configuration mode.

Example 1-3 Running an operational command in configuration mode

```
vyatta@vyatta# run show date
Sun Dec 16 23:34:06 GMT 2007
vyatta@vyatta#
```

show file <file>

Displays information about files.

Syntax

`show file file`

Command Mode

Operational mode.

Parameters

<i>file</i>	The file or directory to display information for.
-------------	---

Default

None.

Usage Guidelines

Use this command to display information about the specified file or directory.

This command is optimized for configuration files and directories, in that command completion defaults to the `/config` directory of all known system images. For example, `running://config/` indicates the `/config` directory of the currently running system, and `test-image1://config/` indicates the `/config` directory of an image called “test-image1.” If needed, however, any other location within the file system can be specified.

Different information will be displayed for various file types as shown in the following table.

Table 1-8 Types of information displayed for various file types

File type	Information displayed
Directory	Directory contents.
Text file	Information about the file as well as file contents.
Packet capture file (*.pcap)	Information about the file as well as file contents in the form of a packet capture from tshark .

Table 1-8 Types of information displayed for various file types

File type	Information displayed
Binary file	Information about the file as well as file contents in the form of a hex dump.

Examples

[Example 1-4](#) shows the contents of the `/config` directory on the currently running system.

Example 1-4 Displaying `/config`

```
vyatta@vyatta:~$ show file running://config
##### DIRECTORY LISTING #####
total 36K
drwxrwsr-x 1 root 4.0K Mar 21 17:21 archive/
drwxrwsr-x 1 root 4.0K Mar 21 07:56 auth/
drwxrwsr-x 1 root 4.0K Mar 21 07:56 scripts/
drwxrwsr-x 1 root 4.0K Mar 21 07:56 support/
drwxr-sr-x 1 root 4.0K Mar 21 07:57 url-filtering/
drwxrwsr-x 1 root 4.0K Mar 21 07:56 user-data/
-rwxrwxr-x 1 root 1.9K Mar 21 17:21 config.boot
-rwxrwxr-x 1 root 4.2K Mar 20 17:14 webgui2_default_config.boot
vyatta@vyatta:~$
```

[Example 1-5](#) shows the partial contents of the `/config/config.boot` file on the currently running system.

Example 1-5 Displaying `/config/config.boot`

```
vyatta@vyatta:~$ show file running://config/config.boot
##### FILE INFO #####
File Name: running://config/config.boot
Text File:
  Permissions: -rwxrwxr-x
  Owner:      root
  Size:       3.1K
  Modified:   Apr 21 18:51
  Description: ASCII C program text

##### FILE DATA #####
firewall {
    all-ping enable
```

```

broadcast-ping disable
contrack-expect-table-size 4096
contrack-hash-size 4096
contrack-table-size 32768
...

```

[Example 1-6](#) shows the partial contents of the `/tmp/test1.pcap` file on the currently running system.

Example 1-6 Displaying `/tmp/test1.pcap`

```

vyatta@vyatta:~$ show file running://tmp/test1.pcap
##### FILE INFO #####
Binary File:
Permissions: -rw-----
Owner:      root
Size:       35K
Modified:   Apr 24 19:41
Description: tcpdump capture file (little-endian) - version 2.4
(Ethernet, capture length 65535)

##### FILE DATA #####
1  0.000000 192.168.56.101 -> 192.168.56.1 SSH Encrypted response packet
len=128
2  0.000155 192.168.56.1 -> 192.168.56.101 TCP 54566 > ssh [ACK] Seq=1
Ack=129 Win=1002 Len=0 TSV=186250939 TSER=21591709
3  0.259966 192.168.56.101 -> 192.168.56.1 SSH Encrypted response packet
len=48
4  0.260216 192.168.56.1 -> 192.168.56.101 TCP 54566 > ssh [ACK] Seq=1
Ack=177 Win=1002 Len=0 TSV=186251199 TSER=21591735
...

```

[Example 1-7](#) shows the partial contents of the `/config/r1.tar` file on the currently running system.

Example 1-7 Displaying `/config/r1.tar`

```

vyatta@vyatta:~$ show file running://config/r1.tar
File Name: running://config/r1.tar
Binary File:
Permissions: -rwxrwxr-x
Owner:       vyatta
Size:        20K
Modified:    Feb 6 23:09
Description: POSIX tar archive (GNU)

```

```
##### FILE DATA #####
00000000 72 31 2f 00 00 00 00 00 00 00 00 00 00 00 00
|r1/.....|
00000010 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
|.....|
*
...

```

Chapter 2: Working with Configuration

This chapter describes configuration management utilities on the Vyatta system.

This chapter presents the following topics:

- [Configuration Basics](#)
- [Changing Configuration Information](#)
- [Managing System Configuration](#)
- [Safeguarding Remote Configuration Sessions](#)
- [Commands for Working with Configuration](#)

Configuration Basics

This section presents the following topics:

- [Terminology](#)
- [Location of Configuration Information](#)
- [Configuration Hierarchy](#)
- [Entering and Exiting Configuration Mode](#)
- [Navigating in Configuration Mode](#)
- [Viewing Configuration](#)
- [Viewing Configuration from Operational Mode](#)


Terminology

Several versions of system configuration information exist on the system at a given time:

- **Active or “running” configuration.** This is the configuration that is actually loaded and being used by the system.
- **Working configuration.** When you enter configuration mode and make configuration changes, changes remain in working configuration until you commit the changes, at which time the configuration becomes active or running.
- **Saved or “boot” configuration.** If you save configuration (using the `save` command), it is saved to the file `config.boot` in the `/config` directory of the local system. When you reboot, the system reads and loads the configuration from `config.boot`.

Figure 2-1 shows configuration states possible in the Vyatta CLI.

Figure 2-1 CLI configuration states

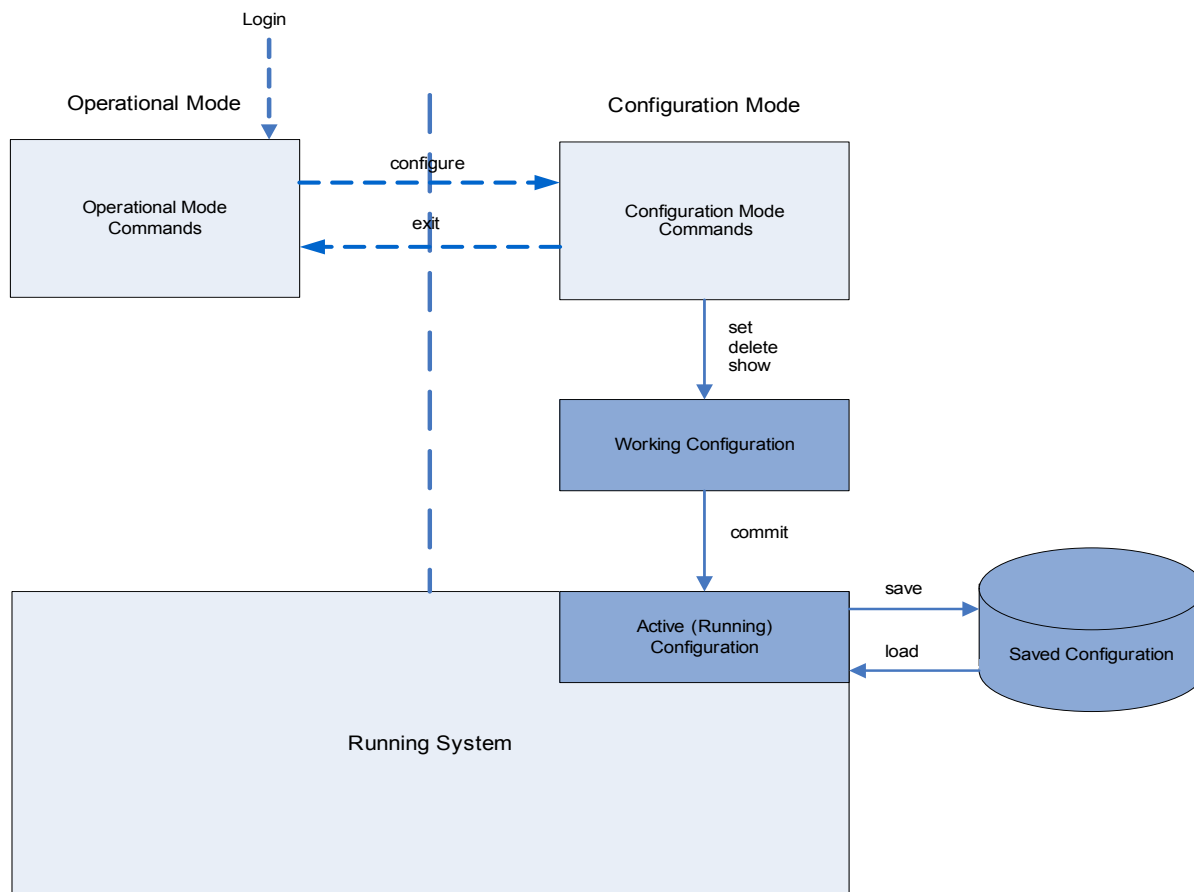

Location of Configuration Information

Boot configuration is stored in **config.boot** in the **/config** directory. In addition to the **config.boot** file, the **/config** directory has a number of subdirectories, each with a specific function, as follows:

- **archive**. This directory stores archived versions of configuration.
- **auth**. This directory stores security certificates referenced in the configuration tree; for example, OpenVPN certificates, IPsec certificates, and RSA/IPsec keys. You can add additional structure to this directory—for example, to store X.509 certificates, you can add an **/auth/x509** directory. To ensure smooth upgrades, and to preserve this kind of information across upgrades, ensure that any certificate file you reference within a configuration node is stored here.

- **scripts.** This directory stores scripts referenced from within the configuration nodes; for example, VRRP transition scripts, the WAN load-balancing hook, and so on. To ensure smooth upgrades, and to preserve this kind of information across upgrades, ensure that any script file you reference within a configuration node is stored here.
- **support.** This directory stores system information generated by the **show tech-support save** command.
- **url-filtering.** This directory stores the URL-filtering database and files on which web proxy and URL filtering depend.
- **user-data.** This directory stores user-generated scripts and user data. To ensure smooth upgrades, ensure that any user data that needs to be preserved across upgrades is stored here.

You can freely use the **user-data** subdirectory to store any of your own information you want to preserve across system upgrades. The other subdirectories, including **auth** and **scripts**, contain information on which system operation relies, and you should only make changes to them with great care.

Configuration Hierarchy

Vyatta system configuration is organized as a hierarchy of configuration statements, with a hierarchical tree of *nodes* similar to the directory structure on a UNIX file system. There are three kinds of statements:

- Configuration nodes. These can be either:
 - Single nodes (just one instance can be created; for example, the **rip protocol** node)
 - Multi-nodes (more than one instance can be created; for example, **address** nodes)
- Attribute statements. These set the values or characteristics for parameters within a node.

From the system's point of view, a configuration node is different from a simple configuration attribute statement. A configuration *attribute statement* takes the form *attribute value*, as in the following example.

```
protocol-version v2
```

A configuration *node* always has an enclosing pair of braces, which may be empty, as in the following example.

```
service {  
    https {}  
}
```

or non-empty, as in the following example.

```
ssh {  
    allow-root  
}
```

Entering and Exiting Configuration Mode

To enter configuration mode, use the **configure** command in operational mode.

```
Entering configuration mode  
  
vyatta@vyatta:~$ configure  
vyatta@vyatta#
```

Once in configuration mode, the command prompt changes from this:

```
user@host:~$
```

to this:

```
user@host#
```

To exit configuration mode, use the **exit** command from the top level of configuration.

If you have changed configuration, you must either **commit** changes or discard them using the **exit discard** command.

Navigating in Configuration Mode

You can tell where you are in the configuration tree by the **[edit]** prompt, which is context-sensitive.

At the top of the configuration tree, the **[edit]** prompt displays like this:

```
[edit]
```

When you are in another location, the edit prompt displays your location by showing the node hierarchy in order, like this:

```
[edit protocols bgp 65537]
```

Table 2-1 shows the commands for navigating in configuration mode.

Table 2-1 Commands for navigating in configuration mode

Command	Result
<code>edit config-node</code>	Navigates to the specified configuration node for editing. The node must already be created the configuration committed.
<code>exit</code>	Jumps to the top of the configuration tree. If you are already at the top of the configuration tree, exit from configuration mode and return to operational mode.
<code>top</code>	Jumps to the top of the configuration tree.
<code>up</code>	Moves up one node in the configuration tree.

Using the **edit** command lets you navigate to the part of the hierarchy that you are interested in and execute commands relative to your location. This saves typing if you need to work on a particular part of the configuration hierarchy.

The following example navigates to the configuration node for the Ethernet interface eth2. Once you have navigated to the node, you can show configuration directly without specifying the full path.

```
vyatta@R1# edit interfaces ethernet eth2
[edit interfaces ethernet eth2]
vyatta@R1# show
hw-id 00:13:46:e6:f6:87
[edit interfaces ethernet eth2]
vyatta@R1#
```

Viewing Configuration

Use the **show** command in configuration mode to display configuration. You can restrict the display to a particular node by specifying the path to the node.

The following example shows configuration for all configured interfaces.

```
vyatta@R1# show interfaces
  ethernet eth0 {
    address 10.1.0.62/24
    hw-id 00:40:63:e2:e4:00
  }
  ethernet eth1 {
    address 172.16.234.23/25
    hw-id 00:40:63:e2:e3:dd
    vrrp {
      virtual-address 172.16.99.99
      vrrp-group 20
    }
  }
  loopback lo {
  }
}
```

The following example shows configuration only for the Ethernet interface eth0.

```
vyatta@R1# show interfaces ethernet eth0
  address 10.1.0.62/24
  hw-id 00:40:63:e2:e4:00
```

When the display is too large for one screen, it stops with one screen displayed. In this case:

- Press <Enter> to display the next line.
- Press <space> to display the next screen.
- Press <q> to interrupt the display and return to the command prompt.

Viewing Configuration from Operational Mode

You can display configuration information without leaving operational mode using the **show configuration** command, as in the following example.

```
vyatta@R1:~$ show configuration
interfaces {
  ethernet eth0 {
```

```
        address 192.168.1.77/24
        hw-id 00:0c:29:68:b3:9f
    }
    ethernet eth1 {
        hw-id 00:0c:29:68:b3:a9
    }
    loopback lo {
    }
}
service {
    ssh {
    }
}
system {
    gateway-address 192.168.1.254
    host-name R1
    login {
        user vyatta {
            authentication {
                encrypted-password *****
            }
        }
    }
}
```

Changing Configuration Information

This section presents the following topics:

- [Adding or Modifying Configuration](#)
- [Deleting Configuration](#)
- [Committing Configuration Changes](#)
- [Discarding Configuration Changes](#)
- [Cloning a Configuration Node](#)
- [Renaming a Configuration Node](#)
- [Adding Comments to a Configuration Node](#)
- [Deleting Comments from a Configuration Node](#)

Adding or Modifying Configuration

Add new configuration by creating a configuration node, using the **set** command in configuration mode. Modify existing configuration using the **set** command in configuration mode, as in the following example.

```
vyatta@R1# set interfaces ethernet eth2 address 192.168.1.100/24
vyatta@R1#
```

Then use the **show** command to see the change.

```
vyatta@R1# show interfaces ethernet eth2
+address 192.168.1.100/24
  hw-id 00:13:46:e6:f6:87
vyatta@R1#
```

Note the “+” in front of the new statement. This shows that this statement has been added to the configuration but the change is not yet committed. The change does not take effect until configuration is committed using the **commit** command.

Another option is to use the **compare** command to see the change.

```
vyatta@R1# compare
[edit interfaces ethernet eth2]
+address 192.168.1.100/24
vyatta@R1#
```

You can modify configuration from the root of the configuration tree or use the **edit** command to navigate to the part of the tree where you want to change or add.

The configuration tree is nearly empty when you first start up, except for a few automatically configured nodes. You must create a node for any functionality you want to configure on the system. When a node is created, any default values that exist for its attributes are applied to the node.

Deleting Configuration

Use the **delete** command to delete a configuration statement or a complete configuration node, as in the following example.

```
vyatta@R1# delete interfaces ethernet eth2 address 192.168.1.100/24
```

Then use the **show** command to see the change.

```
vyatta@R1# show interfaces ethernet eth2
-address 192.168.1.100/24
hw-id 00:13:46:e6:f6:87
vyatta@R1#
```

Note the “-” in front of the deleted statement. This shows that this statement has been deleted from the configuration but the change is not yet committed. The change does not take effect until configuration is committed using the **commit** command.

Another option is to use the **compare** command to see the change.

```
vyatta@R1# compare
[edit interfaces ethernet eth2]
-address 192.168.1.100/24
vyatta@R1#
```

Some configuration nodes are mandatory; these cannot be deleted. Some configuration nodes are mandatory, but have default values; if you delete one of these nodes, the default value is restored.

Committing Configuration Changes

In the Vyatta system, configuration changes do not take effect until you commit them using the **commit** command.

```
vyatta@R1# commit
```

Lines with uncommitted changes in them are flagged as follows:

- “>” to indicate the line has been modified
- “+” to indicate the line has been added
- “-” to indicate the line has been deleted

Once you commit the changes, the flag disappears, as in the following example.

```
vyatta@R1# show interfaces ethernet eth2
```

```
-address 192.168.1.100/24
hw-id 00:13:46:e6:f6:87
vyatta@R1# commit
vyatta@R1# show interfaces ethernet eth2
hw-id 00:13:46:e6:f6:87
vyatta@R1#
```

Discarding Configuration Changes

You cannot exit from configuration mode with uncommitted configuration changes; you must either commit the changes or discard them. If you don't want to commit the changes, you can discard them using the **exit discard** command.

```
vyatta@R1# exit
Cannot exit: configuration modified.
Use 'exit discard' to discard the changes and exit.
vyatta@R1# exit discard
vyatta@R1:~$
```

Cloning a Configuration Node

To save time entering information, you can copy, or clone, a configuration multi-node. Configuration multi-nodes (that is, nodes that allow for multiple instances) are distinguished from one another by their identifiers. For example, firewall and NAT rules have numbers; firewall rule sets have names, IPsec VPN proposals have names, and system users have user IDs.

To clone a configuration node, navigate to the point in the configuration hierarchy just above the node that you want to copy. Then use the **copy** command to change the identifier. An example is provided on [page 61](#).

Renaming a Configuration Node

One thing you can't do with the **set** command is change the identifier of a node for which there can be multiple instances (a "multi-node"), such as a DNS server or an IP address for an interface. However, if a multi-node has an incorrect identifier, you can change the identifier using the **rename** command.

To rename a configuration node, navigate to the point in the configuration hierarchy just above the node that you want to rename. Then use the **rename** command to change the identifier. An example is provided on [page 77](#).

Adding Comments to a Configuration Node

In complicated configurations, it can be helpful to add comments to help you remember or help another person understand what a particular configuration does. The Vyatta system allows you to annotate your configuration using the **comment** command.

To annotate configuration, specify the configuration node and the text to be added as a comment, as in the following example.

```
vyatta@vyatta# comment interfaces ethernet eth2 "Connection to DMZ"

vyatta@vyatta# show interfaces ethernet eth2
/* Connection to DMZ */
eth2 {
    address 192.168.22.22/24
    hw-id 3a:9b:98:c3:46:8c
    mtu 1500
}
```

Deleting Comments from a Configuration Node

To remove a comment using the **comment** command, specify the configuration node and an empty string, as in the following example.

```
vyatta@vyatta# comment interfaces ethernet eth2 ""

vyatta@vyatta# show interfaces ethernet eth2
eth2 {
    address 192.168.22.22/24
    hw-id 3a:9b:98:c3:46:8c
    mtu 1500
}
```

Managing System Configuration

This section presents the following topics:

- [Saving the Running Configuration](#)

- [Loading a Saved Configuration](#)
- [Booting from a Saved Configuration File](#)
- [Merging Saved and Running Configurations](#)
- [Archiving Configuration Versions on Commit](#)
- [Comparing Configuration Versions](#)
- [Rolling Back to a Previous Version](#)
- [Cloning Configuration Across System Images](#)
- [Performing File Operations on Configuration Files and Directories](#)

Saving the Running Configuration

Save the running configuration using the **save** command in configuration mode. By default, configuration is saved to the file **config.boot** in the standard configuration directory.

- For hard disk installs, the configuration directory is **/config**.
- For installations running off a LiveCD, the configuration directory is **/media/floppy/config**.

```
vyatta@R1# save
Saving configuration to '/config/config.boot'...
Done
vyatta@R1#
```

You can save configuration to a different location by specifying a different file name.

```
vyatta#R1 save testconfig
Saving configuration to '/config/testconfig'...
Done
vyatta@R1#
```

You can also save a configuration file to a location path other than the standard configuration directory by specifying a different path. You can save to a hard drive, compact Flash, or USB device.

Note that the **save** command writes only committed changes. If you try to save uncommitted changes the system warns you that it is saving only the committed changes.

Table 2-2 shows the syntax for file specifications you can use in file paths when you save files in configuration mode.

Table 2-2 Specifying locations for the configuration file

Location	Specification
An absolute path	Use standard UNIX file specification.
A relative path	Specify the path name relative to the location configured for the <code>config-directory</code> parameter of the <code>rtrmgr</code> configuration node.
TFTP server	Use the following syntax for <i>file-name</i> : <code>tftp://ip-address/config-file</code> where <i>ip-address</i> is the IP address of the TFTP server, and <i>config-file</i> is the configuration file, including the path relative to the TFTP root directory.
FTP server	Use the following syntax for <i>file-name</i> : <code>ftp://ip-address/config-file</code> where <i>ip-address</i> is the IP address of the FTP server, and <i>config-file</i> is the configuration file, including the path. If you use FTP, you will be prompted for a user name and password.
HTTP server	Use the following syntax for <i>file-name</i> : <code>http://ip-address/config-file</code> where <i>ip-address</i> is the IP address of the HTTP server, and <i>config-file</i> is the configuration file, including the path.

If you are running the system from LiveCD, configuration can be saved only to a floppy disk. If you do not save your running configuration to a floppy disk, any changes you have made will be lost after reboot.

Before you can save configuration to a floppy disk, you must initialize the floppy disk using the **format system-floppy** command in operational mode.

Loading a Saved Configuration

To load a previously saved configuration, use the **load** command in configuration mode. By default, the system reads the file from the standard configuration directory.

- For hard disk installs, the configuration directory is **/config**.
- For installations running off a LiveCD, the configuration directory is **/media/floppy/config**.

```
vyatta@R1# load testconfig
```

```
Loading config file /config/testconfig...

Load complete. Use 'commit' to make changes active.
[edit]
vyatta@R1#
```

A loaded configuration needs to then be **committed** to become the active configuration.

Booting from a Saved Configuration File

If you want the file to be automatically read the next time the system starts, you must save it as **config.boot** in the **/config** directory. By default:

- For hard disk installs, the configuration directory is **/config**.
- For installations running off of a LiveCD, the configuration directory is **/media/floppy/config**.

Merging Saved and Running Configurations

You can merge a saved configuration with the active (running) configuration using the **merge** command. An example is provided in [Example 2-16](#).

The process of merging adds new configuration entries and applies any modifications to existing active entries to produce a new working configuration. This merged configuration must be committed before it becomes the active configuration.

Configuration can be loaded from a hard disk (including a Flash disk or USB device), a TFTP server, an FTP server, an SCP server, or an HTTP server. Note that you cannot load an empty configuration file; the configuration file must contain at least one configuration node.

Archiving Configuration Versions on Commit

The system automatically archives the configuration whenever you commit a configuration change. The new, committed configuration version is saved to **config.boot** in **/config**. The old **config.boot** file is saved to the **/config/archive** directory under the name **config.boot.timestamp**, where *timestamp* is the time the file was saved in the format **YYYY-MM-DD-hhmmss**.

By default, the system maintains 20 versions of configuration in the archive. You can change the number of versions maintained in the archive using the **system config-management commit-revisions** command.

You can also direct the system to save configuration versions to a remote location whenever configuration is committed, using the **system config-management commit-archive** command. FTP, SCP, and TFTP destinations are supported.

Rolling Back to a Previous Version

You can roll back system configuration to any archived version using the **rollback** command. To see the list of configuration file revisions available, use the **show system commit** operational mode command.

Comparing Configuration Versions

You can compare two versions of configuration using the **show system commit** and **compare** commands. [Table 2-3](#) summarizes options for comparing configuration versions.

Table 2-3 Commands for comparing configuration versions

Use This Command	In Order to:
Configuration Commands	
<code>compare</code>	See the difference between the working and active configuration.
<code>compare <i>n</i></code>	See the difference between the working configuration and revision <i>n</i> .
<code>compare <i>n m</i></code>	See the difference between revision <i>n</i> and revision <i>m</i> .
Operational Commands	
<code>show system commit</code>	See the summary of commits.
<code>show system commit file <i>n</i></code>	See the full configuration at revision <i>n</i> .
<code>show system commit file <i>n</i> compare <i>m</i></code>	See the difference between revision <i>n</i> and revision <i>m</i> .
<code>show system commit diff <i>n</i></code>	See what changed in a given commit (between revision <i>n</i> and revision <i>n</i> + 1). This command is equivalent to the command show system file <i>n</i> compare <i>n</i>+1 .

Cloning Configuration Across System Images

You can copy the `/config` directory from one image to another using the **clone system config** command.

This command copies the **/config** directory from the running configuration (or another specified configuration) to the **/config** directory of another specified image. You should use this command with caution, as it overwrites the entire **/config** directory of the destination image and its effects are not reversible.

Performing File Operations on Configuration Files and Directories

The Vyatta system supports several general file operation commands that are optimized for working with image and configuration files. They are the **show file**, **copy file**, and **delete file** commands. These commands are documented in [Chapter 1: Using the CLI](#).

These commands are optimized for configuration files and directories, because command completion defaults to the **/config** directory of all known system images. For example, **running://config/** indicates the **/config** directory of the currently running system, and **test-image1://config/** indicates the **/config** directory of an image called “test-image1.” If needed, however, any other location within the file system can be specified.

Safeguarding Remote Configuration Sessions

One of the risks in configuration sessions over a remote connection is that a configuration mistake will be made that causes permanent loss of remote access to the device. An example is a mistake in configuring the IP address of the management port. To safeguard against critical configuration mistakes, you can use the **commit-confirm** command to set the Vyatta system to require you to confirm configuration changes.

After entering the sensitive configuration, but before committing it, enter the **commit-confirm** command, specifying the allowed confirmation interval. If the commit goes without incident, enter the **confirm** command to confirm configuration. If confirmation within the required interval does not occur—for example, because it is impossible due to the session dropping—the remote system reboots to the last known good configuration.

Commands for Working with Configuration

This section presents the following commands.

Configuration Commands	
Configuration Basics	
edit	Navigates to a subnode in the configuration tree for editing.
exit (configuration)	Navigates up one level of use.
show	Displays configuration information in configuration mode.
top	Moves to the top level of the configuration hierarchy.
up	Navigates up one level in the configuration tree.
Changing Configuration Information	
comment	Adds a comment as an annotation to a configuration node.
commit	Applies any uncommitted configuration changes.
copy	Allows you to copy, or clone, a configuration node.
delete	Deletes a configuration node.
discard	Discards any uncommitted configuration changes.
rename	Allows you to change the identifier of a named configuration node.
set	Creates a new configuration node, or modifies a value in an existing configuration node.
Managing System Configuration	
clone system config <dest-image-name>	Clones the configuration directory of one image to another image.
compare	Allows you to compare two sets of configuration information.
load	Loads a saved configuration.
merge	Merges a saved configuration with the active (running) configuration.
rollback <rev-num>	Allows you to roll back configuration to a specific revision.
save	Saves the running configuration to a file.

<code>system config-management commit-archive location <location></code>	Enables archiving of configuration to the specified location every time a change is committed.
<code>system config-management commit-revisions <revisions></code>	Specifies the number of configuration revisions to store locally.
Safeguarding Remote Configuration Sessions	
<code>commit-confirm <minutes></code>	Reboots to the last known good configuration unless confirmation is supplied for the commit.
<code>confirm</code>	Allows you to confirm to the system that a commit was successful.
Operational Commands	
<code>configure</code>	Enters configuration mode.
<code>show configuration (operational)</code>	Displays system configuration from operational mode.
<code>show system commit</code>	Displays a summary of configuration file revisions.
<code>show system commit diff <rev-num></code>	Compares adjacent configuration file revisions.
<code>show system commit file <rev-num></code>	Displays a specific configuration file revision.

The following commands are optimized for working with files across images.

Related Commands Documented Elsewhere	
<code>copy file <from-file> to <to-file></code> <code>delete file <file></code> <code>show file <file></code>	These commands allow you to perform general file management tasks, but use image-relative completion to make it easy to work with files in different images.
<code>show log image <image-name></code>	This command allows you to view log files across multiple images.

clone system config <dest-image-name>

Clones the configuration directory of one image to another image.

Syntax

```
clone system config dest-image-name [from source-image-name]
```

Command Mode

Operational mode.

Parameters

<i>dest-image-name</i>	The name of the image that the configuration directory will be copied to.
<i>source-image-name</i>	Optional. The name of the image that the configuration directory will be copied from.

Default

The configuration directory is copied from the running system.

Usage Guidelines

Use this command to copy the **/config** directory from one image to another. By default, the source image is the currently running image.

This command is equivalent to the command **copy file running://config/ to *dest-image-name*://config/**

NOTE Use this command with caution as it overwrites the entire **/config** directory of the destination image and its effects are not reversible.

Command completion displays all valid system images. It is not possible to clone to the running image or the “disk-install” image.

Examples

Example 2-1 copies the contents of the **/config** directory of the currently running system to the **/config** directory of the TEST-IMAGE-1 image.

Example 2-1 Copying /config from the running system to another system image

```
vyatta@vyatta:~$ clone system config TEST-IMAGE-1
WARNING: This is a destructive copy of the /config directories
This will erase all data in the TEST-IMAGE-1://config directory
This data will be replaced with the data from running://
Do you wish to continue? (Y/N): y
config/
config/.vyatta_config
...
```

[Example 2-2](#) copies the contents of the /config directory of the TEST-IMAGE-2 system to the /config directory of the TEST-IMAGE-1 image.

Example 2-2 Copying /config/ from the running system to another system image

```
vyatta@vyatta:~$ clone system config TEST-IMAGE-1 from TEST-IMAGE-2
WARNING: This is a destructive copy of the /config directories
This will erase all data in the TEST-IMAGE-1://config directory
This data will be replaced with the data from TEST-IMAGE-2
Do you wish to continue? (Y/N): y
sending incremental file list
config/
config/.vyatta_config
...
```

comment

Adds a comment as an annotation to a configuration node.

Syntax

comment *config-node comment-text*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>config-node</i>	The configuration node to be commented, including the full path through the configuration hierarchy to the node, separated by spaces.
<i>comment-text</i>	The text to be added as a comment to the configuration. A null string, represented by two double quotes (“”), is used to delete an existing comment.

Default

None.

Usage Guidelines

Use this command to add a comment to the configuration or to remove an existing comment.

Comments are placed directly above the node being commented and are enclosed with “/” and “*/” as opening and closing delimiters, respectively.

To remove an existing comment, specify an empty string enclosed in double quote marks (“”) as the comment text.

Examples

[Example 2-3](#) adds the comment “Connection to DMZ” to the configuration for the eth2 Ethernet interface.

Example 2-3 Adding comments to configuration

```
vyatta@vyatta# comment interfaces ethernet eth2 "Connection to DMZ"

vyatta@vyatta# show interfaces ethernet
  eth0 {
    address 192.168.1.82/24
    hw-id 2a:91:0b:00:f6:9e
  }
  eth1 {
    duplex auto
    hw-id b6:cc:6a:95:22:b2
  }
/* Connection to DMZ */
  eth2 {
    address 192.168.22.22/24
    hw-id 3a:9b:98:c3:46:8c
    mtu 1500
  }
```

[Example 2-4](#) removes a comment from a configuration.

Example 2-4 Removing a comment from configuration

```
vyatta@vyatta# show interfaces ethernet
  eth0 {
    address 192.168.1.82/24
    hw-id 2a:91:0b:00:f6:9e
  }
  eth1 {
    duplex auto
    hw-id b6:cc:6a:95:22:b2
  }
/* Connection to DMZ */
  eth2 {
    address 192.168.22.22/24
    hw-id 3a:9b:98:c3:46:8c
    mtu 1500
  }
vyatta@vyatta# comment interfaces ethernet eth2 ""
```

```
vyatta@vyatta# show interfaces ethernet
  eth0 {
    address 192.168.1.82/24
    hw-id 2a:91:0b:00:f6:9e
  }
  eth1 {
    duplex auto
    hw-id b6:cc:6a:95:22:b2
  }
  eth2 {
    address 192.168.22.22/24
    hw-id 3a:9b:98:c3:46:8c
    mtu 1500
  }
```

commit

Applies any uncommitted configuration changes.

Syntax

commit

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to apply changes to configuration.

When you add configuration to the system, modify existing configuration, or delete configuration from the system, the changes you make must be committed before they take effect. To do this, you issue the **commit** statement.

If you try to exit or quit from configuration mode while there are still uncommitted configuration changes, the system will give you a warning. You will not be able to exit from configuration mode until you either commit the changes by issuing the **commit** statement, or you discard the changes using the **exit discard** statement (see [page 68](#)).

Until a configuration change is committed, the system marks the change when displaying the information.

Committing information can take time, depending on the complexity of the configuration and how busy the system is. Be prepared to wait for several seconds for the system to complete committing the information.

If two or more users are logged on to the system in configuration mode and one user changes the configuration, the other user(s) will receive a warning.

NOTE *Commits are logged at logging levels **info** and **debug**.*

Examples

[Example 2-5](#) shows an uncommitted deletion which is then committed. In this example, note how the uncommitted deletion is flagged with a minus sign (“-”), which disappears after the change is committed.

Example 2-5 Committing configuration changes

```
vyatta@vyatta# show interfaces ethernet eth2
-address 192.168.1.100/24
 hw-id 00:13:46:e6:f6:87
vyatta@vyatta# commit
vyatta@vyatta# show interfaces ethernet eth2
 hw-id 00:13:46:e6:f6:87
```

commit-confirm <minutes>

Reboots to the last known good configuration unless confirmation is supplied for the commit.

Syntax

commit-confirm *minutes* [**comment** *comment*]

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>minutes</i>	The time, in minutes, to wait for confirmation to be supplied. If this interval expires, the system reboots to the last known good configuration.
<i>comment</i>	A comment to appear in the configuration file revision history. The format is a string enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to set the system to require confirmation of a configuration commit.

This operation is useful when making configuration changes over a remote connection that could cause you to be unable to connect back into the system. An example is accidentally changing the IP address of the management port.

After making the sensitive configuration change, but before committing the change, enter the commit-confirm command, specifying the confirmation interval. Commit the change. If the commit completes without incident, confirm the commit by entering the [confirm](#) command.

If you are unable to confirm by the time the confirmation interval expires—for example, because your session drops—the system automatically reboots to the configuration that was in effect prior to the configuration change. This restores remote access.

Examples

[Example 2-6](#) shows the **commit-confirm** command being used.

Example 2-6 Showing the **commit-confirm** command rebooting a system

```
vyatta@R1# delete interfaces ethernet eth1 address
[edit]
vyatta@R1# commit-confirm 1 comment "interface deleted"
commit confirm will be automatically rebooted in 1 minutes unless
confirmed
Proceed? [confirm][y]

*** At this point the remote session drops since the address for the
interface was deleted. ***

Connection closed by foreign host.

*** After a couple minutes the remote session is retried ***

Test@host1:~$ telnet 172.16.117.2
Trying 172.16.117.2...
Connected to 172.16.117.2.
Escape character is '^]'.

Welcome to Vyatta
R1 login: vyatta
Password:
Last login: Tue Nov 16 08:52:37 PST 2010 on pts/0
Linux R1 2.6.35-1-586-vyatta-virt #1 SMP Thu Nov 11 18:16:31 PST 2010 i686
Welcome to Vyatta.
This system is open-source software. The exact distribution terms for
each module comprising the full system are described in the individual
files in /usr/share/doc/*/copyright.

*** After successfully reconnecting, we look at the revision history ***

vyatta@R1:~$ show system commit
0   2010-11-16 11:08:01 by root via cli
    rollback/reboot
1   2010-11-16 11:07:56 by vyatta via cli
    interface deleted
```

```
2  2010-11-16 11:05:57 by vyatta via cli
   enable commit-revs
3  2010-11-16 11:05:56 by root via cli
   baseline
```

compare

Allows you to compare two sets of configuration information.

Syntax

```
compare [[rev-num1] rev-num]
```

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>rev-num</i>	A configuration file revision to be compared.
<i>rev-num1</i>	A configuration file revision to be compared.

Default

When used with no option, the working and active (“running”) configuration are compared. When only one revision number is specified, the system compares the working configuration to the specified revision.

Usage Guidelines

Use this command to compare two configurations while in configuration mode.

You can see the list of configuration file revisions using the [show system commit](#) operational mode command (use “run show system commit” from configuration mode).

Examples

[Example 2-7](#) shows the working and active configurations being compared on R1.

Example 2-7 Displaying the comparison of the working and active configurations

```
vyatta@R1# compare
@@ -71,11 +71,11 @@
        speed 9600
    }
}
-   flow-accounting {
-       interface eth0
-       interface eth1
-       syslog-facility daemon
-   }

    host-name R1
vyatta@R1#
```

[Example 2-8](#) shows configuration revisions 1 and 2 being compared on R1.

Example 2-8 Displaying the comparison of configuration revisions 1 and 2

```
vyatta@R1# compare 1 2
@@ -84,6 +84,9 @@
    }
}
system {
+   config-management {
+       commit-revisions 20
+   }
    console {
vyatta@R1#
```

configure

Enters configuration mode.

Syntax

configure

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to enter configuration mode from operational mode. In configuration mode, you can add, delete, and modify configuration information.

When you are in configuration mode, the command prompt changes to mark the change in command mode.

Examples

[Example 2-9](#) shows the system's response to entering configuration mode. In this example, notice how the command prompt changes when the user enters configuration mode.

Example 2-9 Entering configuration mode

```
vyatta@vyatta:~$ configure
vyatta@vyatta#
```

confirm

Allows you to confirm to the system that a commit was successful.

Syntax

confirm

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to confirm successful configuration change after requiring commit confirmation.

For configuration changes that carry some risk of causing loss of access to a system, you can direct the system to require commit confirmation by using the [commit-confirm <minutes>](#) command. This command sets the system to wait for confirmation that a configuration has succeeded.

Issuing this command within the specified commit-confirm interval causes the configuration change to be accepted. If confirmation is not provided by issuing this command, the system reboots to the last known good configuration.

Examples

[Example 2-10](#) shows the **confirm** command being used.

Example 2-10 Showing the **confirm** command confirming the commit

```
vyatta@R1# commit-confirm 1
commit confirm will be automatically rebooted in 1 minutes unless
confirmed
Proceed? [confirm][y]
vyatta@R1:~$ confirm
[edit]
vyatta@R1:~$
```

copy

Allows you to copy, or clone, a configuration node.

Syntax

copy *from-config-node* **to** *to-config-node*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>from-config-node</i>	The configuration node to be copied. The format is a series of space-separated tokens representing the path through the configuration hierarchy to the node to be renamed; for example, firewall name RULE-SET-1 rule 10 .
<i>to-config-node</i>	The configuration node to be created. The format is a series of space-separated tokens representing the path through the configuration hierarchy to the new node; for example, firewall name RULE-SET-1 rule 20 .

Default

None.

Usage Guidelines

Use this command to make a copy, or clone, of a configuration subnode.

To make specifying the configuration subnode easier, use this command in conjunction with the **edit** command. Use the **edit** command to navigate to the appropriate place in the configuration hierarchy, then copy the appropriate subnode.

If you show configuration before it is committed, you will see the copied statement flagged with a plus sign (“+”); this flag disappears after the configuration change is committed.

Examples

[Example 2-11](#) shows a firewall rule being copied.

Example 2-11 Cloning configuration subnodes

```
vyatta@vyatta# show firewall
  name RULE-SET-1 {
    rule 10 {
      action accept
    }
  }
vyatta@vyatta# edit firewall name RULE-SET-1
[edit firewall name RULE-SET-1]
vyatta@vyatta# copy rule 10 to rule 20
[edit firewall name RULE-SET-1]
vyatta@vyatta# commit
[edit firewall name RULE-SET-1]
vyatta@vyatta# show
  rule 10 {
    action accept
  }
  rule 20 {
    action accept
  }
[edit firewall name RULE-SET-1]
vyatta@vyatta# top
```

delete

Deletes a configuration node.

Syntax

delete *config-node*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>config-node</i>	The configuration node to be deleted, including the full path, separated by spaces, through the configuration hierarchy to the node.
--------------------	--

Default

None.

Usage Guidelines

Use this command to delete a part of configuration. To do this, you delete the appropriate subnode of a configuration node.

If you show configuration before it is committed, you will see the deleted statement flagged with a minus sign ("-"); the statement disappears after the configuration change is committed.

Some configuration nodes and statements are mandatory; these nodes or statements cannot be deleted. Some configuration statements are mandatory but have default values; if you delete one of these statements, the default value is restored.

Examples

[Example 2-12](#) deletes a DNS server from system configuration.

Example 2-12 Deleting configuration

```
vyatta@vyatta# show system name-server <Tab>
10.0.0.30 10.0.0.31 10.0.0.32
vyatta@vyatta# delete system name-server 10.0.0.32
vyatta@vyatta# show system name-server <Tab>
10.0.0.30 10.0.0.31
```

discard

Discards any uncommitted configuration changes.

Syntax

discard

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to discard all uncommitted changes to configuration.

Examples

[Example 2-13](#) shows an uncommitted deletion and an uncommitted addition which are then discarded. In this example, note how the uncommitted deletion (flagged with a minus sign “-”) and the uncommitted addition (flagged with a plus sign “+”), disappear after the **discard** command is invoked.

Example 2-13 Discarding configuration changes

```
vyatta@vyatta# show interfaces ethernet eth2
-address 192.168.1.100/24
+address 192.168.1.101/24
hw-id 00:13:46:e6:f6:87
vyatta@vyatta# discard
Changes have been discarded
vyatta@vyatta# show interfaces ethernet eth2
```

```
address 192.168.1.100/24  
hw-id: 00:13:46:e6:f6:87
```

edit

Navigates to a subnode in the configuration tree for editing.

Syntax

`edit path`

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>path</i>	The path to the node of configuration tree you want to edit.
-------------	--

Default

None.

Usage Guidelines

Use this command to navigate to a specific configuration subnode for editing. The **[edit]** prompt changes dynamically to mark your place in the configuration tree.

Once at that location, any actions you take such as showing, creating, or deleting configuration are relative to your location in the tree.

You can only navigate to a configuration node that has already been created and committed. Configuration nodes are created and modified using [set command](#) and are committed using [commit command](#).

Examples

The following example begins at the top of the configuration tree in configuration mode and navigates to the **system login** configuration node. Once at the **system login** node, a **show** command displays just the contents of the **login** node.

In this example, notice how the prompt changes to mark the location in the configuration tree.

Example 2-14 Navigating in the configuration tree

```
vyatta@vyatta# edit system login
[edit system login]
vyatta@vyatta# show
user mike {
    authentication {
        encrypted-password $1$hccJixQo$V6sL5hDl6CUmVZvaH1vTf0
        plaintext-password ""
    }
}
user vyatta {
    authentication {
        encrypted-password $1$Ht7gBYnxI1xCd0/J0nodh.
    }
}
[edit system login]
```

exit (configuration)

Navigates up one level of use.

- From a configuration subnode, jumps to the top of the configuration tree.
- From the top of the configuration tree, exits to operational mode.
- From operational mode, exits the system.

Syntax

exit [**discard**]

Command Mode

Configuration mode.

Operational mode.

Configuration Statement

None.

Parameters

discard	Applies when exiting from configuration mode to operational mode with uncommitted configuration changes. Allows you to exit from configuration mode by discarding all configuration changes.
----------------	--

Default

None.

Usage Guidelines

Use this command from a subnode in the configuration tree to navigate to the top of the configuration tree.

Use this command from the top of the configuration tree to exit from configuration mode to operational mode.

If you try to exit from configuration mode while there are still uncommitted configuration changes, the system will give you a warning. You will not be able to exit from configuration mode until you either commit the changes by issuing the **commit** statement, or you discard the changes using the **exit** command with the **discard** option. This is the only case where this option applies.

Use this command in operational mode to exit from the system.

load

Loads a saved configuration.

Syntax

load *file-name*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>file-name</i>	The name of the configuration file, including the full path to its location.
------------------	--

Default

None.

Usage Guidelines

Use this command to manually load a configuration previously saved to a file.

The loaded configuration becomes the working configuration and must be **committed** before it becomes the active configuration.

Configuration can be loaded from a hard disk (including a Flash disk or USB device), a TFTP server, an FTP server, an SCP server, or an HTTP server. Note that you cannot load an empty configuration file; the configuration file must contain at least one configuration node. Also, an error will be reported if an invalid configuration file is loaded.

The default configuration directory is **/config**.

The following table shows the syntax for file specification for different file locations.

Table 2-4 Specifying locations for the configuration file

Location	Specification
An absolute path	Use standard UNIX file specification.
A relative path	Specify the path name relative to the default configuration directory.
FTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>ftp://user:passwd@host/config-file</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the FTP server, and <i>config-file</i> is the configuration file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
SCP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>scp://user:passwd@host/config-file</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the SCP server, and <i>config-file</i> is the configuration file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
HTTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>http://host/config-file</pre> <p>where <i>host</i> is the host name or IP address of the HTTP server, and <i>config-file</i> is the configuration file, including the path.</p>
TFTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>tftp://host/config-file</pre> <p>where <i>host</i> is the host name or IP address of the TFTP server, and <i>config-file</i> is the configuration file, including the path relative to the TFTP root directory.</p>

Examples

Example 2-15 loads the configuration file **testconfig** from the default configuration directory.

Example 2-15 Loading saved configuration from a file

```
vyatta@vyatta# load testconfig
Loading config file /config/testconfig...

Load complete. Use 'commit' to make changes active.
[edit]
vyatta@vyatta#
```

merge

Merges a saved configuration with the active (running) configuration.

Syntax

merge *file-name*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>file-name</i>	The name of the configuration file, including the full path to its location.
------------------	--

Default

None.

Usage Guidelines

Use this command to manually load a configuration previously saved to a file and merge it with the active (running) configuration. The process of merging adds new configuration entries and applies any modifications to existing active entries to produce a new working configuration. This configuration must be **committed** before it becomes the active configuration.

Configuration can be loaded from a hard disk (including a Flash disk or USB device), a TFTP server, an FTP server, an SCP server, or an HTTP server. Note that you cannot load an empty configuration file; the configuration file must contain at least one configuration node.

The default configuration directory is **/config**.

The following table shows the syntax for file specification for different file locations.

Table 2-5 Specifying locations for the configuration file

Location	Specification
An absolute path	Use standard UNIX file specification.
A relative path	Specify the path name relative to the default configuration directory.
FTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>ftp://user:passwd@host/config-file</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the FTP server, and <i>config-file</i> is the configuration file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
SCP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>scp://user:passwd@host/config-file</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the SCP server, and <i>config-file</i> is the configuration file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
HTTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>http://host/config-file</pre> <p>where <i>host</i> is the host name or IP address of the HTTP server, and <i>config-file</i> is the configuration file, including the path.</p>
TFTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>tftp://host/config-file</pre> <p>where <i>host</i> is the host name or IP address of the TFTP server, and <i>config-file</i> is the configuration file, including the path relative to the TFTP root directory.</p>

Examples

Example 2-16 loads the configuration file **testconfig** from the default configuration directory and merges it with the active configuration.

This new working configuration must be committed before it becomes active. After the merge, you must save the new file if you want to be able to load it again. If you want the system to load the merged configuration when it boots, you must save the file to `/config/config.boot`.

Example 2-16 Merging configuration from a file

```
vyatta@vyatta# merge testconfig
Loading config file /config/testconfig...

Merge complete. Use 'commit' to make changes active.
[edit]
vyatta@vyatta#
```

rename

Allows you to change the identifier of a named configuration node.

Syntax

rename *from-config-node to to-config-node*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>from-config-node</i>	The configuration node to be renamed. The change can only occur at the current level of the configuration hierarchy. Use the edit command to move to the level you wish to change. The format is a series of space-separated tokens representing the node to change; for example rule 10 .
<i>to-config-node</i>	The new identifier for the configuration node. The change can only occur at the current level of the configuration hierarchy. Use the edit command to move to the level you wish to change. The format is a series of space-separated tokens representing the new node; for example, rule 11 .

Default

None.

Usage Guidelines

Use this command in conjunction with the **edit** command to rename (that is, to change the identifier of) a configuration node, such as a firewall rule set or rule number.

Use the **edit** command to navigate to the appropriate place in the configuration hierarchy, then use **rename** to modify the appropriate subnode.

If you show configuration before it is committed, you will see the original configuration flagged with a minus sign (“-”) and the new configuration flagged with a plus sign (“+”); the flags and the original configuration node disappears after the configuration change is committed.

Examples

[Example 2-17](#) renames rule 10 in firewall rule set RULE-SET-1 to rule 12.

Example 2-17 Renaming a configuration node

```
vyatta@vyatta# show firewall
name RULE-SET-1 {
    rule 10 {
        action accept
    }
}
vyatta@vyatta# edit firewall name RULE-SET-1
[edit firewall name RULE-SET-1]
vyatta@vyatta# rename rule 10 to rule 12
[edit firewall name RULE-SET-1]
vyatta@vyatta# show
- rule 10 {
-   action accept
- }
+ rule 12 {
+   action accept
+ }
[edit firewall name RULE-SET-1]
vyatta@vyatta# commit
[edit firewall name RULE-SET-1]
vyatta@vyatta# show
    rule 12 {
        action accept
    }
[edit firewall name RULE-SET-1]
vyatta@vyatta# top
```

rollback <rev-num>

Allows you to roll back configuration to a specific revision.

Syntax

rollback *rev-num*

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>rev-num</i>	The configuration revision to roll back to.
----------------	---

Default

None.

Usage Guidelines

Use this command to roll back to the configuration revision specified.

NOTE For the roll back to take effect, the system must be rebooted after the configuration is rolled back. A prompt will ask whether or not to reboot the system once the command completes.

You can see the list of configuration file revisions using the [show system commit](#) operational mode command (use “run show system commit” from configuration mode).

save

Saves the running configuration to a file.

Syntax

save file-name

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>file-name</i>	The name of the file where the information is to be saved, including the path to the file.
------------------	--

Default

None.

Usage Guidelines

Use this command to save the running configuration to a file.

The resulting file can later be loaded into the running system to replace the previous running configuration, using the [load](#) command. A non-absolute path is interpreted relative to the default configuration directory, which is **/config**.

The following table shows the syntax for file specification for different file locations.

Table 2-6 Specifying locations for the configuration file

Location	Specification
An absolute path	Use standard UNIX file specification.
A relative path	Specify the path name relative to the default configuration directory.

Table 2-6 Specifying locations for the configuration file

Location	Specification
FTP server	<p>Use the following syntax for <i>file-name</i>:</p> <p><code>ftp://user:passwd@host/config-file</code></p> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the FTP server, and <i>config-file</i> is the configuration file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
SCP server	<p>Use the following syntax for <i>file-name</i>:</p> <p><code>scp://user:passwd@host/config-file</code></p> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the SCP server, and <i>config-file</i> is the configuration file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
TFTP server	<p>Use the following syntax for <i>file-name</i>:</p> <p><code>tftp://host/config-file</code></p> <p>where <i>host</i> is the host name or IP address of the TFTP server, and <i>config-file</i> is the configuration file, including the path relative to the TFTP root directory.</p>

If you overwrite a configuration file, the system retains one backup, using a *file-name~* convention. For example, if you save over **my-config.boot**, the system moves the previous file to **my-config.boot~**.

Note that the **save** command only writes committed changes. If you make configuration changes and try to save, the system warns you that you have uncommitted changes and then saves only the committed changes.

Examples

[Example 2-18](#) saves the running configuration into the file **my-config** in the default configuration directory, exits from configuration mode, and displays the set of files stored in the configuration directory.

Example 2-18 Saving configuration to a file

```
vyatta@vyatta# save my-config
Saving configuration to '/config/my-config'...
Done
```

```
vyatta@vyatta# exit
vyatta@vyatta:~$ show files /config
total 24K
-rw-rw-r-- 1 vyatta xorp 2.8K Nov 28 10:30 config.boot
-rw-rw-r-- 1 vyatta xorp 2.8K Nov 27 14:32 config.boot~
-rw-rw-r-- 1 vyatta xorp 2.8K Nov 28 10:30 my-config
-rw-rw-r-- 1 vyatta xorp 2.8K Nov 27 21:50 my-config~
vyatta@vyatta:~$
```

[Example 2-19](#) saves the current running configuration to the file **my-config** in the root directory of a TFTP server at 10.1.0.35.

Example 2-19 Saving configuration to a file on a TFTP server

```
vyatta@vyatta# save tftp://10.1.0.35/my-config
Saving configuration to 'tftp://10.1.0.35/my-config'...
Done
vyatta@vyatta#
```

set

Creates a new configuration node, or modifies a value in an existing configuration node.

Syntax

To create a new configuration node, the syntax is as follows:

set *config-node* [*identifier*]

To set an attribute within a configuration node, the syntax is as follows:

set *config-node* [*identifier*] *attribute* [*value*]

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>config-node</i>	The configuration node to be created or modified, including the full path, separated by spaces, through the configuration hierarchy to the node.
<i>identifier</i>	The identifier of the configuration node. Mandatory if the configuration node has an identifier; forbidden otherwise.
<i>attribute</i>	The configuration attribute or property to be set. If the attribute statement does not exist, it is created. If the attribute statement already exists, the value is set to the new value.
<i>value</i>	The new value of the attribute. Mandatory if the attribute statement requires a value; forbidden otherwise.

Default

None.

Usage Guidelines

Use this command to add a configuration element to the current configuration—for example, to enable a routing protocol or define an interface.

You can also use this command to modify the value of an existing configuration item. When setting configuration values, note that the change does not take effect until the change is committed, using the [commit](#) command.

Once a configuration node has been added, you can modify it later using the [set](#) command, or delete it using the [delete](#) command.

Examples

[Example 2-20](#) adds a configuration node for an Ethernet interface and commits the change.

Example 2-20 Adding a configuration node

```
vyatta@vyatta# set interfaces ethernet eth1 address 192.150.187.108/24
vyatta@vyatta# commit
```

show

Displays configuration information in configuration mode.

Syntax

```
show [-all] config-node
```

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>config-node</i>	The configuration node you want to view, including the path. The node must exist and the created node must have been committed. The configuration node specification is interpreted relative to your current position in the configuration tree.
-all	Includes default information in the displayed information.

Default

When used with no configuration node specification, this command displays all existing configuration nodes and subnodes starting from your current location in the configuration tree.

When used without the **-all** option, default information is not shown

Usage Guidelines

Use this command in configuration mode to display the configured state of the system.

This command displays the specified configuration node and all subnodes. The node specification is interpreted relative to your current location in the configuration tree.

Unless the **-all** keyword is used, default information is not included in displayed information.

In addition to this command, there are a number of **show** commands available in operational mode. For a list of these commands, please see the [Quick List of Commands](#), which begins on [page xiv](#).

Examples

[Example 2-21](#) shows the **service** node displayed using the **show** command in configuration mode.

Example 2-21 Displaying configuration information

```
vyatta@vyatta# show service
dhcp-server {
}
dns {
}
ssh {
}
telnet {
}
vyatta@vyatta#
```

show configuration (operational)

Displays system configuration from operational mode.

Syntax

show configuration [all | commands | files]

Command Mode

Operational mode.

Parameters

all	Displays all configuration, including default values that would not normally be displayed.
commands	Displays the running configuration as a list of set commands. These are the commands that would be used to generate the configuration from scratch.
files	Displays a list of configuration files in /config .

Default

Displays only the values that have been set explicitly (that is, non-default values).

Usage Guidelines

Use this command to list configuration information while remaining in operational mode.

Using **show configuration** in operational mode is equivalent to using **show** in configuration mode.

Examples

[Example 2-22](#) displays the configuration from operational mode. (For brevity, only the first screen of the information is shown.)

Example 2-22 Displaying configuration information in operational mode

```
vyatta@vyatta:~$ show configuration
interfaces {
```

```
    ethernet eth0 {
        address 192.168.1.77/24
        hw-id 00:0c:29:68:b3:9f
    }
    ethernet eth1 {
        hw-id 00:0c:29:68:b3:a9
    }
    loopback lo {
    }
}
service {
    ssh {
    }
}
system {
    gateway-address 192.168.1.254
    host-name R1
    login {
        user vyatta {
            authentication {
                encrypted-password *****
            }
        }
    }
}
```

show system commit

Displays a summary of configuration file revisions.

Syntax

show system commit

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to display a summary of configuration file revisions.

Examples

[Example 2-23](#) shows the commit history of system R1.

Example 2-23 Displaying the commit history

```
vyatta@R1:~$ show system commit
0   2010-11-15 16:55:17 by vyatta via cli
    delete firewall
1   2010-11-15 16:54:40 by vyatta via cli
2   2010-11-15 16:54:40 by root via cli
    baseline
vyatta@R1:~$
```

show system commit diff <rev-num>

Compares adjacent configuration file revisions.

Syntax

```
show system commit diff rev-num
```

Command Mode

Operational mode.

Parameters

<i>rev-num</i>	The configuration file revision to compare with a subsequent revision; that is: <i>rev-num</i> +1.
----------------	--

Default

None.

Usage Guidelines

Use this command to compare two revisions of the configuration file.

The revisions to be compared are *rev-num* and *rev-num*+1. This is a shortcut for the command **show system commit file *rev_num* compare *rev-num*+1**. You can see the list of configuration file revisions using the [show system commit](#) command.

Examples

[Example 2-24](#) shows two configuration file revisions (3 and 4) being compared on R1.

Example 2-24 Displaying the comparison of two configuration file revisions

```
vyatta@R1:~$ show system commit diff 3
@@ -84,6 +84,9 @@
    }
  }
  system {
+    config-management {
+        commit-revisions 20
```

```
+      }  
      console {  
        device ttyS0 {  
          speed 9600  
        }  
      }  
vyatta@R1:~$
```

show system commit file <rev-num>

Displays a specific configuration file revision.

Syntax

```
show system commit file rev-num [compare rev-num1]
```

Command Mode

Operational mode.

Parameters

<i>rev-num</i>	The configuration file revision number to display.
<i>rev-num1</i>	The configuration file revision number to compare with.

Default

None.

Usage Guidelines

Use this command to display a configuration file revision. Use the **compare** option to compare two revisions of the configuration file. You can see the list of configuration file revisions using the [show system commit](#) command.

Examples

[Example 2-25](#) shows revision 0 of the configuration file on R1.

Example 2-25 Displaying revision 0 of the configuration file

```
vyatta@R1:~$ show system commit file 0
interfaces {
  ethernet eth0 {
    address dhcp
    description "bridge to io"
    duplex auto
    smp_affinity auto
    speed auto
  }
}
```



```
[... the rest of the configuration file]
vyatta@R1:~$
```

[Example 2-26](#) shows two configuration file revisions (3 and 4) being compared on R1.

Example 2-26 Displaying the comparison of two configuration file revisions

```
vyatta@R1:~$ show system commit file 3 compare 4
@@ -84,6 +84,9 @@
    }
  }
  system {
+   config-management {
+     commit-revisions 20
+   }
    console {
      device ttyS0 {
        speed 9600
      }
    }
  }
}
vyatta@R1:~$
```

system config-management commit-archive location <location>

Enables archiving of configuration to the specified location every time a change is committed.

Syntax

```
set system config-management commit-archive location location
delete system config-management commit-archive location location
show system config-management commit-archive location
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  config-management {
    commit-archive {
      location location
    }
  }
}
```

Parameters

<i>location</i>	<p>Multi-node. Location of the configuration archive. Supported file transfer methods and their general formats are as follows:</p> <pre>scp://user:passwd@host/dir</pre> <pre>ftp://user:passwd@host/dir</pre> <pre>tftp://host/dir</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the remote server, and <i>dir</i> is the directory path to save the file in. The saved file will contain the original file name (config.boot) followed by the hostname of the local system, the date (YYYYMMDD), and the time (HHMMSS). For example, config.boot-R1.20110126_193402 is the config.boot file from R1 saved on Jan 26, 2011 at 7:34:02pm.</p> <p>You can define more than one archive location by creating multiple location configuration nodes.</p>
-----------------	--

Default

When this option is not set, system configuration is archived locally, but is not archived remotely, on commit.

Usage Guidelines

Use this command to enable automatic remote archiving of configuration on commit.

The system automatically archives configuration on commit. These archives are stored locally in the **/config/archive** directory and the number of revisions to keep is set using the **system config-management commit-revisions <revisions>** command.

The **system config-management commit-archive location <location>** command allows you to archive an unlimited number of configuration revisions to a remote location using either FTP, SCP, or TFTP as the file transfer method. The archive operation occurs in the foreground.

Use the **set** form of this command to enable remote configuration revision archiving and specify the location of the archive.

Use the **delete** form of this command to disable remote configuration revision archiving.

Use the **show** form of this command to view remote archiving configuration.

system config-management commit-revisions <revisions>

Specifies the number of configuration revisions to store locally.

Syntax

```
set system config-management commit-revisions revisions
delete system config-management commit-revisions
show system config-management commit-revisions
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    config-management {
        commit-revisions revisions
    }
}
```

Parameters

<i>revisions</i>	The maximum number of configuration revisions to store locally. The default is 20.
------------------	---

Default

By default, 20 configuration revisions are stored.

Usage Guidelines

Use this command to specify the maximum number of configuration revisions to store locally.

The system automatically stores revisions of system configuration every time a configuration change is committed. These revisions are stored in the `/config/archive` directory. This command sets the number of revisions to be stored.

A new revision is stored each time the configuration is committed. Once the maximum number of revisions has been reached, the oldest revision is removed to make way for new revisions.

Note that you can store an unlimited number of configuration revisions to a remote location using the `system config-management commit-archive location <location>` command.

Use the **set** form of this command to change the number of locally stored configuration revisions.

Use the **delete** form of this command to restore the default behavior.

Use the **show** form of this command to view local configuration archive revision configuration.

top

Moves to the top level of the configuration hierarchy.

Syntax

top

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

None.

Usage Guidelines

Use this command to quickly navigate to the top level of configuration mode.

Examples

[Example 2-27](#) navigates down through several nodes of the configuration tree, then uses the **top** command to jump directly to the top of the tree. In this example, notice how the **[edit]** line displays your location in the configuration tree.

Example 2-27 Navigating to the top of the configuration tree

```
vyatta@vyatta# edit protocols rip interface eth0
[edit protocols/rip/interface/eth0]
vyatta@vyatta# top
vyatta@vyatta#
```

up

Navigates up one level in the configuration tree.

Syntax

up

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

None.

Usage Guidelines

Use this command to navigate one level up in configuration mode.

Examples

[Example 2-28](#) navigates down through several nodes of the configuration tree, then uses the **up** command to navigate successively higher in the tree. In this example, notice how the [edit] line displays your location in the configuration tree.

Example 2-28 Navigating up a level in the configuration tree

```
vyatta@vyatta# edit protocols rip interface eth0
[edit protocols/rip/interface/eth0]
vyatta@vyatta# up
[edit protocols/rip/interface]
vyatta@vyatta# up
[edit protocols/rip/]

```

Chapter 3: System Management

This chapter describes Vyatta system features for basic system management tasks, such as setting host information, working with the ARP cache, and setting the system date and time.

This section presents the following topics:

- [Basic System Configuration](#)
- [Monitoring System Information](#)
- [System Management Commands](#)

Basic System Configuration

The commands in this chapter allow you to change and view basic IP system information. This section presents the following topics:

- [Configuring Host Information](#)
- [Configuring DNS](#)
- [Configuring Date and Time](#)


Configuring Host Information

This section presents the following topics:

- [Host Name](#)
- [Domain](#)
- [IP Address](#)
- [Default Gateway](#)
- [Aliases](#)

In this section, sample configurations are presented for the system's host information. The sample configuration used is shown in [Figure 3-1](#).

Figure 3-1 Host information

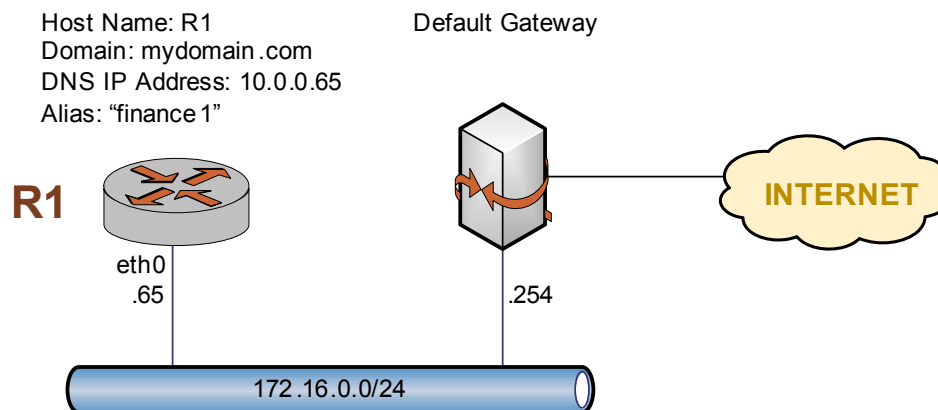

This section includes the following examples:

- Example 3-1 Setting the system's host name
- Example 3-2 Setting the system's domain
- Example 3-3 Mapping the system's IP address to its host name

- Example 3-4 Setting the default gateway
- Example 3-5 Creating an alias for the system

Host Name

The Vyatta system's name is set using the **system host-name** command. System names can include letters, numbers, and hyphens (“-”).

[Example 3-1](#) sets the system's host name to R1. To set the system host name, perform the following steps in configuration mode.

Example 3-1 Setting the system's host name

Step	Command
Set the system's host name.	vyatta@vyatta# set system host-name R1
Commit the change. The command prompt changes to reflect the change.	vyatta@vyatta# commit vyatta@R1#
Show the configuration.	vyatta@R1# show system host-name host-name R1

Domain

The system's domain is set using the **system domain-name** command. Domain names can include letters, numbers, hyphens, and periods.

NOTE **system domain-name** and **system domain-search** are mutually exclusive. Only one of the two can be configured at any one time.

[Example 3-2](#) sets the system's domain to **mydomain.com**.

To set the system's domain, perform the following steps in configuration mode.

Example 3-2 Setting the system's domain

Step	Command
Set the domain name.	vyatta@R1# set system domain-name mydomain.com
Commit the change.	vyatta@R1# commit
Show the configuration.	vyatta@R1# show system domain-name domain-name mydomain.com

IP Address

The system's IP address can be statically mapped to its host name for local DNS purposes, using the **system static-host-mapping** command.

IP networks are specified in CIDR format—that is, in *ip-address/prefix* notation such as 192.168.12.0/24. For single addresses, use dotted quad format, that is, *a.b.c.d*. For network prefixes, enter a decimal number from 1 through 32.

A good practice is to map the system's host name to the loopback address, as the loopback interface is the most reliable on the system. In this example, the loopback interface is given the address 10.0.0.65. This is the address configured for the loopback interface in the sample topology used in this guide.

Example 3-3 creates a static mapping between the host name R1 and IP address 10.0.0.65. This is the IP address the DNS server will use to resolve DNS requests for **R1.mydomain.com**.

To map the host name to the IP address, perform the following steps in configuration mode.

Example 3-3 Mapping the system's IP address to its host name

Step	Command
Map host name R1 to IP address 10.0.0.65.	<pre>vyatta@R1# set system static-host-mapping host-name R1 inet 10.0.0.65</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the configuration.	<pre>vyatta@R1# show system static-host-mapping host-name R1 { inet 10.0.0.65 }</pre>

Default Gateway

Example 3-4 specifies a default gateway for the system at 172.16.0.254.

To specify the default gateway, perform the following steps in configuration mode.

Example 3-4 Setting the default gateway

Step	Command
Specify the default gateway.	<pre>vyatta@R1# set system gateway-address 172.16.0.254</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the configuration.	<pre>vyatta@R1# show system gateway-address gateway-address 172.16.0.254</pre>

Aliases

You can define one or more aliases for the system by mapping the system's IP address to more than one host name.

[Example 3-5](#) creates the alias **finance1** for the system.

To create an alias for the system, perform the following steps in configuration mode.

Example 3-5 Creating an alias for the system

Step	Command
Define an alias.	<pre>vyatta@R1# set system static-host-mapping host-name R1 alias finance1</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the configuration.	<pre>vyatta@R1# show system static-host-mapping host-name R1 { alias finance1 inet 10.0.0.65 }</pre>


Configuring DNS

This section presents the following topics:

- [DNS Name Servers](#)
- [Domain Search Order](#)

In this section, sample configurations are presented for DNS information. The DNS configuration used is shown in [Figure 3-2](#).

Figure 3-2 DNS

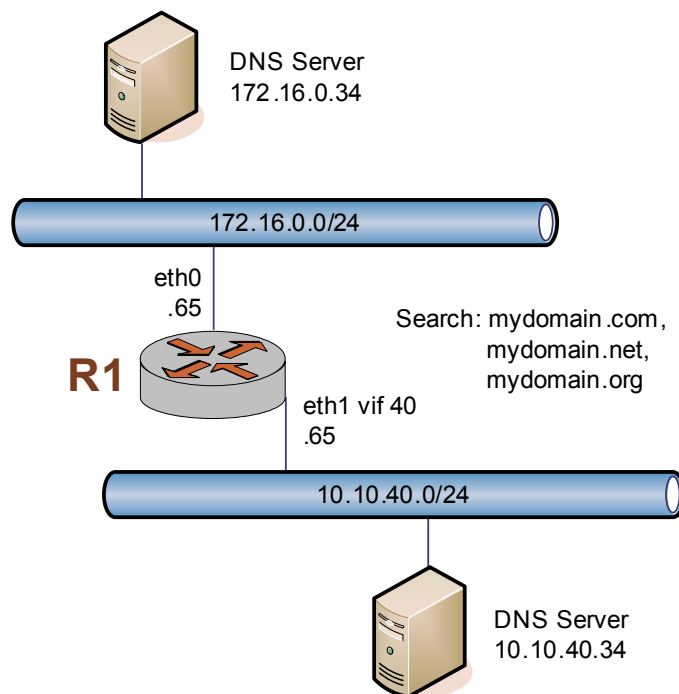

This section includes the following examples:

- Example 3-6 Specifying DNS name servers
- Example 3-7 Setting search order for domain completion

DNS Name Servers

DNS name servers are specified using the **system name-server** command.

NOTE The order in which the DNS name servers are added to the configuration is the order in which they are accessed.

Example 3-6 specifies two DNS servers for the system: one at 172.16.0.34, and the other at 10.10.40.34.

To specify DNS servers, perform the following steps in configuration mode.

Example 3-6 Specifying DNS name servers

Step	Command
Specify the first DNS server.	<code>vyatta@R1# set system name-server 172.16.0.34</code>
Specify the second DNS server.	<code>vyatta@R1# set system name-server 10.10.40.34</code>

Example 3-6 Specifying DNS name servers

Step	Command
Commit the change.	vyatta@R1# commit
Show configuration.	vyatta@R1# show system name-server name-server 172.16.0.34 name-server 10.10.40.34

Domain Search Order

You can specify a list of domains for the system to use to complete an unqualified host name. To define this list, specify the order in which domains are searched using the **system domain-search** command.

NOTE ***system domain-name** and **system domain-search** are mutually exclusive. Only one of the two can be configured at any one time.*

The **system domain-search** command requires you to enter each domain name separately, specified in the order you want them searched. A domain name can include letters, numbers, hyphens (“-”), and periods (“.”).

[Example 3-7](#) directs the system to attempt domain completion in the following order: first, **mydomain.com**; second, **mydomain.net**; and last **mydomain.org**.

To specify domain search order, perform the following steps in configuration mode.

Example 3-7 Setting search order for domain completion

Step	Command
Specify the first domain name.	vyatta@R1# set system domain-search domain mydomain.com
Specify the second domain name.	vyatta@R1# set system domain-search domain mydomain.net
Specify the third domain name.	vyatta@R1# set system domain-search domain mydomain.org
Commit the change.	vyatta@R1# commit
Show the configuration.	vyatta@R1# show system domain-search domain mydomain.com domain mydomain.net domain mydomain.org

Configuring Date and Time

This section presents the following topics:


- [Setting the Date](#)

- [Manually Synchronizing with an NTP Server](#)
- [Setting the Time Zone](#)
- [Using NTP for Automatic Synchronization](#)

Date and time can either be set manually, or obtained by manually or automatically synchronizing the system with one or more Network Time Protocol (NTP) servers. Time zone must be manually set, and may be specified as an offset from Universal Coordinated Time (UTC) or as one of a number of supported literal time zones.

In this section, sample configurations are presented for maintaining date and time information. The sample configuration used is shown in [Figure 3-3](#).

Figure 3-3 Date and time

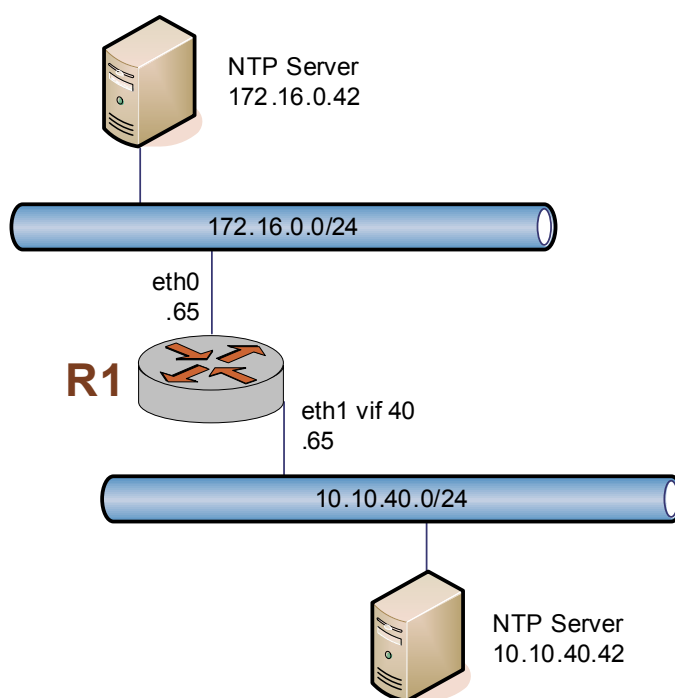

This section includes the following examples:

- Example 3-8 Setting the date and time manually
- Example 3-9 Manually synchronizing the system with an NTP server
- Example 3-10 Setting the time zone as a Region/Location
- Example 3-11 Using NTP for automatic synchronization

Setting the Date

[Example 3-8](#) manually sets the date to 1:15 PM exactly on April 24, 2007. The format is *MMDDhhmmCCYY*. Alternate formats are *MMDDhhmm*, *MMDDhhmmYY*, and *MMDDhhmmCCYY.ss*.

To manually set the date, perform the following steps in operational mode.

Example 3-8 Setting the date and time manually

Step	Command
Specify the date. The format is <i>MMDDhhmmCCYY</i> .	<pre>vyatta@R1:~\$ set date 042413152007 Tue Apr 24 13:15:00 GMT 2007 vyatta@R1:~\$</pre>

Manually Synchronizing with an NTP Server

[Example 3-9](#) manually synchronizes the system clock with the NTP server at 172.16.0.42.

Note that this merely performs a one-time synchronization. It does not set up an ongoing association with the NTP server. For information about setting up automatic synchronization, please see [“Using NTP for Automatic Synchronization” on page 108](#).

To perform a one-time synchronization with an NTP server, perform the following steps in operational mode.

Example 3-9 Manually synchronizing the system with an NTP server

Step	Command
Specify the location of the NTP server.	<pre>vyatta@R1:~\$ set date ntp 172.16.0.42 Tue Apr 24 13:15:00 UTC 2007 vyatta@R1:~\$</pre>

Setting the Time Zone

Time zone must be configured, using **system time-zone** command. To do this, you specify the Region/Location that best defines your location. For example, specifying **US/Pacific** sets the time zone to US Pacific time. Command completion (i.e. the <Tab> key) can be used to list available time zones. The adjustment for daylight time will take place automatically based on the time of year.

[Example 3-10](#) sets the time zone to Pacific time.

To set the time zone, perform the following steps in configuration mode.

Example 3-10 Setting the time zone as a Region/Location

Step	Command
Set the time zone.	vyatta@R1# set system time-zone US/Pacific vyatta@R1#
Commit the information.	vyatta@R1# commit
Show the configuration.	vyatta@R1# show system time-zone time-zone US/Pacific

Using NTP for Automatic Synchronization

To use NTP for automatic synchronization, you must create associations with the NTP servers. To create an association with an NTP server, use the **system ntp server** command and specify the IP address of the server.

[Example 3-11](#) configures two NTP servers: one at 172.16.0.42, and one at 10.10.40.42.

To specify NTP servers, perform the following steps in configuration mode.

Example 3-11 Using NTP for automatic synchronization

Step	Command
Specify a server at 172.16.0.42.	vyatta@R1# set system ntp server 172.16.0.42
Specify a server at 10.10.40.42.	vyatta@R1# set system ntp server 10.10.40.42
Commit the information.	vyatta@R1# commit
Show the configuration. (Output is abbreviated here.)	vyatta@R1# show system host-name R1 domain-search { domain mydomain.com domain mydomain.net domain mydomain.org } name-server 172.16.0.34 name-server 10.10.40.34 time-zone US/Pacific ntp { server 172.16.0.42 server 10.10.40.42 }

Monitoring System Information

This section presents the following topics:

- [Showing Host Information](#)
- [Showing the Date and Time](#)

This section includes the following examples:

- Example 3-12 Showing the system host name
- Example 3-13 Showing the system date and time

Showing Host Information

To view the configured host name, use the **show host name** command in operational mode, as shown in [Example 3-12](#):

Example 3-12 Showing the system host name

```
vyatta@R1:~$ show host name
R1
vyatta@R1:~$
```

Showing the Date and Time

To view the time according to the system clock, use the **show host date** command in operational mode, as shown in [Example 3-13](#):

Example 3-13 Showing the system date and time

```
vyatta@R1:~$ show host date
Tue Apr 24 22:23:07 GMT+8 2007
vyatta@R1:~$
```

System Management Commands

This section presents the following commands.

Configuration Commands	
<code>system console device <device></code>	Defines the specified device as a system console.
<code>system console network <device></code>	Sends console messages to a remote system.
<code>system console powersave</code>	Enables blank screen powersaving on VGA console screens.
<code>system domain-name <domain></code>	Sets the system's domain.
<code>system domain-search domain <domain></code>	Defines a set of domains for domain completion.
<code>system gateway-address <address></code>	Specifies the default gateway for the system.
<code>system host-name <name></code>	Sets the host name for the system.
<code>system name-server <address></code>	Specifies the DNS name servers available to the system.
<code>system ntp server <name></code>	Specifies the NTP servers to use when synchronizing the system's clock.
<code>system options reboot-on-panic <value></code>	Allows you set system behavior on system panic.
<code>system static-host-mapping host-name <name></code>	Defines a static mapping between a host name and an IP address.
<code>system time-zone <zone></code>	Sets the time zone for the local system clock.
Operational Commands	
<code>clear console</code>	Clears the user's console.
<code>clear interfaces counters</code>	Clears interface counters for all interfaces.
<code>format system-floppy</code>	Formats a floppy diskette and prepares it to receive a configuration file.
<code>monitor interfaces</code>	Displays traffic across all interfaces.
<code>poweroff</code>	Powers off the system.
<code>reboot</code>	Reboots the system.
<code>reset ip arp address <ipv4></code>	Resets the system's ARP cache for the specified IP address.
<code>reset ip arp interface <ethx></code>	Resets the system's ARP cache for the specified interface.

set date	Sets the system date and time directly or specifies an NTP server to acquire it from.
set terminal	Controls behaviors of the system terminal.
show arp	Displays the system's ARP cache.
show date	Displays the system date and time.
show hardware cpu	Displays information about the system's processor.
show hardware dmi	Displays information about the system's DMI.
show hardware mem	Displays information about the system's memory.
show hardware pci	Displays information about the system's PCI bus.
show history	Displays command execution history.
show host	Displays host information for hosts reachable by the system.
show interfaces	Displays information about system interfaces.
show license	Displays Vyatta license information.
show ntp	Shows the status of configured NTP servers.
show reboot	Shows the next scheduled reboot date and time.
show system boot-messages	Displays boot messages generated by the kernel.
show system connections	Displays active network connections on the system.
show system kernel-messages	Displays messages in the kernel ring buffer.
show system memory	Displays system memory usage.
show system processes	Displays active system processes.
show system routing-daemons	Displays active routing daemons.
show system storage	Displays system file system usage and available storage space.
show system uptime	Displays information on how long the system has been running.
show system usb	Displays information about peripherals connected to the USB bus.
show tech-support	Provides a consolidated report of system information.
show version	Displays information about the version of system software.

Some commands related to certain features of system management are located in other locations:

Related Commands Documented Elsewhere

system login	User management commands are described in Chapter 5: User Management .
------------------------------	--

system syslog	System logging commands are described in Chapter 6: Logging .
-------------------------------	---

clear console

Clears the user's console.

Syntax

clear console

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to clear the screen of the console.

clear interfaces counters

Clears interface counters for all interfaces.

Syntax

clear interfaces counters

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to clear the counters for all interfaces of all types, including ADSL, bridge, Ethernet, loopback, multilink, serial, and tunnel.

format system-floppy

Formats a floppy diskette and prepares it to receive a configuration file.

Syntax

format system-floppy

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to format a disk in the floppy disk drive.

The system puts a file system on the floppy disk and makes it accessible to the Vyatta - A Brocade Company system. It also saves a copy of the running configuration to **/media/floppy/config/config.boot**.

Initializing the floppy disk erases any previous data on the disk. The system reminds you of this, and provides a 5-second window in which you can quit out of the command by typing “y” in response to the question “Continue (y/n)? [y]” or pressing <Ctrl>+c.

Once the floppy disk has been formatted, the **config.boot** file is automatically saved to it. You can also save the **config.boot** configuration file to disk using the **save** command.

Examples

[Example 3-14](#) prepares a floppy disk for receiving a configuration file and saves the running configuration to **/media/floppy/config/config.boot**.

Example 3-14 Initializing a floppy diskette for saving configuration files

```
vyatta@R1:~$ format system-floppy
This will erase all data on floppy /dev/fd0.
```



```
Your configuration was saved in: /media/floppy/config/config.boot  
vyatta@R1:~$
```

monitor interfaces

Displays traffic across all interfaces.

Syntax

monitor interfaces

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to display bandwidth utilization statistics per interface.

Press the question mark key (“?”) to toggle the following quick reference information:

- Navigation
- Display settings (for example, graphical statistics or detailed statistics)
- Measurement units

Examples

[Example 3-15](#) shows the bandwidth utilization statistics per interface on R1.

Example 3-15 Displaying the interface bandwidth utilization information

```
vyatta@R1:~$ monitor interfaces
```

#	Interface	RX Rate	RX #	TX Rate	TX #

vyatta (source: local)					
0	lo	0.00B	0	0.00B	0
1	eth3	180.60KiB	959	20.29KiB	133
2	eth2	0.00B	0	0.00B	0
3	eth4	1.77MiB	8647	450.50KiB	2127
4	eth6	816.83KiB	2275	457.33KiB	2060
5	eth7	0.00B	0	0.00B	0
6	eth5	0.00B	0	0.00B	0
7	eth0	1.08MiB	5232	3.70MiB	17959
8	eth1	4.64MiB	22465	3.85MiB	17142
9	vtun1	0.00B	0	0.00B	0
10	vtun0	8.83KiB	135	9.18KiB	135

poweroff

Powers off the system.

Syntax

poweroff [*at time* | **cancel** | **now**]

Command Mode

Operational mode.

Parameters

at time	The time the system is scheduled to be powered off. Set the date and/or time directly using one of the following formats: hh:mm MMDDYY “hh:mm MMDDYY” +mm Note that the hour field (hh) uses the 24 hour clock (e.g. 3:00 pm would be represented as 15 in the hour field).
cancel	Cancels a previously scheduled power off.
now	Powers off the system without asking for confirmation.

Default

None.

Usage Guidelines

Use this command to power off the system.

Before the system powers off, a message is broadcast to all logged on users warning them of the power down.

Only users with admin level permissions can execute this command.

Examples

[Example 3-16](#) powers off the system.

Example 3-16 Powering off the system

```
vyatta@R1:~$ poweroff
Proceed with poweroff? (Yes/No) [No]y

Broadcast message from root@R1 (tty1) (Mon Dec 17 17:52:37 2012):

The system is going DOWN for system halt NOW!
```

[Example 3-17](#) powers off the system at the current time on a specified date.

Example 3-17 Powering off the system at a specified date

```
vyatta@R1:~$ poweroff at 121112
vyatta@R1:~$
```

[Example 3-18](#) cancels a scheduled power off.

Example 3-18 Cancel a scheduled power off

```
vyatta@R1:~$ poweroff cancel
vyatta@R1:~$
```

reboot

Reboots the system.

Syntax

reboot [*at time* | **cancel** | **now**]

Command Mode

Operational mode.

Parameters

at time	The time the system is scheduled to reboot. Set the date and/or time directly using one of the following formats: hh:mm MMDDYY “hh:mm MMDDYY” midnight noon Note that the hour field (hh) uses the 24 hour clock (e.g. 3:00 pm would be represented as 15 in the hour field).
cancel	Cancels a previously scheduled reboot.
now	Reboots the system without asking for confirmation.

Default

None.

Usage Guidelines

Use this command to reboot the system.

Before the system reboots, a message is broadcast to all logged on users warning them of the reboot.

Only users with admin level permissions can execute this command.

Examples

[Example 3-19](#) reboots the system.

Example 3-19 Rebooting the system

```
vyatta@R1:~$ reboot
Proceed with reboot? (Yes/No) [No]y

Broadcast message from root@R1 (tty1) (Mon Jan 21 17:52:37 2008):

The system is going down for reboot NOW!
```

[Example 3-20](#) reboots the system at the current time on a specified date.

Example 3-20 Rebooting the system at a specified date

```
vyatta@R1:~$ reboot at 121109

Reload scheduled for at Saturday Dec 12 20:18:00 2009

Proceed with reboot schedule? [confirm]y

Reload scheduled for at Saturday Dec 12 20:18:00 2009
```

[Example 3-21](#) cancels a scheduled reboot.

Example 3-21 Cancel a scheduled reboot

```
vyatta@R1:~$ reboot cancel
Reboot canceled
vyatta@R1:~$
```

reset ip arp address <ipv4>

Resets the system's ARP cache for the specified IP address.

Syntax

```
reset ip arp address ipv4
```

Command Mode

Operational mode.

Parameters

<i>ipv4</i>	Removes the ARP entry for the specified IP address from the ARP cache.
-------------	--

Default

None.

Usage Guidelines

Use this command to remove ARP entries associated with a specific IP address from the ARP cache.

reset ip arp interface <ethx>

Resets the system's ARP cache for the specified interface.

Syntax

```
reset ip arp interface eth0..eth23
```

Command Mode

Operational mode.

Parameters

<i>eth0..eth23</i>	Resets the entire ARP cache for the specified Ethernet interface. The range of values is eth0 to eth23 .
--------------------	--

Default

None.

Usage Guidelines

Use this command to remove ARP entries associated with an Ethernet interface from the ARP cache.

set date

Sets the system date and time directly or specifies an NTP server to acquire it from.

Syntax

```
set date {datetime | ntp ntpserver}
```

Command Mode

Operational mode.

Parameters

<i>datetime</i>	Set the date and time directly using one of the following formats: MMDDhhmm MMDDhhmmYY MMDDhhmmCCYY MMDDhhmmCCYY.ss Note that the hour field (hh) uses the 24 hour clock (e.g. 3:00 pm would be represented as 15 in the hour field).
<i>ntpserver</i>	Specifies a Network Time Protocol (NTP) to acquire the current time from. You can specify either an IPv4 address or a hostname to identify the NTP server.

Default

None.

Usage Guidelines

Use this command to set the system date and time either directly or by specifying a Network Time Protocol (NTP) server from which to acquire the date and time. If a time zone has not been configured, then GMT is assumed. The time zone is set using the [system time-zone <zone>](#) command (see [page 192](#)).

Examples

[Example 3-22](#) sets the system date and time to May 15, 2008 at 10:55 pm (assuming that the time zone is set to Pacific Daylight Time).

Example 3-22 Set the date and time directly

```
vyatta@R1:~$ set date 051522552008
Thu May 15 22:55:00 PDT 2008
vyatta@R1:~$
```

[Example 3-23](#) sets the system date and time using an NTP server.

Example 3-23 Set the date and time using an NTP server

```
vyatta@R1:~$ set date ntp 69.59.150.135
15 May 23:00:00 ntpdate[7038]: step time server 69.59.150.135 offset
425.819267 sec
vyatta@R1:~$
```

set terminal

Controls behaviors of the system terminal.

Syntax

```
set terminal {key query-help {enable|disable} | length length | pager [pager] | width width}
```

Command Mode

Operational mode.

Parameters

key query-help	Sets whether or not you can get help using a question mark. The options are enable and disable . The default is enable .
<i>length</i>	Sets the terminal screen length to a given number of rows.
<i>pager</i>	The program to use as the terminal pager. If none is specified, the default (less) is used.
<i>width</i>	Sets the terminal screen width to a given number of columns.

Default

None.

Usage Guidelines

Use this command to set the terminal behavior.

show arp

Displays the system's ARP cache.

Syntax

```
show arp [interface]
```

Command Mode

Operational mode.

Parameters

<i>interface</i>	Shows ARP information for the specified interface.
------------------	--

Default

None.

Usage Guidelines

Use this command to display the system's ARP cache.

[Table 3-1](#) shows possible ARP states.

Table 3-1 ARP states

State	Description
incomplete	Address resolution is currently being preformed on this neighbor entry.
reachable	Indicates that the neighbor is reachable. Positive confirmation has been received and the path to this neighbor is operational.
stale	More than the configured elapsed time has passed since reachability confirmation was received from this neighbor.
delay	More than the configured elapsed time has passed since reachability confirmation was received from this neighbor. This state allows TCP to confirm the neighbor. If not, a probe should be sent after the next delay time has elapsed.
probe	A solicitation has been sent and the system is waiting for a response from this neighbor.

Table 3-1 ARP states

State	Description
failed	Neighbor reachability state detection failed.
noarp	This is a pseudo-state, indicating that ARP is not used for this neighbor entry.
permanent	This is a pseudo-state indicating that this entry should not be cleared from the cache.
none	No state is defined.

Examples

[Example 3-24](#) shows the ARP cache of systemR1.

Example 3-24 Displaying the ARP cache

```
vyatta@R1:~$ show arp
Address      HWtype  HWaddress      Flags Mask  Iface
172.16.215.1 ether    00:12:D9:74:BE:91 C      eth0
10.1.0.1     ether    00:04:23:09:0F:79 C      eth0
vyatta@R1:~$
```

show date

Displays the system date and time.

Syntax

`show date [utc]`

Command Mode

Operational mode.

Parameters

utc	Shows the date and time in Coordinated Universal Time.
------------	--

Default

None.

Usage Guidelines

Use this command to display the system date and time in either local time or UTC time.

Examples

[Example 3-25](#) shows the system date and time on R1.

Example 3-25 Displaying the system date and time

```
vyatta@R1:~$ show date
Tue May 20 17:27:07 PDT 2008
vyatta@R1:~$
```

show hardware cpu

Displays information about the system's processor.

Syntax

`show hardware cpu [summary]`

Command Mode

Operational mode.

Parameters

summary	Shows the CPUs on the system.
----------------	-------------------------------

Default

None.

Usage Guidelines

Use this command to view information about the processor(s) used in the system's hardware platform.

Examples

[Example 3-26](#) shows CPU information on R1.

Example 3-26 Showing CPU information

```
vyatta@R1:~$ show hardware cpu
processor      : 0
vendor_id     : GenuineIntel
cpu family    : 6
model         : 15
model name    : Intel(R) Xeon(R) CPU           E5310  @ 1.60GHz
stepping      : 8
cpu MHz       : 1595.101
cache size    : 4096 KB
fdiv_bug      : no
hlt_bug       : no
f00f_bug      : no
```



```
coma_bug      : no
fpu           : yes
fpu_exception : yes
cpuid level   : 10
wp           : yes
flags         : fpu vme de pse tsc msr pae mce cx8 apic sep mtrr pge mca
cmov pat pse36 clflush dts acpi mmx fxsr sse sse2 ss nx constant_tsc up
arch_perfmon pebs bts pni ds_cpl ssse3 dca
bogomips      : 3213.51
clflush size  : 64
power management:

vyatta@R1:~$
```

show hardware dmi

Displays information about the system's DMI.

Syntax

show hardware dmi

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to view information about the system's desktop management interface (DMI). The DMI provides a standard framework for managing resources in the device.

Examples

[Example 3-27](#) shows DMI information on R1.

Example 3-27 Showing DMI information

```
vyatta@R1:~$ show hardware dmi
bios_date: 04/17/2006
bios_vendor: Phoenix Technologies LTD
bios_version: 6.00
board_asset_tag:
board_name: 440BX Desktop Reference Platform
board_vendor: Intel Corporation
board_version: None
chassis_asset_tag: No Asset Tag
chassis_type: 1
chassis_vendor: No Enclosure
chassis_version: N/A
```

```
product_name: VMware Virtual Platform
product_version: None
sys_vendor: VMware, Inc.
vyatta@R1:~$
```

show hardware mem

Displays information about the system's memory.

Syntax

show hardware mem

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to view information about the system memory.

Examples

[Example 3-28](#) shows memory information on R1.

Example 3-28 Showing memory information

```
vyatta@R1:~$ show hardware mem
MemTotal:      515972 kB
MemFree:       341468 kB
Buffers:       28772 kB
Cached:        116712 kB
SwapCached:    0 kB
Active:        35912 kB
Inactive:      117272 kB
HighTotal:     0 kB
HighFree:      0 kB
LowTotal:      515972 kB
LowFree:       341468 kB
SwapTotal:     0 kB
SwapFree:      0 kB
```

```
Dirty:                0 kB
Writeback:            0 kB
AnonPages:            7700 kB
Mapped:               4048 kB
Slab:                 14644 kB
SReclaimable:         9440 kB
SUnreclaim:           5204 kB
PageTables:           288 kB
NFS_Unstable:         0 kB
Bounce:               0 kB
CommitLimit:          257984 kB
Committed_AS:          21636 kB
VmallocTotal:          507896 kB
VmallocUsed:           3896 kB
VmallocChunk:          503932 kB
vyatta@R1:~$
```

show hardware pci

Displays information about the system's PCI bus.

Syntax

`show hardware pci [detailed]`

Command Mode

Operational mode.

Parameters

<code>detailed</code>	Shows detailed information about the PCI bus.
-----------------------	---

Default

None.

Usage Guidelines

Use this command to view information about the peripheral component interconnect (PCI) bus. The PCI provides communication among the system's peripheral components and the processor.

Examples

[Example 3-29](#) shows PCI information on R1.

Example 3-29 Showing PCI bus information

```
vyatta@R1:~$ show hardware pci
00:00.0 Host bridge: Intel Corporation 440BX/ZX/DX - 82443BX/ZX/DX Host
bridge (rev 01)
00:01.0 PCI bridge: Intel Corporation 440BX/ZX/DX - 82443BX/ZX/DX AGP
bridge (rev 01)
00:07.0 ISA bridge: Intel Corporation 82371AB/EB/MB PIIX4 ISA (rev 08)
00:07.1 IDE interface: Intel Corporation 82371AB/EB/MB PIIX4 IDE (rev 01)
00:07.3 Bridge: Intel Corporation 82371AB/EB/MB PIIX4 ACPI (rev 08)
00:0f.0 VGA compatible controller: VMware Inc Abstract SVGA II Adapter
00:10.0 SCSI storage controller: LSI Logic / Symbios Logic 53c1030 PCI-X
Fusion-MPT Dual Ultra320 SCSI (rev 01)
```

```
00:11.0 Ethernet controller: Advanced Micro Devices [AMD] 79c970 [PCnet32  
LANCE] (rev 10)  
vyatta@R1:~$
```

show history

Displays command execution history.

Syntax

```
show history [ num | brief ]
```

Command Mode

Operational mode.

Parameters

<i>num</i>	Displays the most recent <i>num</i> commands.
<i>brief</i>	Displays the most recent 20 commands.

Default

The complete command history is displayed.

Usage Guidelines

Use this command to view the history of command execution on the system. If more than one screen of output is available, the “:” prompt will appear. Press the <Space> key to display the next screen, the <Enter> key to display the next line, or <q> to stop the output.

Examples

[Example 3-30](#) shows history of command execution on R1.

Example 3-30 Displaying command history

```
vyatta@R1:~$ show history
 1  2009-08-05T22:01:33+0000 configure
 2  2009-08-05T22:02:03+0000 commit
 3  2009-08-05T22:02:09+0000 exit
 4  2009-08-05T22:02:09+0000 exit
 5  2009-08-05T22:02:12+0000 exit
 6  2009-08-05T22:11:51+0000 show version
 7  2009-08-05T22:11:55+0000 configure
```



```
8 2009-08-05T22:01:33+0000 configure
9 2009-08-05T22:02:03+0000 commit
10 2009-08-05T22:02:09+0000 exit
11 2009-08-05T22:02:09+0000 exit
12 2009-08-05T22:02:12+0000 exit
13 2009-08-05T22:11:51+0000 show version
14 2009-08-05T22:11:55+0000 configure
15 2009-08-05T22:11:59+0000 show
16 2009-08-05T22:12:27+0000 show
17 2009-08-05T22:13:01+0000 set interfaces ethernet eth0 address
192.168.1.72/24
18 2009-08-05T22:13:12+0000 set service ssh
19 2009-08-05T22:13:33+0000 set system name-server 192.168.1.254
20 2009-08-05T22:13:45+0000 set system gateway-address 192.168.1.254
21 2009-08-05T22:13:58+0000 commit
22 2009-08-06T05:14:15+0000 show
:
vyatta@R1:~$
```

show host

Displays host information for hosts reachable by the system.

Syntax

```
show host {lookup hostname | lookup ipv4 | name | date | os}
```

Command Mode

Operational mode.

Parameters

lookup <i>hostname</i>	Shows the canonical name and IP address plus any configured aliases recorded in the name server for the host with the specified name.
lookup <i>ipv4</i>	Shows the canonical name and IP address plus any configured aliases recorded in the name server for the host with the specified IP address.
date	Shows the date and time according to the system clock.
name	Shows the name configured for this system.
os	Shows details about the system's operating system.

Default

None.

Usage Guidelines

Use this command to view information configured for the host.

Examples

[Example 3-31](#) shows host information for R2.

Example 3-31 Looking up network hosts

```
vyatta@R1:~$ show host lookup R2
```

```
R2.vyatta.com      A      10.1.0.3
vyatta@R1:~$
```

[Example 3-32](#) shows the name configured for R1.

Example 3-32 Showing network host names

```
vyatta@R1:~$ show host name
R1
vyatta@R1:~$
```

[Example 3-33](#) shows the date and time according to the system clock.

Example 3-33 Showing the system date and time

```
vyatta@R1:~$ show host date
Mon Jan 21 17:28:47 PST 2008
vyatta@R1:~$
```

[Example 3-34](#) shows information about the operating system.

Example 3-34 Showing operating system information

```
vyatta@R1:~$ show host os
Linux R1 2.6.23-1-486-vyatta #1 SMP Tue Jan 15 02:00:31 PST 2008 i686
GNU/Linux
vyatta@R1:~$
```

show interfaces

Displays information about system interfaces.

Syntax

```
show interfaces [counters | detail | system [enabled]]
```

Command Mode

Operational mode.

Parameters

counters	Displays summary information about all the interfaces available on your system.
detail	Displays detailed information about all the interfaces available on your system.
system	Displays all the physical interfaces available on your system.
enabled	Shows only enabled system interfaces known to the operating system kernel.

Default

Displays information for all interfaces configured on the system.

Usage Guidelines

Use this command to view configuration information and operational status for interfaces and vifs.

When used with no option, this statement displays information for all interfaces configured on the system. You can see specific information by using other versions of this command.

To see all the physical interfaces known to the operating system kernel, use the **system** option. This option differs from the other versions of this command: the other versions show interfaces that have been configured on the system, while the **system** option shows all the physical interfaces available on your system (that is, the physical interfaces known to the operating system kernel).

The physical interfaces available to you determine which interfaces you will be able to configure and view, because you cannot configure or view an interface that does not physically exist on the system.

Examples

[Example 3-35](#) shows the output for **show interfaces**.

Example 3-35 Displaying interface information

```
vyatta@R1:~$ show interfaces
Codes: S - State, L - Link, u - Up, D - Down, A - Admin Down
Interface      IP Address      S/L  Description
-----
eth0           -               u/u
eth1           192.168.74.128/24 u/D
               2001:470:1f04:183f::2/64
eth2           172.16.139.128/24 u/u
eth3           192.168.249.128/24 A/D
lo             127.0.0.1/8     u/u
               ::1/128
```

[Example 3-36](#) shows the first screen of output for **show interfaces system enabled**.

Example 3-36 Displaying detailed interface information

```
vyatta@R1:~$ show interfaces system enabled
eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast qlen 100
link/ether 00:30:48:82:e2:0c brd ff:ff:ff:ff:ff:ff
inet 10.1.0.54/24 brd 10.1.0.255 scope global eth0
inet6 fe80::230:48ff:fe82:e20c/64 scope link
      valid_lft forever preferred_lft forever

RX:  bytes    packets    errors    dropped    overrun    mcast
    348646     4144         0          0          0          0
TX:  bytes    packets    errors    dropped    carrier    collisions
    168294     1594         0          0          0          0

eth1: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc pfifo_fast qlen 10
link/ether 00:30:48:82:e2:0d brd ff:ff:ff:ff:ff:ff
inet 172.16.215.2/24 brd 172.16.215.255 scope global eth1
inet6 fe80::230:48ff:fe82:e20d/64 scope link
      valid_lft forever preferred_lft forever

RX:  bytes    packets    errors    dropped    overrun    mcast
```

	1384	11	0	0	0	0
TX:	bytes	packets	errors	dropped	carrier	collisions
	1990	18	0	0	0	0

eth2: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc
lines 1-23

show license

Displays Vyatta license information.

Syntax

`show license`

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to view Vyatta license information.

Examples

[Example 3-37](#) shows the first screen of output for `show license`.

Example 3-37 Displaying license information

```
vyatta@R1:~$ show license
GNU GENERAL PUBLIC LICENSE
    Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
    51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your
freedom to share and change it. By contrast, the GNU General Public
License is intended to guarantee your freedom to share and change free
```

software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

show ntp

Shows the status of configured NTP servers.

Syntax

```
show ntp {host | ipv4 | 0.vyatta.pool.ntp.org}
```

Command Mode

Operational mode.

Parameters

<i>host</i>	Shows the status of the connection to the NTP server with the specified host name.
<i>ipv4</i>	Shows the status of the connection to the NTP server at the specified IPv4 address.
0.vyatta.pool.ntp.org	Shows the status of the connection to the default NTP server.

Default

None.

Usage Guidelines

Use this command to view the status of connections to configured NTP servers.

A line entry is given for each configured NTP server, showing the server's IP address and how often the system is polling and updating to the NTP clock. An asterisk (*) next to the NTP server's IP address indicates successful synchronization with the NTP server.

NTP server connections are configured using the [system ntp server <name>](#) command.

Examples

[Example 3-38](#) shows the configured NTP server (in this case 69.59.150.135).

Example 3-38 Showing configured NTP servers

```
vyatta@R1:~$ show ntp
remote          local      st poll reach  delay  offset  disp
=====
=69.59.150.135  192.168.1.92    3   64   1 0.04057 -0.281460 0.96825
vyatta@R1:~$
```

[Example 3-39](#) shows the NTP server at IP address 69.59.150.135.

Example 3-39 Showing information for a specific NTP server

```
vyatta@R1:~$ show ntp 69.59.150.135
server 69.59.150.135, stratum 3, offset 46.614524, delay 0.03207
22 Jan 12:20:36 ntpdate[10192]: step time server 69.59.150.135 offset
46.614524 sec
vyatta@R1:~$
```

show reboot

Shows the next scheduled reboot date and time.

Syntax

show reboot

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to view the next scheduled reboot date and time.

Examples

[Example 3-40](#) shows the next scheduled reboot date and time.

Example 3-40 Showing the next scheduled reboot

```
vyatta@R1:~$ show reboot
Reboot scheduled for [Sat Dec 12 20:23:00 2009]
vyatta@R1:~$
```

[Example 3-41](#) shows no scheduled reboot.

Example 3-41 Showing no scheduled reboot

```
vyatta@R1:~$ show reboot
No reboot currently scheduled
vyatta@R1:~$
```

show system boot-messages

Displays boot messages generated by the kernel.

Syntax

`show system boot-messages [all]`

Command Mode

Operational mode.

Parameters

<code>all</code>	Displays all kernel boot messages.
------------------	------------------------------------

Default

A subset of the full list of kernel boot messages is displayed.

Usage Guidelines

Use this command to see startup messages that have been generated by the kernel.

Examples

[Example 3-42](#) shows the first screen of output for `show system boot-messages`.

Example 3-42 Displaying startup messages

```
vyatta@R1:~$ show system boot-messages
Linux version 2.6.23-1-486-vyatta (autobuild@sydney) (gcc version 4.2.3
20071123 (prerelease) (Debian 4.2.2-4)) #1 SMP Fri Jan 18 07:17:50 PST 2008
BIOS-provided physical RAM map:
  BIOS-e820: 0000000000000000 - 000000000009f800 (usable)
  BIOS-e820: 000000000009f800 - 00000000000a0000 (reserved)
  BIOS-e820: 00000000000f0000 - 0000000000100000 (reserved)
  BIOS-e820: 0000000000100000 - 00000000001fee0000 (usable)
  BIOS-e820: 00000000001fee0000 - 00000000001fee3000 (ACPI NVS)
  BIOS-e820: 00000000001fee3000 - 00000000001fef0000 (ACPI data)
  BIOS-e820: 00000000001fef0000 - 00000000001ff00000 (reserved)
  BIOS-e820: 00000000fec00000 - 000000001000000000 (reserved)
0MB HIGHMEM available.
```

```
510MB LOWMEM available.
found SMP MP-table at 000f5a20
Entering add_active_range(0, 0, 130784) 0 entries of 256 used
Zone PFN ranges:
  DMA             0 ->    4096
  Normal          4096 ->  130784
  HighMem        130784 ->  130784
Movable zone start PFN for each node
early_node_map[1] active PFN ranges
  0:             0 ->  130784
On node 0 totalpages: 130784
:
```

show system connections

Displays active network connections on the system.

Syntax

```
show system connections
```

Command Mode

Operational mode.

Parameters

None.

Default

None:

Usage Guidelines

Use this command to see which network connections are currently active on the network.

Examples

[Example 3-43](#) shows the first screen of output for **show system connections**.

Example 3-43 Displaying active connections

```
vyatta@R1:~$ show system connections
Active Internet connections (servers and established)
Proto Recv-Q Send-Q Local Address           Foreign Address         State
tcp      0      0 0.0.0.0:179             0.0.0.0:*               LISTEN
tcp      0      0 0.0.0.0:22              0.0.0.0:*               LISTEN
tcp      0      0 192.168.1.77:22        192.168.1.102:2449     ESTABLISHED
tcp6     0      0 :::2606                 :::*                    LISTEN
tcp6     0      0 :::80                   :::*                    LISTEN
tcp6     0      0 :::179                   :::*                    LISTEN
tcp6     0      0 :::22                   :::*                    LISTEN
udp      0      0 192.168.1.77:123       0.0.0.0:*
udp      0      0 127.0.0.1:123          0.0.0.0:*
udp      0      0 0.0.0.0:123            0.0.0.0:*
```

```

udp6      0      0 fe80::20c:29ff:fe68:123 :::*
udp6      0      0 ::1:123      :::*
udp6      0      0 :::123       :::*
raw6      0      0 :::58        :::*      7
raw6      0      0 :::89        :::*      7
Active UNIX domain sockets (servers and established)
Proto RefCnt Flags      Type       State      I-Node    Path
unix  12      [ ]       DGRAM      10203      /dev/log
unix  2      [ ACC ]    STREAM    LISTENING  10657     /var/run/vyatta/quagga/zserv.api
unix  2      [ ACC ]    STREAM    LISTENING  10665     /var/run/vyatta/quagg
:
```

show system kernel-messages

Displays messages in the kernel ring buffer.

Syntax

`show system kernel-messages`

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to see messages currently residing in the kernel ring buffer.

Examples

[Example 3-44](#) shows the first screen of output for `show system kernel-messages`.

Example 3-44 Displaying messages from the kernel

```
vyatta@R1:~$ show system kernel-messages
Linux version 2.6.16 (autobuild@phuket.vyatta.com) (gcc version 4.1.1) #1
Tue Dec 5 15:56:41 PST 2006
BIOS-provided physical RAM map:
  BIOS-e820: 0000000000000000 - 000000000009f800 (usable)
  BIOS-e820: 000000000009f800 - 00000000000a0000 (reserved)
  BIOS-e820: 00000000000f0000 - 0000000000100000 (reserved)
  BIOS-e820: 0000000000100000 - 0000000000fee000 (usable)
  BIOS-e820: 0000000000fee000 - 0000000000fee3000 (ACPI NVS)
  BIOS-e820: 0000000000fee3000 - 0000000000fef0000 (ACPI data)
  BIOS-e820: 0000000000fef0000 - 0000000000ff00000 (reserved)
  BIOS-e820: 0000000000fec00000 - 00000000100000000 (reserved)
0MB HIGHMEM available.
254MB LOWMEM available.
```



```
found SMP MP-table at 000f5a20
On node 0 totalpages: 65248
  DMA zone: 4096 pages, LIFO batch:0
  DMA32 zone: 0 pages, LIFO batch:0
  Normal zone: 61152 pages, LIFO batch:15
  HighMem zone: 0 pages, LIFO batch:0
DMI 2.3 present.
Intel MultiProcessor Specification v1.4
  Virtual Wire compatibility mode.
OEM ID: OEM00000 Product ID: PROD00000000 APIC at: 0xFEE00000
:
```

show system memory

Displays system memory usage.

Syntax

```
show system memory [cache | detail | routing-daemons]
```

Command Mode

Operational mode.

Parameters

cache	Displays memory cache details.
detail	Displays memory usage details.
routing-daemons	Displays memory usage by the Quagga subsystem.

Default

None.

Usage Guidelines

Use this command to see how much memory is currently being used by the system, and how much is free.

Examples

[Example 3-45](#) shows information about memory usage on R1.

Example 3-45 Displaying information about memory usage

```
vyatta@R1:~$ show system memory
total      used      free      shared    buffers    cached
Mem:      242836    170796    72040         0      58844     81748
Swap:         0         0         0
Total:    242836    170796    72040
vyatta@R1:~$
```

[Example 3-46](#) shows detailed information about memory usage on R1.

Example 3-46 Displaying detailed information about memory usage

```
vyatta@R1:~$ show system memory detail
MemTotal:      242836 kB
MemFree:       72040 kB
Buffers:       58844 kB
Cached:        81760 kB
SwapCached:    0 kB
Active:        75496 kB
Inactive:      79252 kB
Active(anon):  14344 kB
Inactive(anon): 264 kB
Active(file):  61152 kB
Inactive(file): 78988 kB
Unevictable:   0 kB
Mlocked:       0 kB
HighTotal:     0 kB
HighFree:      0 kB
LowTotal:      242836 kB
LowFree:       72040 kB
SwapTotal:     0 kB
SwapFree:      0 kB
Dirty:         0 kB
Writeback:     0 kB
AnonPages:     14172 kB
Mapped:        7464 kB
:
```

[Example 3-47](#) shows information about memory cache usage on R1.

Example 3-47 Displaying information about memory cache usage

```
vyatta@R1:~$ show system memory cache
Active / Total Objects (% used) : 99681 / 100958 (98.7%)
Active / Total Slabs (% used)   : 2690 / 2690 (100.0%)
Active / Total Caches (% used)  : 61 / 72 (84.7%)
Active / Total Size (% used)    : 12081.72K / 12346.32K (97.9%)
Minimum / Average / Maximum Object : 0.01K / 0.12K / 8.00K

  OBJS ACTIVE  USE OBJ SIZE  SLABS OBJ/SLAB CACHE SIZE NAME
30806 30806 100%   0.05K   422     73   1688K buffer_head
```

```

19200 19178 99% 0.13K 640 30 2560K dentry
9010 8954 99% 0.05K 106 85 424K sysfs_dir_cache
7168 7054 98% 0.01K 14 512 56K kmalloc-8
4864 4853 99% 0.02K 19 256 76K kmalloc-16
2816 2693 95% 0.03K 22 128 88K kmalloc-32
2640 2640 100% 0.38K 264 10 1056K unionfs_inode_cache
2380 2213 92% 0.02K 14 170 56K anon_vma_chain
2322 2322 100% 0.44K 258 9 1032K squashfs_inode_cache
2255 2248 99% 0.34K 205 11 820K inode_cache
2210 2199 99% 0.05K 26 85 104K ext3_xattr
1886 1884 99% 0.09K 41 46 164K vm_area_struct
1664 1512 90% 0.12K 52 32 208K kmalloc-128
1536 1470 95% 0.06K 24 64 96K kmalloc-64
1536 1433 93% 0.02K 6 256 24K anon_vma
1313 1308 99% 0.29K 101 13 404K radix_tree_node

```

```

:
```

show system processes

Displays active system processes.

Syntax

`show system processes [extensive | summary | tree]`

Command Mode

Operational mode.

Parameters

extensive	Shows all processes and extensive details about each.
summary	Shows a summary of system usage.
tree	Shows all processes and how they are related.

Default

Lists all processes currently running on the system.

Usage Guidelines

Use this command to see information about processes currently running on the system.

Examples

[Example 3-48](#) shows the first screen of output for `show system processes`.

Example 3-48 Displaying process information

```
vyatta@R1:~$ show system processes
PID TTY      STAT   TIME COMMAND
  1 ?        Ss     0:03 init [2]
  2 ?        S       0:00 [kthreadd]
  3 ?        S       0:00 [ksoftirqd/0]
  4 ?        S       0:00 [migration/0]
  5 ?        S       0:00 [watchdog/0]
```

```

6 ?      S      0:09 [events/0]
7 ?      S      0:00 [khelper]
12 ?     S      0:00 [async/mgr]
13 ?     S      0:00 [pm]
99 ?     S      0:00 [sync_supers]
101 ?    S      0:00 [bdi-default]
102 ?    S      0:00 [kintegrityd/0]
104 ?    S      0:00 [kblockd/0]
106 ?    S      0:00 [kacpid]
107 ?    S      0:00 [kacpi_notify]
108 ?    S      0:00 [kacpi_hotplug]
174 ?    S      0:00 [khubd]
177 ?    S      0:00 [kseriod]
299 ?    S      0:00 [khungtaskd]
300 ?    S      0:00 [kswapd0]
353 ?    S      0:00 [aio/0]
361 ?    S      0:00 [unionfs_siod/0]
:

```

[Example 3-49](#) shows the first screen of output for `show system processes extensive`.

Example 3-49 Displaying extensive process information

```

vyatta@R1:~$ show system processes extensive
top - 08:23:47 up 13:28,  2 users,  load average: 0.12, 0.03, 0.01
Tasks: 72 total,  1 running, 71 sleeping,  0 stopped,  0 zombie
Cpu(s): 0.0%us, 0.2%sy, 0.0%ni, 99.8%id, 0.0%wa, 0.0%hi, 0.0%si,
0.0%st
Mem:    242836k total,   170488k used,    72348k free,    58752k buffers
Swap:      0k total,      0k used,      0k free,    81440k cached

  PID USER      PR  NI  VIRT  RES  SHR S %CPU %MEM    TIME+  COMMAND
 3515 vyatta    20   0  2372   984  768 R   1.8   0.4   0:00.06 top
    1 root      20   0  2076   680  584 S   0.0   0.3   0:03.79 init
    2 root      20   0     0     0     0 S   0.0   0.0   0:00.00 kthreadd
    3 root      20   0     0     0     0 S   0.0   0.0   0:00.98 ksoftirqd/0
    4 root      RT    0     0     0     0 S   0.0   0.0   0:00.00 migration/0
    5 root      RT    0     0     0     0 S   0.0   0.0   0:00.00 watchdog/0
    6 root      20   0     0     0     0 S   0.0   0.0   0:09.69 events/0
    7 root      20   0     0     0     0 S   0.0   0.0   0:00.00 khelper
   12 root      20   0     0     0     0 S   0.0   0.0   0:00.00 async/mgr
   13 root      20   0     0     0     0 S   0.0   0.0   0:00.00 pm
   99 root      20   0     0     0     0 S   0.0   0.0   0:00.12 sync_supers
  101 root      20   0     0     0     0 S   0.0   0.0   0:00.27 bdi-default
  102 root      20   0     0     0     0 S   0.0   0.0   0:00.00 kintegrityd/0
  104 root      20   0     0     0     0 S   0.0   0.0   0:00.05 kblockd/0

```

```

106 root      20  0    0    0    0 S  0.0  0.0  0:00.00 kacpid
107 root      20  0    0    0    0 S  0.0  0.0  0:00.00 kacpi_notify
:

```

[Example 3-50](#) shows the first screen of output for **show system processes tree**.

Example 3-50 Displaying hierarchical process information

```

vyatta@R1:~$ show system processes tree
PID  PGID  SID  TTY          TIME CMD
   2    0    0  ?          00:00:00 kthreadd
   3    0    0  ?          00:00:00 ksoftirqd/0
   4    0    0  ?          00:00:00 migration/0
   5    0    0  ?          00:00:00 watchdog/0
   6    0    0  ?          00:00:09 events/0
   7    0    0  ?          00:00:00 khelper
  12    0    0  ?          00:00:00 async/mgr
  13    0    0  ?          00:00:00 pm
  99    0    0  ?          00:00:00 sync_supers
101    0    0  ?          00:00:00 bdi-default
102    0    0  ?          00:00:00 kintegrityd/0
104    0    0  ?          00:00:00 kblockd/0
106    0    0  ?          00:00:00 kacpid
107    0    0  ?          00:00:00 kacpi_notify
108    0    0  ?          00:00:00 kacpi_hotplug
174    0    0  ?          00:00:00 khubd
177    0    0  ?          00:00:00 kseriod
299    0    0  ?          00:00:00 khungtaskd
300    0    0  ?          00:00:00 kswapd0
353    0    0  ?          00:00:00 aio/0
361    0    0  ?          00:00:00 unionfs_siod/0
363    0    0  ?          00:00:00 crypto/0
:

```

show system routing-daemons

Displays active routing daemons.

Syntax

show system routing-daemons

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to display a list of active routing daemons.

Examples

[Example 3-51](#) shows output for **show system routing-daemons**.

Example 3-51 Displaying a list of active routing daemons

```
vyatta@R1:~$ show system routing-daemons
zebra ripd ripngd ospfd ospf6d bgpd
```

show system storage

Displays system file system usage and available storage space.

Syntax

show system storage

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to see how much storage space is currently being used by the system, and how much is free.

Examples

[Example 3-52](#) shows file system usage information for R1.

Example 3-52 Displaying file system and storage information

```
vyatta@R1:~$ show system storage
Filesystem      Size  Used Avail Use% Mounted on
rootfs          953M  287M  618M  32% /
udev            10M   28K   10M   1% /dev
/dev/hda1       953M  287M  618M  32% /
/dev/hda1       953M  287M  618M  32% /dev/.static/dev
tmpfs          126M   4.0K  126M   1% /dev/shm
/dev/hda2       9.7M   1.5M   7.8M  17% /config
vyatta@R1:~$
```

show system uptime

Displays information on how long the system has been running.

Syntax

show system uptime

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to see how long the system has been running, the number of users currently logged in, and the average system load.

Examples

[Example 3-53](#) shows file system usage information for R1.

Example 3-53 Displaying file system and storage information

```
vyatta@R1:~$ show system uptime
20:45:59 up 3:04, 2 users, load average: 0.00, 0.00, 0.00
vyatta@R1:~$
```

show system usb

Displays information about peripherals connected to the USB bus.

Syntax

show system usb

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to see which peripherals are connected to the USB bus.

Examples

[Example 3-54](#) shows system USB information for R1.

Example 3-54 Displaying USB peripheral information

```
vyatta@R1:~$ show system usb
Bus 001 Device 002: ID 0d49:7212 Maxtor
Bus 001 Device 001: ID 1d6b:0001 Linux Foundation 1.1 root hub
vyatta@R1:~$
```

show tech-support

Provides a consolidated report of system information.

Syntax

```
show tech-support [brief] [save [filename] | save-uncompressed [filename]]
```

Command Mode

Operational mode.

Parameters

brief	Displays a summary of “ show version ”, “ show configuration ”, “ show interfaces ”, “ show ip route ”, and “ show log ” commands.
save	<p>Saves the support information to a compressed (.gz) file. The file name takes the format hostname.tech-support.timestamp.gz, where <i>hostname</i> is the host name configured for the Vyatta device and <i>timestamp</i> is the time the file was saved in the format <i>YYYY-MM-DD-hhmmss</i>.</p> <p>For local files, a rotation mechanism is used to limit the number of output files to 100; that is, creating a 101st file causes the oldest file to be deleted.</p>
save-uncompressed	<p>Saves the support information to an uncompressed file. The file name takes the format hostname.tech-support.timestamp, where <i>hostname</i> is the host name configured for the Vyatta device and <i>timestamp</i> is the time the file was saved in the format <i>YYYY-MM-DD-hhmmss</i>.</p> <p>For local files, a rotation mechanism is used to limit the number of output files to 100; that is, creating a 101st file causes the oldest file to be deleted.</p>
<i>filename</i>	The name of the file to save the support information to. See “Usage Guidelines” below for further details.

Default

Information is sent to the console.

Usage Guidelines

Use this command to list a technical report providing consolidated information about system components and configuration.

NOTE Only 'admin' level users can run the command.

This information is valuable for debugging and diagnosing system issues. You should provide the technical report whenever you open a case with Vyatta - A Brocade Company technical support.

Tech support information can be saved to a hard disk (including a Flash disk or USB device), an FTP server, or an SCP server.

The default local tech support directory is **/config/support**.

If the *filename* is specified, the support information is saved to the file **filename.hostname.tech-support.timestamp**, where *hostname* is the host name configured for the Vyatta device and *timestamp* is the time the file was saved.

If an absolute path is prepended to filename, the file is saved in that location. Otherwise, the file is saved to a location relative to the default path, which is **/config/support** directory. An FTP or SCP server can also be specified.

The following table shows the syntax for file specification for different file locations.

Table 3-2 Specifying locations for the file

Location	Specification
An absolute path	Use standard UNIX file specification.
A relative path	Specify the path name relative to the default directory.
FTP server	Use the following syntax for <i>filename</i> : <code>ftp://<user>:<passwd>@<host>/<file></code> where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the FTP server, and <i>file</i> is the file name, including the path.
SCP server	Use the following syntax for <i>filename</i> : <code>scp://<user>:<passwd>@<host>/<file></code> where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the SCP server, and <i>file</i> is the file name, including the path.

Examples

Example 3-55 shows the first screen of a technical report.

Example 3-55 Displaying consolidated system information

```
vyatta@R1:~$ show tech-support
-----
Show Tech-Support
-----

-----
CONFIGURATION
-----

-----
Vyatta Version and Package Changes
-----
Version:      999.larkspurse.06200031
Description:  999.larkspurse.06200031
Copyright:    2006-2010 Vyatta, Inc.
Built by:     autobuild@vyatta.com
Built on:     Sun Jun 20 07:31:17 UTC 2010
Build ID:     1006200731-27ea461
Boot via:     image
Uptime:       16:28:05 up 9:56, 1 user, load average: 0.00, 0.00, 0.00

-----
Configuration File
-----
interfaces {
    ethernet eth0 {
        address 192.168.1.82/24
        duplex auto
    }
}
```

show version

Displays information about the version of system software.

Syntax

```
show version [all | added | deleted | downgraded | quagga | upgraded]
```

Command Mode

Operational mode.

Parameters

all	Show all packages that have been added, deleted, downgraded, or upgraded since the last baseline version upgrade.
added	Show all packages that have been upgraded since the last baseline version upgrade.
deleted	Show all packages that have been deleted since the last baseline version upgrade.
downgraded	Show all packages that have been downgraded since the last baseline version upgrade.
quagga	Shows the version of quagga code used in the system.
upgraded	Show all packages that have been upgraded since the last baseline version upgrade.

Default

A brief summary of version information is shown. Detailed information about constituent packages is not shown.

Usage Guidelines

Use this command to see what package changes have occurred since the last time a full version upgrade was performed.

The information shown is always with respect to the last full version upgrade. Therefore, for example:

- Immediately following a full version upgrade, issuing a **show version all** command will show no changes.
- If a package is added after upgrading, issuing a **show version all** will show the added package.
- However, if the added package is then deleted again, issuing a **show version all** will show no change, since the system is now in the same state as immediately after the full version upgrade.

Keep in mind that if you delete a package, packages depending on the deleted package are also removed.

Examples

[Example 3-56](#) shows sample output for the **show version** command used with no option.

Example 3-56 Displaying a summary of version information

```
vyatta@vyatta:~$ show version
Version : 888.islavista
Copyright: 2006-2008 Vyatta, Inc.
Built by : root@vyatta.com
Built on : Tue Oct 28 11:25:54 UTC 2008
Build ID : 2008-10-28-0749-f64e188
Boot via : livecd
Uptime : 01:29:58 up 1:30, 2 users, load average: 0.00, 0.00, 0.00
vyatta@vyatta:~$
```

[Example 3-57](#) shows the first page of sample output for the **show version all** command.

Example 3-57 Displaying software package version information

```
vyatta@vyatta:~$ show version all
Version : 888.islavista
Copyright: 2006-2008 Vyatta, Inc.
Built by : root@vyatta.com
Built on : Tue Oct 28 11:25:54 UTC 2008
Build ID : 2008-10-28-0749-f64e188
Boot via : livecd
Uptime : 01:29:58 up 1:30, 2 users, load average: 0.00, 0.00, 0.00

ADDED:
Aii aptitude 0.4.4-4
```



```
Aii libc6 2.3.6.ds1-13
Aii libdb4.4 4.4.20-8
Aii libexpat1 1.95.8-3.4
Aii libncurses5 5.5-5
Aii libnetaddr-ip-perl 3.14-2
Aii libpam0g 0.79-4
Aii libsasl2 2.1.22.dfsg1-8
Aii libtasn1-3 0.3.6-2
Aii libwrap0 7.6.dbs-13
Aii snmp 5.2.3-7
Aii supported-version 2.2
:
```

[Example 3-58](#) shows sample output for the **show version added** command.

Example 3-58 Displaying information about added software packages

```
vyatta@vyatta:~$ show version added
Version :      888.islavista
Copyright:    2006-2008 Vyatta, Inc.
Built by :    root@vyatta.com
Built on :    Tue Oct 28 11:25:54 UTC 2008
Build ID :    2008-10-28-0749-f64e188
Boot via :    livecd
Uptime   :    01:29:58 up  1:30,  2 users,  load average: 0.00, 0.00, 0.00
```

```
ADDED:
Aii aptitude 0.4.4-4
Aii libc6 2.3.6.ds1-13
Aii libdb4.4 4.4.20-8
Aii libexpat1 1.95.8-3.4
Aii libncurses5 5.5-5
Aii libnetaddr-ip-perl 3.14-2
Aii libpam0g 0.79-4
Aii libsasl2 2.1.22.dfsg1-8
Aii libtasn1-3 0.3.6-2
Aii libwrap0 7.6.dbs-13
Aii snmp 5.2.3-7
Aii supported-version 2.2
Aii sysvinit 2.86.ds1-38
Aii tasksel 2.66
Aii vyatta-bgp 1.4-9
Aii vyatta-cli 2.1.1-9
Aii vyatta-config-migrate 2.1.1-4
Aii vyatta-dhcp-support 2.1.1-4
Aii vyatta-firewall 1.4-9
```

```
Aii vyatta-nat 2.1.1-5
Aii vyatta-nat-cli 2.1.1-4
Aii vyatta-nat-xorp 2.1.1-3
Aii vyatta-ospf 1.4-9
Aii vyatta-rip 1.4-9
Aii vyatta-xg 1.4-9
Aii zlib1g 1.2.3-13
:
```

system console device <device>

Defines the specified device as a system console.

Syntax

```
set system console device device [speed speed] [modem]
delete system console device device [speed] [modem]
show system console device device
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  console {
    device device {
      speed speed
      modem
    }
  }
}
```

Parameters

<i>device</i>	Multi-node. The name of the console device. Supported values are as follows: ttySN : The serial device name. ttyUSBX : The USB serial device name. hvc0 : The Xen console. ttyS0 : The serial port device.
<i>speed</i>	The speed (baudrate) of the console device. Supported values are: 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200. The default is 9600.
modem	Indicates that the port is connected to the serial console via a Hayes compatible modem.

Default

Device **ttyS0** is configured with a speed of **9600**.

Usage Guidelines

Use this command to specify configuration for a system console.

Changes take effect the next time a user logs on via the device, NOT when the configuration is **committed**.

Standard VGA consoles (tty0-tty9) always exist and are not controlled by this configuration.

Bootup messages are limited to ttyS0. Other consoles can be configured but will not receive these messages.

Changing the speed of serial devices does not affect the system BIOS.

Use the **set** form of this command to specify configuration for a system console.

Use the **delete** form of this command to remove a system console device.

Use the **show** form of this command to view system console configuration.

system console network <device>

Sends console messages to a remote system.

Syntax

```
set system console network device [interface ethx][local [address ipv4][port
port]][remote [address ipv4][mac macaddr][port port]]
delete system console network device [interface][local [address][port]][remote
[address][mac][port]]
show system console network device [interface][local [address][port]][remote
[address][mac][port]]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  console {
    network device {
      interface ethx
      local {
        address ipv4
        port port
      }
      remote {
        address ipv4
        mac macaddr
        port port
      }
    }
  }
}
```

Parameters

<i>device</i>	Multi-node. The name of the remote console device (e.g. netcon00).
<i>ethx</i>	Mandatory. The Ethernet interface to send the console messages out.

local address <i>ipv4</i>	The IPv4 address to use as the source address. The address must be configured on the interface specified.
local port <i>port</i>	The port to use as the source port. The range is 1 to 65535. The default is 6665.
remote address <i>ipv4</i>	The IPv4 address of the destination system.
remote mac <i>macaddr</i>	The MAC address of the destination system.
remote port <i>port</i>	The port on the destination system. The range is 1 to 65535. The default is 6666.

Default

Console messages are sent as a broadcast if no remote address is specified.

Usage Guidelines

Use this command to send console messages to a remote system over UDP.

Use the **set** form of this command to create a network console.

Use the **delete** form of this command to remove a network console.

Use the **show** form of this command to view network console configuration.

system console powersave

Enables blank screen powersaving on VGA console screens.

Syntax

```
set system console powersave
delete system console powersave
show system console
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  console {
    powersave
  }
}
```

Parameters

None.

Default

Blank screen powersaving is not enabled on a VGA console.

Usage Guidelines

Use this command to enable blank screen powersaving on a VGA console. After 15 minutes of inactivity the screen will go blank. After 60 minutes, the monitor will power down.

Use the **set** form of this command to enable blank screen powersaving on a VGA console.

Use the **delete** form of this command to return the system to its default behavior.

Use the **show** form of this command to view console configuration.

system domain-name <domain>

Sets the system's domain.

Syntax

```
set system domain-name domain
delete system domain-name
show system domain-name
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    domain-name domain
}
```

Parameters

<i>domain</i>	Mandatory. The domain where the system resides, for example, vyatta.com . The format is a string containing letters, numbers, hyphens (“-”) and one period. The domain name can be a maximum of 253 characters.
---------------	--

Default

None.

Usage Guidelines

Use this command to set the system's domain.

Note that both **domain-name** and **domain-search** cannot be configured simultaneously—they are mutually exclusive.

Use the **set** form of this command to specify the domain name to be used by the system.

Use the **delete** form of this command to remove the domain name.

Use the **show** form of this command to view domain name configuration.

system domain-search domain <domain>

Defines a set of domains for domain completion.

Syntax

```
set system domain-search domain domain
delete system domain-search domain domain
show system domain-search domain
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    domain-search {
        domain domain
    }
}
```

Parameters

<i>domain</i>	<p>Mandatory. Multi-node. The domain name to be added to or deleted from the list of domains in the search order string. The format is a string specifying a domain; for example, vyatta.com. Letters, numbers, hyphens (“-”) and one period (“.”) are allowed. The domain name can be a maximum of 253 characters.</p> <p>You can specify up to 6 domains by creating up to 6 domain-search multi-nodes.</p>
---------------	---

Default

None.

Usage Guidelines

Use this command to list up to 6 domains to be searched in DNS lookup requests.

When the system receives an unqualified host name, it attempts to form a Fully Qualified Domain Name (FQDN) by appending the domains in this list to the host name. The system tries each domain name in turn, in the order in which they were configured. If none of the resulting FQDNs succeeds, the name is not resolved and an error is reported.

Note that both **domain-name** and **domain-search** cannot be configured simultaneously—they are mutually exclusive.

Use the **set** form of this command to add a domain to the search list. Note that you cannot use **set** to change a domain name in the list. To replace an incorrect domain, delete it and replace it with a new one.

Use the **delete** form of this command to remove a domain name from the list.

Use the **show** form of this command to view the list of domain names.

system gateway-address <address>

Specifies the default gateway for the system.

Syntax

```
set system gateway-address address
delete system gateway-address
show system gateway-address
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    gateway-address address
}
```

Parameters

<i>address</i>	Mandatory. The IPv4 address of the default gateway.
----------------	---

Default

None.

Usage Guidelines

Use this command to set the location of the default gateway.

The default gateway is the location where packets are routed when the destination does not match any specific routing entries. Only one default gateway can be set per system.

Use the **set** form of this command to specify the address of default gateway.

Use the **delete** form of this command to remove the default gateway. Note that, in most cases, traffic cannot be routed correctly if a default gateway is not specified.

Use the **show** form of this command to view the address of the default gateway.

system host-name <name>

Sets the host name for the system.

Syntax

```
set system host-name name
delete system host-name
show system host-name
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    host-name name
}
```

Parameters

<i>name</i>	The name you want to give the system. Letters, numbers, and hyphens (“-”) only are allowed. The default is “vyatta”. If you delete the host name, or if you try to delete the system node, the host name reverts to the default.
-------------	--

Default

By default, the host name is preconfigured to “vyatta”. If you delete the host name, or if you delete the **system** node, the default values are restored.

Usage Guidelines

Use this command to specify a host name for the system.

When you set this value, the command prompt changes to reflect the new host name. To see the change in the prompt, you must log out of the system shell and log back in again.

Use the **set** form of this command to modify the host name.

Use the **delete** form of this command to restore the default host name (“vyatta”).

Use the **show** form of this command to view host name configuration.

system name-server <address>

Specifies the DNS name servers available to the system.

Syntax

```
set system name-server address
delete system name-server address
show system name-server
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    name-server address {}
}
```

Parameters

<i>address</i>	Multi-node. The IPv4 or IPv6 address of a DNS name server to use for local name query requests. You can specify multiple DNS name servers by creating multiple instances of the name-server configuration node.
----------------	---

Default

None.

Usage Guidelines

Use this command to specify domain name servers (DNS) for the system.

Use the **set** form of this command to define a name server for the system. Note that you cannot modify a DNS name server entry using the **set** command. To replace a name server entry, delete the entry and create a new one.

Use the **delete** form of this command to remove a name server.

Use the **show** form of this command to view the name servers that have been defined.

system ntp server <name>

Specifies the NTP servers to use when synchronizing the system's clock.

Syntax

```
set system ntp server server
delete system ntp server server
show system ntp server
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  ntp {
    server server
  }
}
```

Parameters

<i>server</i>	Multi-node. The IP address or host name of an NTP server. The system will automatically obtain the system date and time from the specified server(s). You can specify multiple NTP servers by creating multiple instances of the ntp server configuration node.
---------------	---

Default

By default, the system uses the NTP server at **0.vyatta.pool.ntp.org**.

Usage Guidelines

Use this command to specify NTP servers for the system.

Use the **set** form of this command to specify an NTP server for the system. Note that you cannot modify an NTP server entry using the **set** command. To replace an NTP server entry, delete the entry and create a new one.

Use the **delete** form of this command to remove an NTP server.

Use the **show** form of this command to view the NTP servers that have been defined.

system options reboot-on-panic <value>

Allows you set system behavior on system panic.

Syntax

```
set system options reboot-on-panic value
delete system options reboot-on-panic
show system options reboot-on-panic
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  options {
    reboot-on-panic value
  }
}
```

Parameters

<i>value</i>	Mandatory. Indicates whether or not the system should automatically reboot if a kernel panic occurs. Supported values are as follows: true: The system reboots if a kernel panic occurs. false: The system does not reboot if a kernel panic occurs.
--------------	--

Default

The default is **true**.

Usage Guidelines

Configuring the system not to reboot on kernel panic allows you to examine information that might help you determine the cause of the panic.

Use the **set** form of this command to specify whether or not to reboot on kernel panic.

Use the **delete** form of this command to restore this option to its default value.

Use the **show** form of this command to view configuration for this option.

system static-host-mapping host-name <name>

Defines a static mapping between a host name and an IP address.

Syntax

```
set system static-host-mapping host-name name [inet address | alias alias]  
delete system static-host-mapping host-name name [inet | alias]  
show system static-host-mapping host-name name [inet | alias]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {  
    static-host-mapping {  
        host-name name {  
            inet address  
            alias alias {}  
        }  
    }  
}
```

Parameters

<i>name</i>	<p>Multi-node. The Fully Qualified Domain Name (FQDN) name being statically mapped to an IP address (for example, router1@mydomain.com). Letters, numbers, periods (“.”) and hyphens (“-”) only are allowed.</p> <p>You can define multiple mappings by creating multiple host-name configuration nodes.</p>
<i>address</i>	<p>Mandatory. The IPv4 address of the interface being statically mapped to the host name.</p>
<i>alias</i>	<p>Optional. Multi-node. An alias for the interface. Letters, numbers, and hyphens are allowed.</p> <p>You can define multiple aliases for a host by creating multiple alias configuration nodes.</p>

Default

None.

Usage Guidelines

Use this command to statically map a host name to an IP address and one or more aliases.

Use the **set** form of this command to create a new static mapping between a host name and an IP address, assign an address, or specify an alias. Note that you cannot use **set** to change the host name. To change the host name, delete the mapping entry and create a new one with the correct host name.

Use the **delete** form of this command to remove a static mapping, an address, or an alias.

Use the **show** form of this command to view a static mapping, an address, or an alias.

system time-zone <zone>

Sets the time zone for the local system clock.

Syntax

```
set system time-zone zone
```

```
delete system time-zone
```

```
show system time-zone
```

Command Mode

Configuration mode.

Configuration Statement

```
system {  
    time-zone zone  
}
```

Parameters

<i>zone</i>	A string representing the time zone. The format is Region/Location , for example, US/Pacific . Use command completion (i.e. the <Tab> key) to display the various options.
-------------	---

Default

The default is **GMT** (Greenwich Mean Time).

Usage Guidelines

Use this command to set the time zone for the local system clock. To do this, you specify a Region and Location in the format **Region/Location**. Note that both Region and Location are case sensitive. Use command completion (i.e. the <Tab> key) to display the various options.

In addition to the wide range of Region/Locations available, backwards compatibility is achieved by using **Etc/<offset>** and **SystemV/<offset>** as **Region/Location**. Note that **Etc/<offset>** uses Posix-style offsets. These use positive

signs to indicate west of Greenwich rather than east of Greenwich as many systems do. For example, **Etc/GMT+8** corresponds to 8 hours behind UTC (that is, west of Greenwich).

Use the **set** form of this command to set the time zone for the first time, or to change the time zone setting.

Use the **delete** form of this command to remove the time zone setting. This restores the time zone to the default (GMT).

Use the **show** form of this command to view the time zone setting.

Chapter 4: IPv6

This chapter describes commands for enabling IPv6 functionality on the system.

The following topics are covered:

- [IPv6 Overview](#)
- [IPv6 Configuration](#)
- [IPv6 System Commands](#)

IPv6 Overview

The Vyatta system includes extensive support for IPv6. An overview of Vyatta's support for IPv6 is available in the *Vyatta IPv6 Support Reference Guide*.

IPv6 Configuration

Examples for configuring basic IPv6 functionality can be found in the *Vyatta IPv6 Support Reference Guide*.

IPv6 System Commands

This section contains the following commands.

Configuration Commands	
System Commands	
<code>system ipv6 blacklist</code>	Disables IPv6 on the system.
<code>system ipv6 disable</code>	Disables assignment of IPv6 addresses on all interfaces.
<code>system ipv6 disable-forwarding</code>	Disables IPv6 forwarding on all interfaces.
<code>system ipv6 strict-dad</code>	Disables IPv6 operation on an interface when DAD fails for a link-local address.
Operational Commands	
System Management	
<code>reset ipv6 neighbors address <ipv6></code>	Resets a specific IPv6 address from the IPv6 ND cache.
<code>reset ipv6 neighbors interface <ethx></code>	Resets the system's IPv6 ND cache for a specific interface.
<code>show ipv6 neighbors</code>	Displays the system's IPv6 ND cache.

reset ipv6 neighbors address <ipv6>

Resets a specific IPv6 address from the IPv6 ND cache.

Syntax

```
reset ipv6 neighbors address ipv6
```

Command Mode

Operational mode.

Parameters

<i>ipv6</i>	Resets the ND (Neighbor Discovery) cache of the specified IPv6 address.
-------------	---

Default

None.

Usage Guidelines

Use this command to remove entries associated with a specific IPv6 address from the Neighbor Discovery cache.

reset ipv6 neighbors interface <ethx>

Resets the system's IPv6 ND cache for a specific interface.

Syntax

```
reset ipv6 neighbors interface ethx
```

Command Mode

Operational mode.

Parameters

<i>ethx</i>	Resets the entire IPv6 ND cache for the specified Ethernet interface. The range of values is eth0 to eth23 .
-------------	--

Default

None.

Usage Guidelines

Use this command to remove entries associated with an Ethernet interface from the IPv6 Neighbor Discovery (ND) cache.

show ipv6 neighbors

Displays the system's IPv6 ND cache.

Syntax

```
show ipv6 neighbors
```

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to display the system's IPv6 ND (Neighbor Discovery) cache.

[Table 4-1](#) shows possible ND states.

Table 4-1 ND states

State	Description
incomplete	Address resolution is currently being performed on this neighbor entry. A neighbor solicitation message has been sent but a reply has not yet been received.
reachable	Address resolution has determined that the neighbor is reachable. Positive confirmation has been received and the path to this neighbor is operationable.
stale	More than the configured elapsed time has passed since reachability confirmation was received from this neighbor.
delay	More than the configured elapsed time has passed since reachability confirmation was received from this neighbor. This state allows TCP to confirm the neighbor. If not, a probe should be sent after the next delay time has elapsed.

Table 4-1 ND states

State	Description
probe	A solicitation has been sent and the router is waiting for a response from this neighbor.
failed	Neighbor reachability state detection failed.
noarp	The neighbor entry is valid. There will be no attempts to validate it but it can be removed from the cache when its lifetime expires.
permanent	The neighbor entry is valid indefinitely and should not be cleared from the cache.
none	No state is defined.

system ipv6 blacklist

Disables IPv6 on the system.

Syntax

```
set system ipv6 blacklist
delete system ipv6 blacklist
show system ipv6
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    ipv6 {
        blacklist
    }
}
```

Parameters

None.

Default

IPv6 is enabled on the system.

Usage Guidelines

Use this command to disable IPv6 on the system.

CAUTION *Using this command may affect other parts of the system that depend on kernel functions related to IPv6. Do not use this command unless it is specifically required in your environment.*

Use the **set** form of this command to disable IPv6 on the system.

Use the **delete** form of this command to enable IPv6 on the system.

Use the **show** form of this command to display IPv6 blacklist configuration.

system ipv6 disable

Disables assignment of IPv6 addresses on all interfaces.

Syntax

```
set system ipv6 disable
delete system ipv6 disable
show system ipv6 disable
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    ipv6 {
        disable
    }
}
```

Parameters

None.

Default

IPv6 addresses are assigned on all interfaces.

Usage Guidelines

Use this command to disable the assignment of IPv6 addresses on all interfaces.

Use the **set** form of this command to disable IPv6 address assignment on all interfaces.

Use the **delete** form of this command to enable IPv6 address assignment on all interfaces.

Use the **show** form of this command to display IPv6 disabling configuration.

system ipv6 disable-forwarding

Disables IPv6 forwarding on all interfaces.

Syntax

```
set system ipv6 disable-forwarding
delete system ipv6 disable-forwarding
show system ipv6 disable-forwarding
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    ipv6 {
        disable-forwarding
    }
}
```

Parameters

None.

Default

IPv6 packets are forwarded.

Usage Guidelines

Use this command to disable IPv6 forwarding on all interfaces. IPv6 forwarding can also be disabled on a per interface basis using the **ipv6 disable-forwarding** command associated with the interface (e.g. **interfaces ethernet eth0 ipv6 disable-forwarding**). These commands are documented in the guides describing the individual interfaces. For example, Ethernet interface commands are described in the *Vyatta LAN Interfaces Reference Guide*.

Use the **set** form of this command to disable IPv6 packet forwarding on all interfaces.

Use the **delete** form of this command to enable IPv6 packet forwarding on all interfaces.

Use the **show** form of this command to display IPv6 packet forwarding configuration.

system ipv6 strict-dad

Disables IPv6 operation on an interface when DAD fails for a link-local address.

Syntax

```
set system ipv6 strict-dad
delete system ipv6 strict-dad
show system ipv6 strict-dad
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    ipv6 {
        strict-dad
    }
}
```

Parameters

None.

Default

IPv6 operation is not disabled on an interface where Duplicate Address Detection (DAD) fails for a link-local address.

Usage Guidelines

Use this command to disable IPv6 operation on an interface where Duplicate Address Detection fails for a link-local address.

Link-local addresses are formed from an interface identifier that is partly derived from a device's hardware address, which is assumed to be uniquely assigned.

By default, the duplicate address is not assigned to the interface but IPv6 continues to operate. This command disables IPv6 on the interface when a duplicate of the link-local address is detected.

Use the **set** form of this command to disable IPv6 operation on an interface when DAD fails for a link-local address.

Use the **delete** form of this command to leave IPv6 operational on an interface when DAD fails for a link-local address.

Use the **show** form of this command to display DAD failure configuration.

Chapter 5: User Management

This chapter explains how to set up user accounts and user authentication.

This chapter presents the following topics:

- [User Management Configuration](#)
- [User Management Commands](#)

User Management Configuration

This section presents the following topics:

- [User Management Overview](#)
- [Creating “Login” User Accounts](#)
- [Configuring for a RADIUS Server](#)
- [Configuring for a TACACS+ Server](#)
- [Configuring for SSH Access using Shared Public Keys](#)

User Management Overview

This system presents the following topics:

- [Login Authentication](#)
- [RADIUS Authentication](#)
- [TACACS+ Authentication](#)
- [Order of Authentication](#)
- [SSH Access using Shared Public Keys](#)

The Vyatta system supports all of the following methods of authentication:

- Role-based user account management through a local user database (“login” authentication)
- Remote Authentication Dial In User Service (RADIUS) authentication server
- Terminal Access Control Access-Control System Plus (TACACS+) authentication server
- SSH access using a shared public key for authentication

Login Authentication

The system creates a single login user account by default: user **vyatta** with password **vyatta**. It is highly recommended that, for security reasons, this password be changed.

If no RADIUS or TACACS+ server has been configured, the system authenticates users with the password configured using the [system login user <user> authentication](#) command.

NOTE The Vyatta system supports only local authentication for IPv6. RADIUS and TACACS+ are not supported for IPv6.

You can change user account information using lower-level operating system commands, but changes made in this way do not persist across reboots. For persistent changes to user account information, use the Vyatta CLI.

Note that, in the Vyatta system, the Linux `passwd` command can only be used by administrative users.

The `login` configuration node is a mandatory node. It is created automatically with default information when the system is first started. If this node is subsequently deleted, the system recreates it with default information when restarted.

Login user passwords are supplied in plain text. After configuration is committed, the system encrypts them and stores the encrypted version internally. When you display user configuration, only the encrypted version of the password is displayed.

Note that the login authentication prompt has a total timeout interval of 60 seconds. The sum of all timeout intervals must fall within that limit; otherwise—that is, if cumulative RADIUS and TACACS+ server timeout intervals exceed 60 seconds—the login process will time out and must be repeated.

RADIUS Authentication

RADIUS servers are used only to authenticate user passwords. Using RADIUS authentication does not affect a user's configured privilege level. RADIUS authentication is not supported for IPv6.

To configure RADIUS, you specify the location of the RADIUS server and specify the secret to be used to authenticate the user on the RADIUS server. RADIUS secrets are specified in plain text. They are stored in plain text on the system, and used as part of a cryptographic operation for transferring authentication information securely over the network. When you view RADIUS secrets, they are displayed in plain text. RADIUS secrets must not contain spaces and are case-sensitive.

Where RADIUS authentication is used, some delay can be expected; the amount of delay depends on the cumulative timeout values configured for all RADIUS servers.

If you are using RADIUS authentication, the users must still be configured in the Vyatta login database; otherwise, the user is not able to access the Vyatta system and therefore is not able to query the RADIUS server.

TACACS+ Authentication

This section presents the following topics:

- [Using TACACS+ Alone](#)
- [Using TACACS+ and the Vyatta System Together](#)
- [Mapping Vyatta User IDs To TACACS+ Usernames](#)

- [Specifying authentication level in TACACS+](#)
- [Connection Type Information Sent to TACACS+](#)
- [Troubleshooting TACACS+ Authentication Issues](#)

TACACS+ is a distributed access control system for routers providing authentication, authorization, and accounting. TACACS+ authentication is not supported for IPv6.

To configure TACACS+, you specify the location of the TACACS+ server and specify the secret to be used to authenticate the user on the TACACS+ server. TACACS+ secrets are specified in plain text. TACACS+ secrets are stored in plain text on the system, and used as part of a cryptographic operation for transferring authentication information securely over the network. When you view TACACS+ secrets, they are displayed in plain text. TACACS+ secrets must not contain spaces and are case-sensitive.

Where TACACS+ authentication is used, some delay can be expected as the TACACS+ server is queried; the amount of delay depends on the cumulative timeout values configured for all TACACS+ servers.

Unlike RADIUS, TACACS+ authentication does not require prior authentication in the Vyatta system's login database: a TACACS+ server can be used either as the only authentication server or as a supplement the Vyatta system, providing password authentication.

USING TACACS+ ALONE

If no local login user accounts are configured, user accounts on the TACACS+ system share local system account information from the default account (**tacplus-operator**). These users are given operator-level permissions. Administrator accounts share permissions with TACACS+ administrators (**tacplus-admin**).

USING TACACS+ AND THE VYATTA SYSTEM TOGETHER

If local login user accounts on the Vyatta system also exist with the same user name on the TACACS+ server, both systems use the TACACS+ server to provide authentication, authorization, and accounting services. In this case, system account information is obtained from the local user database but the TACACS+ server is used to authorize access. If the TACACS+ server is unavailable, the local Vyatta system is used to authorize access.

MAPPING VYATTA USER IDs TO TACACS+ USERNAME

You can map a Vyatta local user ID to a different username recorded on a TACACS+ server. The mapping is specified on the TACACS+ server.

For example, to map username **tac-user** on the TACACS+ server to username **vyatta-user** on the local Vyatta system, the (partial) configuration on the TACACS+ server would look as follows:

```
user = tac-user {  
    default service = permit  
    login = des "aXcnmMELgIKQQ" #vyatta  
    service = vyatta-exec {  
        local-user-name = "vyatta-user"  
    }  
}
```

Logging in to the local Vyatta system using the account ID **tac-user** would actually log the user on to the Vyatta system as **vyatta-user**.

SPECIFYING AUTHENTICATION LEVEL IN TACACS+

By default, TACACS+ authorized users on the Vyatta system are given operator-level access. However, you can specify the authentication level for individual TACACS+ authorized users on the local Vyatta system. Like the mapping of user IDs, this configuration is specified on the TACACS+ server, as in the following example:

```
user = administrator {  
    default service = permit  
    login = cleartext "vyatta"  
    service = vyatta-exec {  
        level = "admin"  
    }  
}
```

Logging in to the local Vyatta system as user **administrator** in this instance will provide admin-level access.

CONNECTION TYPE INFORMATION SENT TO TACACS+

The Vyatta system will send different connection type information via the TACACS+ protocol based on the type of connection the user is accessing the Vyatta system by.

Table 5-1 Protocol values sent to TACACS+ based on connection type.

Connection type	Protocol value sent to TACACS+
via console	login
via ssh	sshd
via telnet	telnet

This information can be used to restrict how certain user types are allowed to access the system. For example, it is possible to restrict administrators to only login via the physical console rather than remotely via ssh or telnet.

TROUBLESHOOTING TACACS+ AUTHENTICATION ISSUES

Because TACACS+ requires a secret, data is encrypted and therefore debugging authentication problems can be difficult. Tools such as **tshark** can be used, provided that the secret is known.

For example, to debug a TACACS+ authentication problem using **tshark**, given a secret of “mysecret” on the well-known TACACS+ port (“tacacs” which is port 43), you would use either of the following commands:

```
tshark -o tacplus.key:mysecret tcp port tacacs  
tshark -o tacplus.key:mysecret tcp port 43
```

Order of Authentication

By default, the system looks first for configured TACACS+ servers, then for configured RADIUS servers, and finally in the local user database. If a server configuration is found, the system queries the first configured server of that type using the configured secret. After the query is validated, the server authenticates the user from information in its database.

TACACS+ and RADIUS servers are queried in the order in which they were configured. If a query times out, the next server in the list is queried. If all queries fail, the system attempts to authenticate the user through the local Vyatta authentication database. If local authentication fails, the access attempt is rejected.

NOTE The login process itself has a 60-second timeout value. If a user cannot be authenticated in this time by a configured authentication server, then the login attempt will time out.

If the system is configured for TACACS+ and a user is configured on it as well as on the local user database, if the user fails authentication on TACACS+, the login attempt fails. The local user database is only used in cases where the user does not exist on the TACACS+ server or the TACACS+ server becomes unavailable.


SSH Access using Shared Public Keys

Remote access to the Vyatta system is typically accomplished through either Telnet or SSH. For either of these methods, passwords can be authenticated using the local login user database, a RADIUS server, or a TACACS+ server, as described above. SSH is typically used where a secure session is required. One potential problem with password authentication, even using SSH, is that password authentication is susceptible to brute force password guessing. An alternative to password authentication, which mitigates this risk, is to authenticate SSH users using shared public keys. With this method, a private and public key pair are generated (typically using the Linux `ssh-keygen` command) on a remote system. The public key file (typically with a `.pub` extension) is loaded into the login configuration for the user that will be accessing the system with it using the `loadkey` command. In addition, the Vyatta system must be configured to disable password authentication for SSH (see the *Vyatta Services Reference Guide*). So, SSH users can be authenticated using passwords or shared public keys, but not both.

Creating “Login” User Accounts

In this section, a sample configuration is presented for a user account that will be validated using the local user database. The sample configuration used is shown in [Figure 5-1](#).

Figure 5-1 “Login” User Account

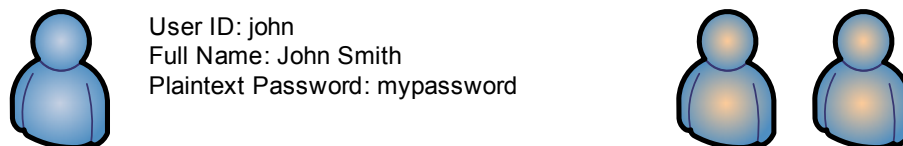

This section includes the following example:

- Example 5-1 Creating a “login” user account

Example 5-1 creates a user account for **John Smith**. John has a user ID of **john** and will use a plain text password of **mypassword**. Note that once configuration has been committed, only the encrypted version of the password displays when configuration is shown.

NOTE User information can be changed through the UNIX shell (providing you have sufficient permissions). However, any changes to Vyatta system user accounts or authentication through the UNIX shell will be overwritten the next time you commit Vyatta system CLI configuration.

To create a login user account, perform the following steps in configuration mode.


Example 5-1 Creating a “login” user account

Step	Command
Create the user configuration node, define the user ID, and give the user’s full name.	<code>vyatta@R1# set system login user john full-name “John Smith”</code>
Specify the user’s password in plain text.	<code>vyatta@R1# set system login user john authentication plaintext-password mypassword</code>
Commit the change. After a password has been committed, it can be displayed only in encrypted form, as the value of the encrypted-password attribute.	<code>vyatta@R1# commit</code>
Show the contents of the system login configuration node.	<pre>vyatta@R1# show system login user vyatta { authentication { encrypted-password \$1\$\$ZbzUPUD24iyfRwCKIT16q0 } } user john { authentication encrypted-password \$1\$\$Ht7gBYnxI1xCd0/JOnodh. plaintext-password "" } full-name "John Smith" }</pre>

Configuring for a RADIUS Server

This section provides a sample configuration for configuring a RADIUS authentication server, as shown below.

Figure 5-2 RADIUS Server Configuration

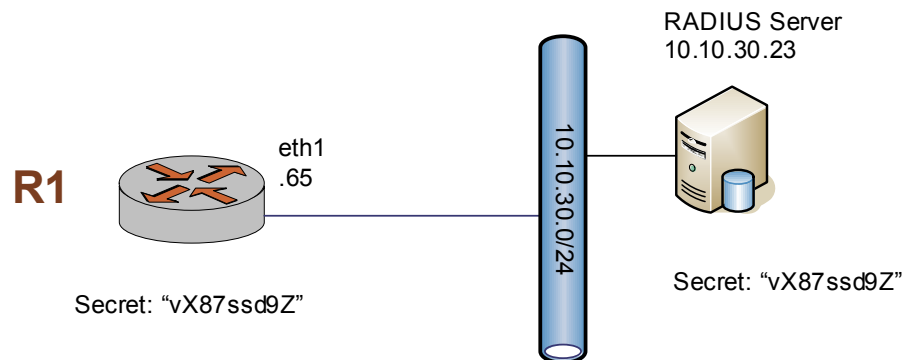

The example defines a RADIUS authentication server at IP address 10.10.30.23. The system is to access the RADIUS server using a secret of **vX87ssd9Z**. Configuring the server address and the secret are the minimal configuration requirements. The port and timeout values can be changed if required.

NOTE You should take some thought selecting the shared secret, since it is this string that prevents snooping attacks on passwords. Since this value is used on every packet, it is important to choose a value that makes brute force attacks more difficult; this key should be harder to guess than any password on the system.

To define this RADIUS server, perform the following steps in configuration mode.


Example 5-2 Configuring for a RADIUS server

Step	Command
Provide the location of the server, and the secret to be used to access it.	vyatta@R1# set system login radius-server 10.10.30.23 secret vX87ssd9Z
Commit the change.	vyatta@R1# commit
Save the configuration so that the changes persist after reboot.	vyatta@R1# save Saving configuration to '/config/config.boot'... Done
Show the contents of the system radius-server configuration node.	vyatta@R1# show system radius-server radius-server 10.10.30.23 { secret vX87ssd9Z }

Configuring for a TACACS+ Server

This section provides an example of configuring for a TACACS+ authentication server, as shown below.

Figure 5-3 TACACS+ Server Configuration

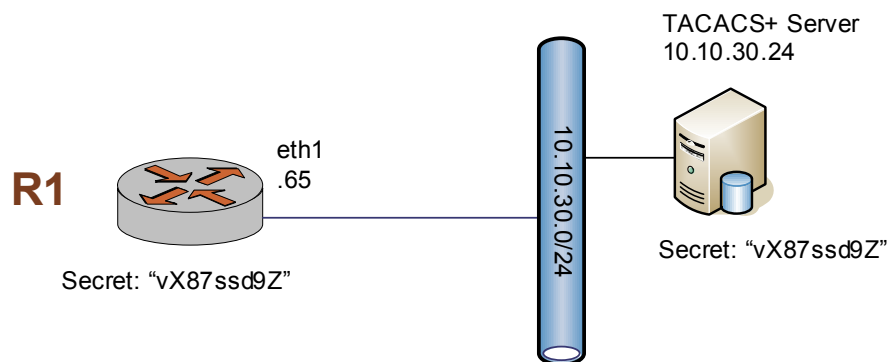

The example defines a TACACS+ authentication server at IP address 10.10.30.24. The system is to access the TACACS+ server using a secret of **vX87ssd9Z**. Configuring the server address and the secret are the minimal configuration requirements. The port and timeout values can be changed if required.

NOTE You should take some thought selecting the shared secret, since it is this string that prevents snooping attacks on passwords. Since this value is used on every packet, it is important to choose a value that makes brute force attacks more difficult; this key should be harder to guess than any password on the system

To define a TACACS+ server, perform the following steps in configuration mode.


Example 5-3 Configuring for a TACACS+ server

Step	Command
Provide the location of the server, and the secret to be used to access it.	vyatta@R1# set system login tacplus-server 10.10.30.24 secret vX87ssd9Z
Commit the change.	vyatta@R1# commit
Save the configuration so that the changes persist after reboot.	vyatta@R1# save Saving configuration to '/config/config.boot'... Done
Show the contents of the system tacplus-server configuration node.	vyatta@R1# show system tacplus-server tacplus-server 10.10.30.24 { secret vX87ssd9Z }

Configuring for SSH Access using Shared Public Keys

This section provides an example of configuring SSH access using shared public keys, as shown below.

Figure 5-4 SSH access using shared public keys

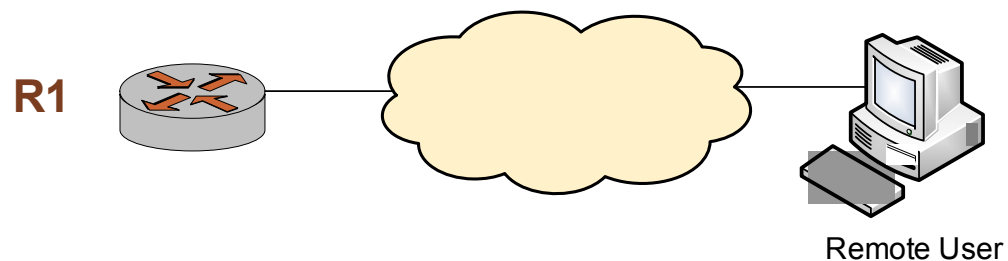

The example configures a Vyatta system for SSH access using shared public keys for authentication and disables password authentication (though disabling password authentication is not a prerequisite to using shared public keys for authentication). In this case the user **John Smith** (username = **john**) already exists on the system. Also, the public key (**xxx.pub**) has been previously generated (using the Linux command **ssh-keygen**) and is located in a directory owned by user **j2** on **xyz.abc.com**.

To configure for SSH access using shared public keys, perform the following steps in configuration mode.

Example 5-4 Configuring for SSH access using shared public keys

Step	Command
Set the system to disable password authentication for SSH. Note that this step is not strictly necessary but required if users are only to use shared public key authentication.	<code>vyatta@R1# set service ssh disable-password-authentication</code>
Commit the change.	<code>vyatta@R1# commit</code>
Display the change.	<code>vyatta@R1# show service ssh disable-password-authentication</code>

Example 5-4 Configuring for SSH access using shared public keys

Step	Command
Load the shared public key (xxx.pub) from the system where it is located and associate it with user john . In this case it is located on xyz.abc.com in a directory owned by user j2 .	<pre>vyatta@R1# loadkey john scp://j2@xyz.abc.com/home/j2/.ssh/xxx.pub Enter host password for user 'j2': ##### 100.0% Done</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Save the configuration so that the changes persist after reboot.	<pre>vyatta@R1# save Saving configuration to '/config/config.boot'... Done</pre>
Display the change.	<pre>vyatta@R1# show system login user vyatta { authentication { encrypted-password \$1\$\$ZbzUPUD24iyfRwCKIT16q0 } } user john { authentication encrypted-password \$1\$\$Ht7gBYnxI1xCd0/JOnodh. plaintext-password "" public-keys j2@xyz.abc.com { key AAAAB3NzaC1yc2EAAAABIwAAAIEAqaCtQr8hr6iUEvvQD3hGyryR5k+/UjF RFrHbqHNhjd1YviXveVXoZrKAKHtANRp5E+j4WZMbSd4oYt9P9lFevyZv3 xmdZE+ukuP1QBBAUnL29k1FtJ+G7I5tXGun9VR07JzUpEb8/KP1U4ajYC1c 3HxpOLpu5AU5u7jvKu/wA0= type ssh-rsa } } full-name "John Smith" }</pre>

User Management Commands

Configuration Commands	
loadkey	Loads a shared public key for an SSH user.
show login	Displays current user's login credentials.
system login	Creates the configuration node for user management and authentication.
system login banner post-login <banner>	Specifies the post-login banner.
system login banner pre-login <banner>	Specifies the pre-login banner.
system login radius-server <address>	Defines a RADIUS server for user authentication.
system login tacplus-server <address>	Defines a TACACS+ server for user authentication.
system login user <user>	Creates a user account.
system login user <user> authentication	Sets an authentication password for a user.
system login user <user> authentication public-keys	Specifies parameters for SSH shared public key user authentication.
system login user <user> full-name <name>	Allows you to record a user's full name.
system login user <user> group <group>	Allows you to make a user a member of a group.
system login user <user> home-directory <dir>	Allows you to specify a user's home directory.
system login user <user> level <level>	Specifies a user's privilege level and system access.
system tacplus-options command-accounting	Enables logging accounting records for interactive shell commands.
Operational Commands	
show system login users	Displays user account information.
show users	Shows which users are currently logged on to the system.

loadkey

Loads a shared public key for an SSH user.

Syntax

`loadkey user file-name`

Command Mode

Configuration mode.

Configuration Statement

None.

Parameters

<i>user</i>	The name of the user to associate the shared public key with. The user must already be defined on the Vyatta system.
<i>file-name</i>	The name of the shared public key file, including the full path to its location. Shared public key files are typically generated on the remote system using the Linux ssh-keygen command and have a .pub extension. Their contents include the authentication type (for example, ssh-rsa or ssh-dsa), the key value string, and the remote system user id (for example, john@abc.com).

Default

None.

Usage Guidelines

Use this command to load a shared public key for SSH from a file into the **public-keys** configuration for a user (see “[system login user <user> authentication public-keys](#)” on page 238). This saves having to manually enter the shared public key.

NOTE This command can only be run if there are no uncommitted changes.

The shared public key, generated on the remote system, can be loaded from a hard disk (including a Flash disk or USB device), a TFTP server, an FTP server, an SCP server, or an HTTP server.

If a public key is loaded that contains a remote system user id that is the same as an existing **public-keys** name for a user, the existing key will be overwritten.

The following table shows the syntax for file specification for different file locations.

Table 5-2 Specifying locations for the shared public key file

Location	Specification
An absolute path on the local system	Use standard UNIX file specification.
FTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>ftp://user:passwd@host/key-file</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the FTP server, and <i>key-file</i> is the key file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
SCP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>scp://user:passwd@host/key-file</pre> <p>where <i>user</i> is the user name on the host, <i>passwd</i> is the password associated with the user name, <i>host</i> is the host name or IP address of the SCP server, and <i>key-file</i> is the key file, including the path.</p> <p>If you do not specify <i>user</i> and <i>passwd</i>, you will be prompted for them.</p>
HTTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>http://host/key-file</pre> <p>where <i>host</i> is the host name or IP address of the HTTP server, and <i>key-file</i> is the key file, including the path.</p>
TFTP server	<p>Use the following syntax for <i>file-name</i>:</p> <pre>tftp://host/key-file</pre> <p>where <i>host</i> is the host name or IP address of the TFTP server, and <i>key-file</i> is the key file, including the path relative to the TFTP root directory.</p>

show login

Displays current user's login credentials.

Syntax

```
show login [groups | level | user]
```

Command Mode

Operational mode.

Parameters

groups	Displays the groups the user is a member of.
level	Displays the user's login level.
user	Displays the user's login id.

Default

Displays all credentials of the current user.

Usage Guidelines

Use this command to display credential information about the current user.

Examples

[Example 5-5](#) shows credential information about the current user.

Example 5-5 Displaying credential information about the current user

```
vyatta@R1:~$ show login
login      : vyatta   pts/0          Aug 11 17:19 (192.168.1.150)
level      : admin
user       : vyatta
groups     : users adm disk sudo dip quaggavty vyattacfg
vyatta@R1:~$
```

show system login users

Displays user account information.

Syntax

```
show system login users [all | locked | other | vyatta]
```

Command Mode

Operational mode.

Parameters

all	Displays information about all accounts.
locked	Displays information about locked accounts.
other	Displays information about non-Vyatta accounts.
vyatta	Displays information about Vyatta accounts.

Default

Displays information about Vyatta accounts.

Usage Guidelines

Use this command to see various details about system accounts. It shows information about the last time each user logged in.

Examples

[Example 5-6](#) shows information about Vyatta user accounts on R1.

Example 5-6 Displaying information about user accounts

```
vyatta@R1:~$ show system login users
Username      Type    Tty      From           Last login
dave          vyatta                192.168.1.10    never logged in
test         vyatta  pts/0    192.168.1.10    Wed Mar  3 04:49:02 2010
vyatta       vyatta  pts/1    192.168.1.154   Wed Mar  3 04:59:16 2010
```

```
vyatta@R1:~$
```

show users

Shows which users are currently logged on to the system.

Syntax

show users

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to see which users are currently logged on to the system.

Examples

[Example 5-7](#) shows information about users currently logged on to R1.

Example 5-7 Displaying information about currently logged in users

```
vyatta@R1:~$ show users
NAME      LINE      TIME      COMMENT
vyatta    tty1      Feb 22 20:58
test      pts/0     Mar  3 04:49 (192.168.1.10)
vyatta    pts/1     Mar  3 04:59 (192.168.1.154)
vyatta@R1:~$
```

system login

Creates the configuration node for user management and authentication.

Syntax

```
set system login
delete system login
show system login
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    login {}
}
```

Parameters

None.

Default

None.

Usage Guidelines

Use this command, and its sub-commands, to manage user accounts and authentication.

The **login** configuration node is a mandatory node. It is created automatically with default information when the system is first started. If this node is subsequently deleted, the system recreates it with default information.

Use the **set** form of this command to create the **login** configuration node.

Use the **delete** form of this command to restore default user information and authentication information.

Use the **show** form of this command to view user and authentication configuration.

system login banner post-login <banner>

Specifies the post-login banner.

Syntax

```
set system login banner post-login banner
delete system login banner post-login
show system login banner post-login
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    banner {
      post-login banner
    }
  }
}
```

Parameters

<i>banner</i>	The banner to be displayed during login after the user enters a valid password. The string must be enclosed in double-quotes. Special characters such as newline (\n) and tab (\t) can also be entered.
---------------	---

Default

The system displays operating system and copyright information.

Usage Guidelines

Use this command to specify the text that will appear when a user logs into the system successfully.

Use the **set** form of this command to specify the post-login banner.

Use the **delete** form of this command to return to the default post-login banner.

Use the **show** form of this command to view the post-login banner configuration.

system login banner pre-login <banner>

Specifies the pre-login banner.

Syntax

```
set system login banner pre-login banner
delete system login banner pre-login
show system login banner pre-login
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    banner {
      pre-login banner
    }
  }
}
```

Parameters

<i>banner</i>	The banner to be displayed during login after the user enters a login ID. The string must be enclosed in double-quotes. Special characters such as newline (\n) and tab (\t) can also be entered.
---------------	---

Default

The system displays a welcome message.

Usage Guidelines

Use this command to specify the text that will appear when a user enters their login ID.

Use the **set** form of this command to specify the pre-login banner.

Use the **delete** form of this command to return to the default pre-login banner.

Use the **show** form of this command to view the pre-login banner configuration.

system login radius-server <address>

Defines a RADIUS server for user authentication.

Syntax

```
set system login radius-server address [port port | secret secret | timeout timeout]  
delete system login radius-server address [port | secret | timeout]  
show system login radius-server address [port | secret | timeout]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {  
  login {  
    radius-server address{  
      port port  
      secret secret  
      timeout timeout  
    }  
  }  
}
```

Parameters

<i>address</i>	<p>Multi-node. The IP address of a remote authentication server running the RADIUS protocol. This server can be used to authenticate multiple users.</p> <p>You can define multiple RADIUS servers by creating multiple radius-server configuration nodes.</p>
<i>port</i>	<p>Optional. The port to be used for RADIUS traffic. The default is 1812.</p>
<i>secret</i>	<p>The password for the RADIUS server. This must be the same as that recorded on the RADIUS server.</p> <p>Supported characters are alphanumeric and printable special characters (for example, the space character is not permitted). The secret is case-sensitive.</p>

<i>timeout</i>	Optional. The interval, in seconds, after which, if the RADIUS server has not responded, the next configured RADIUS server should be queried. The range is 1 to 30. The default is 2.
----------------	---

Default

None.

Usage Guidelines

Use this command to define a Remote Authentication Dial In User Service (RADIUS) server and specify the information necessary to log on to it.

The RADIUS secret is specified in plain text. RADIUS secrets are stored in plain text on the system, and used as part of a cryptographic operation for transferring authentication information securely over the network. When you view RADIUS secrets, they are displayed in plain text.

NOTE *RADIUS servers are currently not supported in IPv6.*

Use the **set** form of this command to define a RADIUS server.

Use the **delete** form of this command to remove a RADIUS server.

Use the **show** form of this command to view RADIUS server configuration.

system login tacplus-server <address>

Defines a TACACS+ server for user authentication.

Syntax

```
set system login tacplus-server address [port port | secret secret | source-address addr | timeout timeout]  
delete system login tacplus-server address [port | secret | source-address | timeout]  
show system login tacplus-server address [port | secret | source-address | timeout]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {  
  login {  
    tacplus-server address {  
      port port  
      secret secret  
      source-address addr  
      timeout timeout  
    }  
  }  
}
```

Parameters

<i>address</i>	Multi-node. The IP address or hostname of a remote authentication server running TACACS+. This server can be used to authenticate multiple users. You can define multiple TACACS+ servers by creating multiple tacplus-server configuration nodes.
<i>port</i>	Optional. The port to be used for TACACS+ traffic. The default is 49.

<i>secret</i>	Mandatory. The password for the TACACS+ server. This must be the same as that recorded on the TACACS+ server. Supported characters are alphanumeric and printable special characters (for example, the space character is not permitted). The secret is case-sensitive.
<i>addr</i>	Optional. The IP address to use as the source address when connecting to the TACACS+ server. This is typically not required.
<i>timeout</i>	Optional. The interval, in seconds, after which, if the TACACS+ server has not responded, the next configured TACACS+ server should be queried. The range is 1 to 30. The default is 3.

Default

None.

Usage Guidelines

Use this command to define a Terminal Access Control Access-Control System Plus (TACACS+) server and specify the information necessary to log on to it.

The TACACS+ secret is specified in plain text. TACACS+ secrets are stored in plain text on the system, and used as part of a cryptographic operation for transferring authentication information securely over the network. When you view TACACS+ secrets, they are displayed in plain text.

NOTE TACACS+ servers are not supported for IPv6.

Users doing packet capture need to see the encrypted TACACS+ traffic.

Use the **set** form of this command to define a TACACS+ server.

Use the **delete** form of this command to remove a TACACS+ server.

Use the **show** form of this command to view TACACS+ server configuration.

system login user <user>

Creates a user account.

Syntax

```
set system login user user
delete system login user user
show system login user user
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    user user {}
  }
}
```

Parameters

<i>user</i>	Multi-node. A unique user ID of up to 32 characters, including alphanumeric characters or hyphens. You can define multiple user accounts by creating multiple user configuration nodes.
-------------	---

Default

None.

Usage Guidelines

Use this command to define a user that will be authenticated using the system's internal mechanism: "login" authentication.

Note that, although user account and authentication information can be changed using the operating system shell, the system will overwrite these changes the next time you commit configuration in the Vyatta shell. For persistent changes to user or authentication information, use Vyatta CLI commands.

Also, a user cannot be added to the local authentication database if the same username already exists in an accessible remote authentication database (for example, TACACS+).

Use the **set** form of this command to create a **user** configuration node.

Use the **delete** form of this command to remove a **user** configuration node. Note that you cannot delete the account you are currently using.

Use the **show** form of this command to view **user** configuration.

system login user <user> authentication

Sets an authentication password for a user.

Syntax

```
set system login user user authentication {encrypted-password epwd |  
plaintext-password ppwd}  
  
delete system login user user authentication [encrypted-password |  
plaintext-password]  
  
show system login user user authentication [encrypted-password |  
plaintext-password]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {  
  login {  
    user user {  
      authentication {  
        encrypted-password epwd  
        plaintext-password ppwd  
      }  
    }  
  }  
}
```

Parameters

<i>user</i>	The user ID.
<i>epwd</i>	The encrypted password. This value is system generated and should not be altered.
<i>ppwd</i>	The user's password, specified in plain text. Most special characters can be used with the exceptions of single quote, double quote, and “\”.

Default

None.

Usage Guidelines

Use this command to set a password to authenticate a user. Passwords are automatically encrypted by the system using Message Digest 5 (MD5) encryption. The encrypted version is stored internally and used. When displayed, the encrypted value is shown. The plaintext password appears as double quotes in the configuration.

To disable a user account without deleting it, you can simply set the value of the **encrypted-password** option to “*”.

Use the **set** form of this command to set a user’s password.

Use the **delete** form of this command to remove a user’s password.

Use the **show** form of this command to view user password configuration.

system login user <user> authentication public-keys

Specifies parameters for SSH shared public key user authentication.

Syntax

```
set system login user user authentication public-keys key-id [key key-value | options key-options | type key-type]
```

```
delete system login user user authentication public-keys key-id [key | options | type]
```

```
show system login user user authentication public-keys key-id [key | options | type]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {  
  login {  
    user user {  
      authentication {  
        public-keys key-id {  
          key key-value  
          options key-options  
          type key-type  
        }  
      }  
    }  
  }  
}
```

Parameters

<i>user</i>	The user ID.
<i>key-id</i>	The key identifier. This is typically in the form <code>user@host</code> and is generated by the <code>ssh-keygen</code> command when used to create the private and public key pair.
<i>key-value</i>	The shared public key string.

<i>key-options</i>	The optional options which consist of a comma-separated option specification. See the “AUTHORIZED_KEYS FILE FORMAT” section of the sshd manual page (man sshd) for a detailed description of the available options.
<i>key-type</i>	The authentication type to be used. This parameter must be specified. Supported values are as follows: ssh-dsa : Use DSA authentication. ssh-rsa : User RSA authentication.

Default

None.

Usage Guidelines

Use this command to specify the parameters to be used for shared public key authentication for logins using SSH. During commit, these values are placed in **/home/<user>/.ssh/authorized_keys**. Changes to this file can only be made using this command. All direct user changes to this file will be lost.

Rather than specifying these parameters directly using the **set** form of this command, the recommended method is to use the **loadkey** command. It will populate the *key-id*, *key-value*, *key-options*, and *key-type* arguments for a specified user given a shared public key file generated by the Linux **ssh-keygen** command on the remote system.

Shared public key authentication for SSH can be available in addition to password authentication for SSH or it can be used exclusively. If both methods are made available at the same time, then a login prompt will only appear if a shared public key is not provided at the start of the SSH session. In order to use only shared public keys for SSH authentication, password authentication for SSH must first be disabled. For information on disabling password authentication for SSH, see the *Vyatta Services Reference Guide*.

Use the **set** form of this command to set the public key parameters.

Use the **delete** form of this command to remove the public key parameters.

Use the **show** form of this command to view public key parameters.

system login user <user> full-name <name>

Allows you to record a user's full name.

Syntax

```
set system login user user full-name name
delete system login user user full-name
show system login user user full-name
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    user user {
      full-name name
    }
  }
}
```

Parameters

<i>user</i>	The user ID.
<i>name</i>	A string representing the user's name, including alphanumeric characters, space, and hyphens. Strings that include spaces must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to record a user's full name.

Use the **set** form of this command to specify the user's name.

Use the **delete** form of this command to remove the user's name.

Use the **show** form of this command to view a user's name.

system login user <user> group <group>

Allows you to make a user a member of a group.

Syntax

```
set system login user user group group
delete system login user user group
show system login user user group
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    user user {
      group group
    }
  }
}
```

Parameters

<i>user</i>	The user ID.
<i>group</i>	A string representing the the group the user is to be assigned to. Groups are defined in the <i>/etc/group</i> directory.

Default

None

Usage Guidelines

Use this command to assign a user to a group. Users can be members of multiple groups by executing this command once for each group the user is to be assigned to. Use the **set** form of this command to make a user a member of the specified group. Use the **delete** form of this command to remove a user from the specified group.

Use the **show** form of this command to view the groups that the user is assigned to.

system login user <user> home-directory <dir>

Allows you to specify a user's home directory.

Syntax

```
set system login user user home-directory dir
delete system login user user home-directory
show system login user user home-directory
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    user user {
      home-directory dir
    }
  }
}
```

Parameters

<i>user</i>	The user ID.
<i>dir</i>	A string representing the user's home directory; for example, /home/vyatta .

Default

The home directory is **/home/<user>**.

Usage Guidelines

Use this command to specify a user's home directory.

Use the **set** form of this command to specify the user's home directory.

Use the **delete** form of this command to restore the user's default home directory.

Use the **show** form of this command to view a user's home directory.

system login user <user> level <level>

Specifies a user's privilege level and system access.

Syntax

```
set system login user user level level
delete system login user user level
show system login user user level
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  login {
    user user {
      level level
    }
  }
}
```

Parameters

<i>user</i>	The user ID.
<i>level</i>	Determines the user's level of privilege. Supported values are as follows: admin: Assigns the user administrative privileges. The user can execute any command in the Vyatta CLI or the underlying operating system. operator: Assigns the user restricted privileges. The user can execute operational commands in the Vyatta CLI, plus a restricted form of ping and traceroute . The user cannot enter configuration mode or execute configuration commands.

Default

Users are assigned administrative privileges by default.

Usage Guidelines

Use this command to assign role-based system access to a user.

The system supports two system roles:

- Admin user. Users assigned a role of admin have full access to all Vyatta-specific commands plus all operating system shell commands. Access to operating system shell commands is direct: the user need not exit to another shell mode before executing these commands. Although admin users can execute any command implemented in the system, command completion and CLI help show only Vyatta commands.
- Operator user. Users assigned a role of operator have access to the Vyatta operational command set, but no access to configuration commands. They also have limited access to operating system commands. At this time, command completion and CLI help show all Vyatta commands for users with the operator role.

Use the **set** form of this command to set a user's privilege level.

Use the **delete** form of this command to restore a user's privilege level to the default.

Use the **show** form of this command to view user privilege configuration.

system tacplus-options command-accounting

Enables logging accounting records for interactive shell commands.

Syntax

```
set system tacplus-options command-accounting
delete system tacplus-options command-accounting
show system tacplus-options
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    tacplus-options {
        command-accounting
    }
}
```

Parameters

None.

Default

Accounting records are not logged.

Usage Guidelines

Use this command to enable logging accounting records for interactive shell (**vbash**) commands.

Connections for which commands are logged include SSH, Telnet, console, and serial connections to the system. Command logging is not limited to TACACS+ authenticated users and accounts for **vbash** shell commands. Accounting records are logged to the TACACS+ server.

Use the **set** form of this command to enable logging accounting records for interactive shell commands.

Use the **delete** form of this command to restore the default behavior for command accounting.

Use the **show** form of this command to view command accounting configuration.

Chapter 6: Logging

This chapter describes the Vyatta system logging mechanism.

This chapter presents the following topics:

- [Logging Configuration](#)
- [Logging Commands](#)

Logging Configuration

This section presents the following topics:

- [Logging Overview](#)
- [Logging Configuration Example](#)
- [Enabling and Disabling Logging for Specific Features](#)

Logging Overview

Significant system events are captured in log messages (also called syslog messages), which you can view on the console, save to a file, forward to an external server such as a syslog server, or direct to the terminal session of one or more specific users.

Depending on the level of message severity you choose to log, system log messages can include notices of ordinary and routine operations, as well as warnings, failure, and error messages.

The Vyatta system's logging function makes use of the UNIX **syslogd** process. Logging configuration performed within the system's CLI is stored in the **/etc/syslogd.conf** file.

By default, local logging is enabled, and sends messages to **/var/log/messages**.

Logging Facilities

The Vyatta system supports standard syslog facilities. These are as follows:

Table 6-1 Syslog facilities

Facility	Description
auth	Authentication and authorization
authpriv	Non-system authorization
cron	Cron daemon
daemon	System daemons
kern	Kernel
lpr	Line printer spooler
mail	Mail subsystem
mark	Timestamp
news	USENET subsystem

Table 6-1 Syslog facilities

security	Security subsystem
syslog	System logging
user	Application processes
uucp	UUCP subsystem
local0	Local facility 0
local1	Local facility 1
local2	Local facility 2
local3	Local facility 3
local4	Local facility 4
local5	Local facility 5
local6	Local facility 6
local7	Local facility 7
all	All facilities excluding “mark”

In addition, logging can be selectively enabled for some specific routing components. For this information, please see the section “[Enabling and Disabling Logging for Specific Features](#)” on page 254.

Log Destinations

When logging is enabled, system log messages are always written to the **messages** file in the **/var/log** directory of the local file system. In addition, system logs can be sent to the console, to a named file in the local file system, to a server running the **syslogd** utility (that is, a syslog server), or to the terminal session of one or more specific users.

- To direct syslog messages to the console, use the **system syslog console** command.
- To direct syslog messages to a named file in the local file system, use the **system syslog file** command.
- To direct syslog messages to a remote machine running the **syslogd** utility, use the **system syslog host** command.
- To direct syslog messages to the terminal of a specific user, to multiple users, or to all users logged into the routing platform, use the **system syslog user** command.

Log File Locations and Archiving

Messages are written either to the main log file (the default) or to a file that you specify. User-defined log files are written to the `/var/log/user` directory, under the user-specified file name.

The system uses standard UNIX log rotation to prevent the file system from filling up with log files. When log messages are written to a file, the system will write up to 500 KB of log messages into the file *logfile*, where *logfile* is either the main log file or a name you have assigned to a user-defined file. When *logfile* reaches its maximum size, the system closes it and compresses it into an archive file. The archive file is named *logfile.0.gz*.

At this point, the logging utility opens a new *logfile* file and begins to write system messages to it. When the new log file is full, the first archive file is renamed *logfile.1.gz* and the new archive file is named *logfile.0.gz*.

The system archives log files in this way until a maximum number of log files exists. By default, the maximum number of archived files is 10 (that is, up to *logfile.9.gz*), where *logfile.0.gz* always represents the most recent file. After this, the oldest log archive file is deleted as it is overwritten by the next oldest file.

To change the properties of log file archiving, configure the **system syslog archive** node:

- Use the **size** parameter to specify the maximum size of each archived log file.
- Use the **files** parameter to specify the maximum number of archive files to be maintained.

Log Severities

Log messages generated by the Vyatta system will be associated with one of the following levels of severity.

Table 6-2 Syslog message severities

Severity	Meaning
emerg	Emergency. A general system failure or other serious failure has occurred, such that the system is unusable.
alert	Alert. Immediate action is required to prevent the system from becoming unusable—for example, because a network link has failed, or the database has become compromised.
crit	Critical. A critical condition exists, such as resource exhaustion—for example, the system is out of memory, CPU processing thresholds are being exceeded, or a hardware failure has occurred.
err	Error. An error condition has occurred, such as a failed system call. However, the system is still functioning.

Table 6-2 Syslog message severities

warning	Warning. An event has occurred that has the potential to cause an error, such as invalid parameters being passed to a function. This situation should be monitored.
notice	Notice. A normal but significant event has occurred, such as an unexpected event. It is not an error, but could potentially require attention.
info	Informational. Normal events of interest are being reported as they occur.
debug	Debug level. Trace-level information is being provided.



CAUTION Risk of service degradation. Debug severity is resource-intensive. Setting logging levels to Debug can affect performance.

Logging Configuration Example

[Example 6-1](#) creates a log file that captures kernel-related alerts of critical and higher severity.

To create a log file to capture kernel-related critical alerts, perform the following steps in configuration mode.

Example 6-1 Configuring a log to capture kernel-related alerts of critical and higher severity

Step	Command
Create a logfile called "kernel-log" and log kernel-related messages of "critical" and higher severity.	<pre>vyatta@R1# set system syslog file kernel-log facility kern level crit</pre>
Commit the configuration.	<pre>vyatta@R1# commit Restarting system log daemon.... vyatta@R1#</pre>
Verify the configuration.	<pre>vyatta@R1# show system syslog file kernel-log facility kern { level crit }</pre>

The command "**show log file *kernel-log***" can then be used in operational mode to display the contents of the *kernel-log* logfile.

Enabling and Disabling Logging for Specific Features

Some features of the Vyatta system—for example, BGP, OSPF, and IPsec VPN—produce feature-specific log messages that can be enabled and disabled within the configuration node for that feature. When you enable logging for a system feature, the log messages are sent to whatever destinations are configured for syslog.

By default, log messages are sent to the main log file. You can configure syslog to send log messages to a file you specify in `/var/user`.

Logging Commands

This section presents the following commands.

Configuration Commands	
system syslog	Configures the system's syslog utility.
system syslog console facility <facility> level <level>	Specifies which messages are sent to the console.
system syslog file <filename> archive	Specifies the settings for log file archiving of the user-defined log file.
system syslog file <filename> facility <facility> level <level>	Specifies which messages are sent to the user-defined log file.
system syslog global archive	Specifies the settings for log file archiving of the main system log file.
system syslog global facility <facility> level <level>	Specifies which messages are sent to the main system log file.
system syslog host <hostname> facility <facility> level <level>	Specifies which messages are sent to the remote syslog server.
system syslog user <userid> facility <facility> level <level>	Specifies which messages are sent to the specified user's terminal.
Operational Commands	
delete log file	Deletes the specified log file, including all its archive files.
show log	Displays the contents of the specified log file.
show log image <image-name>	Displays the contents of the log file in the specified image.

delete log file

Deletes the specified log file, including all its archive files.

Syntax

`delete log file file-name`

Command Mode

Operational mode.

Parameters

<i>file-name</i>	Deletes the specified user-defined file in the <code>/var/log</code> directory, including all its archive files.
------------------	--

Usage Guidelines

Use this command to delete a log file.

Log files are created in the `/var/log` directory. When you issue this command, the specified file and all associated archive files are deleted from this directory.

Note that deleting the log file does not stop the system from logging events. If you use this command while the system is logging events, old log events will be deleted, but events after the delete operation will be recorded in the new file. To delete the file altogether, first disable logging to the file using the [system syslog](#) command, and then delete it.

show log

Displays the contents of the specified log file.

Syntax

```
show log [all | authorization | directory | file file-name | tail [lines] | component]
```

Command Mode

Operational mode.

Parameters

all	Displays the contents of all master log files.
authorization	Displays all authorization attempts.
directory	Displays a listing of all user-defined log files.
file <i>file-name</i>	Displays the contents of the specified user-defined log file.
tail	Displays the last 10 lines of the system log.
<i>lines</i>	Specifies the number of lines that tail will display at the end of the system log.
<i>component</i>	Shows logs for a specific system component. Supported values are: cluster : Show log for cluster . conntrack-sync : Show log for conntrack-sync . content-inspection : Show log for content-inspection . dhcp : Show log for dhcp . dns : Show log for dns . firewall : Show log for firewall . https : Show log for https . image : Show log from an image. lldp : Show log for lldp . nat : Show log for nat . openvpn : Show log for openvpn . snmp : Show log for snmp . vpn : Show log for vpn . vrp : Show log for vrp . webproxy : Show log for webproxy

Usage Guidelines

Use this command to view the contents of a log file or files.

When used with no option, this command displays the contents of the main system log, which is the default log to which the system writes syslog messages.

When used with the **authorization** option, this command displays all authorization attempts.

When used with the **directory** option, this command displays a list of all user-defined log files. Syslog messages can be written to these or to the main system log file. User-specified log files are defined using `system syslog file <filename> facility <facility> level <level> command`.

When **file** *file-name* is specified, this command displays the contents of the specified user-defined log file.

When used with the **tail** option, this command displays the last 10 lines of the system log file and will continue to display log messages as they are added to the log file. This command can be interrupted using <Ctrl+C>.

The *lines* option specified that the last *lines* lines of the system log are to be displayed.

When a *component* is specified, log messages that relate to that component are displayed.

show log image <image-name>

Displays the contents of the log file in the specified image.

Syntax

```
show log image image-name [all | authorization | directory | file file-name | tail [lines]]
```

Command Mode

Operational mode.

Parameters

all	Displays the contents of all master log files for the specified image.
authorization	Displays all authorization attempts for the specified image.
directory	Displays a listing of all user-defined log files for the specified image.
file <i>file-name</i>	Displays the contents of the specified user-defined log file for the specified image.
tail	Displays the last lines of the system log for the specified image.
<i>lines</i>	The number of lines to be displayed. If not specified, 10 lines are displayed.

Default

When used with no option, this command displays the contents of the main system log. (This is the default log to which the system writes syslog messages.)

Usage Guidelines

Use this command to view the contents of a log file or files on an image other than the current active image.

system syslog

Configures the system's syslog utility.

Syntax

```
set system syslog
delete system syslog
show system syslog
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
    syslog {
    }
}
```

Parameters

None.

Default

None.

Usage Guidelines

Use this command to configure the system's syslog utility.

Using this command, you can set the destinations for log messages from different routing components (facilities) and specify what severity of message should be reported for each facility.

Log messages generated by the Vyatta system will be associated with one of the following levels of severity.

Table 6-3 Syslog message severities

Severity	Meaning
emerg	Emergency. A general system failure or other serious failure has occurred, such that the system is unusable.

Table 6-3 Syslog message severities

alert	Alert. Immediate action is required to prevent the system from becoming unusable—for example, because a network link has failed, or the database has become compromised.
crit	Critical. A critical condition exists, such as resource exhaustion—for example, the system is out of memory, CPU processing thresholds are being exceeded, or a hardware failure has occurred.
err	Error. An error condition has occurred, such as a failed system call. However, the system is still functioning.
warning	Warning. An event has occurred that has the potential to cause an error, such as invalid parameters being passed to a function. This situation should be monitored.
notice	Notice. A normal but significant event has occurred, such as an unexpected event. It is not an error, but could potentially require attention.
info	Informational. Normal events of interest are being reported as they occur.
debug	Debug level. Trace-level information is being provided.

The Vyatta system supports standard syslog facilities. These are as follows:

Table 6-4 Syslog facilities

Facility	Description
auth	Authentication and authorization
authpriv	Non-system authorization
cron	Cron daemon
daemon	System daemons
kern	Kernel
lpr	Line printer spooler
mail	Mail subsystem
mark	Timestamp
news	USENET subsystem
security	Security subsystem
syslog	System logging

Table 6-4 Syslog facilities

user	Application processes
uucp	UUCP subsystem
local0	Local facility 0
local1	Local facility 1
local2	Local facility 2
local3	Local facility 3
local4	Local facility 4
local5	Local facility 5
local6	Local facility 6
local7	Local facility 7
all	All facilities excluding "mark"

Messages are written either to the main log file (the default) or to a file that you specify. User-defined log files are written to the `/var/log/user` directory, under the user-specified file name.

The system uses standard UNIX log rotation to prevent the file system from filling up with log files. When log messages are written to a file, the system will write up to 500 KB of log messages into the file *logfile*, where *logfile* is either the main log file or a name you have assigned to a user-defined file. When *logfile* reaches its maximum size, the system closes it and compresses it into an archive file. The archive file is named *logfile.0.gz*.

At this point, the logging utility opens a new *logfile* file and begins to write system messages to it. When the new log file is full, the first archive file is renamed *logfile.1.gz* and the new archive file is named *logfile.0.gz*.

The system archives log files in this way until a maximum number of log files exists. By default, the maximum number of archived files is 10 (that is, up to *logfile.9.gz*), where *logfile.0.gz* always represents the most recent file. After this, the oldest log archive file is deleted as it is overwritten by the next oldest file.

To change the properties of log file archiving, configure the **system syslog archive** node:

- Use the **size** parameter to specify the maximum size of each archived log file.
- Use the **files** parameter to specify the maximum number of archive files to be maintained.

Use the **set** form of this command to create the syslog configuration.

Use the **delete** form of this command to remove the syslog configuration.

Use the **show** form of this command to view the syslog configuration.

system syslog console facility <facility> level <level>

Specifies which messages are sent to the console.

Syntax

```
set system syslog console facility facility level level
delete system syslog console facility [facility [level]]
show system syslog console facility [facility [level]]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    console {
      facility facility {
        level level
      }
    }
  }
}
```

Parameters

<i>facility</i>	<p>Multi-node. The kinds of messages that will be sent to the console. Please see the Usage Guidelines in system syslog command for supported facilities.</p> <p>You can send the log messages of multiple facilities to the console by creating multiple facility configuration nodes within the console node.</p>
<i>level</i>	<p>The minimum severity of log message that will be reported to the console. Supported values are emerg, alert, crit, err, warning, notice, info, and debug. Please see the Usage Guidelines in system syslog command for the meanings of these levels.</p> <p>By default, messages of err severity are logged to the console.</p>

Default

None.

Usage Guidelines

Use this command to specify which messages are sent to the console.

Use the **set** form of this command to specify which messages are sent to the console.

Use the **delete** form of this command to restore the default console message configuration.

Use the **show** form of this command to view the console message configuration.

system syslog file <filename> archive

Specifies the settings for log file archiving of the user-defined log file.

Syntax

```
set system syslog file filename archive {files files | size size}
delete system syslog file filename archive {files | size}
show system syslog file filename archive {files | size}
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    file filename{
      archive {
        files files
        size size
      }
    }
  }
}
```

Parameters

<i>filename</i>	Multi-node. Defines a file to which the specified log messages will be written. File names can include numbers, letters, and hyphens. Full path specifications are not accepted. You can send log messages to multiple files by creating multiple file configuration nodes.
<i>files</i>	Sets the maximum number of archive files that will be maintained for this log file. After the maximum has been reached, logs will be rotated with the oldest file overwritten. The default is 10.
<i>size</i>	Sets the maximum size in bytes of archive files for this log file. After the maximum has been reached, the file will be closed and archived in compressed format. The default is 1 MB.

Default

None.

Usage Guidelines

Use this command to specify the settings for log file archiving of the user-defined log file.

Use the **set** form of this command to specify the settings for log file archiving of the user-defined log file.

Use the **delete** form of this command to restore the default user-defined log file archiving configuration.

Use the **show** form of this command to view the user-defined log file archiving configuration.

system syslog file <filename> facility <facility> level <level>

Specifies which messages are sent to the user-defined log file.

Syntax

```
set system syslog file filename facility facility level level
delete system syslog file filename facility [facility [level]]
show system syslog file filename facility [facility [level]]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    file filename {
      facility facility {
        level level
      }
    }
  }
}
```

Parameters

<i>filename</i>	<p>Multi-node. Defines a file to which the specified log messages will be written. File names can include numbers, letters, and hyphens. Full path specifications are not accepted.</p> <p>You can send log messages to multiple files by creating multiple file configuration nodes.</p>
<i>facility</i>	<p>Multi-node. The kinds of messages that will be sent to the user-defined log file. Please see the Usage Guidelines in system syslog command for supported logging facilities.</p> <p>You can send the log messages of multiple facilities to this log file by creating multiple facility configuration nodes within the file configuration node.</p>

<i>level</i>	The minimum severity of log message that will be reported. Supported values are emerg , alert , crit , err , warning , notice , info , debug . Please see the Usage Guidelines in system syslog command for the meanings of these levels. By default, messages of warning severity are logged to file.
--------------	--

The Vyatta system supports sending log messages to the main system log file, to the console, to a remote host, to a user-specified file, or to a user account.

Default

None.

Usage Guidelines

Use this command to specify which messages are sent to the user-defined log file.

Use the **set** form of this command to specify which messages are sent to the user-defined log file.

Use the **delete** form of this command to restore the default user-defined log file message configuration.

Use the **show** form of this command to view the user-defined log file message configuration.

system syslog global archive

Specifies the settings for log file archiving of the main system log file.

Syntax

```
set system syslog global archive {files files | size size}
delete system syslog global archive {files | size}
show system syslog global archive {files | size}
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    global {
      archive {
        files files
        size size
      }
    }
  }
}
```

Parameters

<i>files</i>	Sets the maximum number of archive files that will be maintained for the main system log file. After the maximum has been reached, logs will be rotated with the oldest file overwritten. The default is 10.
<i>size</i>	Sets the maximum size in bytes of archive files for the main system log file. After the maximum has been reached, the file will be closed and archived in compressed format. The default is 1 MB.

Default

None.

Usage Guidelines

Use this command to specify the settings for log file archiving of the main system log file.

Use the **set** form of this command to specify the settings for log file archiving of the main system log file.

Use the **delete** form of this command to restore the default log file archiving configuration.

Use the **show** form of this command to view the log file archiving configuration.

system syslog global facility <facility> level <level>

Specifies which messages are sent to the main system log file.

Syntax

```
set system syslog global facility facility level level
delete system syslog global facility [facility [level]]
show system syslog global facility [facility [level]]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    global {
      facility facility {
        level level
      }
    }
  }
}
```

Parameters

<i>facility</i>	<p>Multi-node. The kinds of messages that will be sent to the main system log file. Please see the Usage Guidelines in system syslog command for supported facilities.</p> <p>You can send the log messages of multiple facilities to the main system log file by creating multiple facility configuration nodes within the global node.</p>
<i>level</i>	<p>The minimum severity of log message that will be reported. Supported values are emerg, alert, crit, err, warning, notice, info, debug. Please see the Usage Guidelines in system syslog command for the meanings of these levels.</p> <p>By default, messages of warning severity are logged to the main system log file.</p>

Default

None.

Usage Guidelines

Use this command to specify which messages are sent to the main system log file.

Use the **set** form of this command to specify which messages are sent to the main system log file.

Use the **delete** form of this command to restore the default log file message configuration.

Use the **show** form of this command to view the log file message configuration.

system syslog host <hostname> facility <facility> level <level>

Specifies which messages are sent to the remote syslog server.

Syntax

```
set system syslog host hostname facility facility level level
delete system syslog file hostname facility [facility [level]]
show system syslog file hostname facility [facility [level]]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    host hostname {
      facility facility {
        level level
      }
    }
  }
}
```

Parameters

<i>hostname</i>	<p>Multi-node. Sends the specified log messages to a host. The host must be running the syslog protocol. The <i>hostname</i> can be an IP address or a host name. Host names can include numbers, letters, and hyphens (“-”).</p> <p>You can send log messages to multiple hosts by creating multiple host configuration nodes.</p>
<i>facility</i>	<p>Multi-node. The kinds of messages that will be sent to the host. Please see the Usage Guidelines in system syslog command for supported logging facilities.</p> <p>You can send the log messages of multiple facilities to a host by creating multiple facility configuration nodes within the host configuration node.</p>

<i>level</i>	The minimum severity of log message that will be reported. Supported values are emerg , alert , crit , err , warning , notice , info , debug . Please see the Usage Guidelines in system syslog command for the meanings of these levels. By default, messages of err severity are logged to hosts.
--------------	---

Default

None.

Usage Guidelines

Use this command to specify which messages are sent to the remote syslog server.

Use the **set** form of this command to specify which messages are sent to the remote syslog server.

Use the **delete** form of this command to restore the default remote syslog server log file message configuration.

Use the **show** form of this command to view the remote syslog server log file message configuration.

system syslog user <userid> facility <facility> level <level>

Specifies which messages are sent to the specified user's terminal.

Syntax

```
set system syslog user userid facility facility level level
delete system syslog user userid facility [facility [level]]
show system syslog user userid facility [facility [level]]
```

Command Mode

Configuration mode.

Configuration Statement

```
system {
  syslog {
    user userid {
      facility facility {
        level level
      }
    }
  }
}
```

Parameters

<i>userid</i>	<p>Multi-node. Sends the specified log messages to the specified user's terminal.</p> <p>You can send log messages to multiple users by creating multiple user configuration nodes.</p>
<i>facility</i>	<p>Multi-node. The kinds of messages that will be sent to the user. Please see the Usage Guidelines in system syslog command for supported logging facilities.</p> <p>You can send the log messages of multiple facilities to a user account by creating multiple facility configuration nodes within the user configuration node.</p>

<i>level</i>	The minimum severity of log message that will be reported to the user. Supported values are emerg , alert , crit , err , warning , notice , info , debug . Please see the Usage Guidelines in system syslog command for the meanings of these levels. By default, messages of err severity are logged to specified user's.
--------------	--

Default

None.

Usage Guidelines

Use this command to specify which messages are sent to the specified user's terminal.

Use the **set** form of this command to specify which messages are sent to the specified user's terminal.

Use the **delete** form of this command to restore the default user terminal message configuration.

Use the **show** form of this command to view the user terminal message configuration.

Glossary

ACL	access control list
ADSL	Asymmetric Digital Subscriber Line
AH	Authentication Header
AMI	Amazon Machine Image
API	Application Programming Interface
AS	autonomous system
ARP	Address Resolution Protocol
AWS	Amazon Web Services
BGP	Border Gateway Protocol
BIOS	Basic Input Output System
BPDU	Bridge Protocol Data Unit
CA	certificate authority
CCMP	AES in counter mode with CBC-MAC
CHAP	Challenge Handshake Authentication Protocol
CLI	command-line interface
DDNS	dynamic DNS
DHCP	Dynamic Host Configuration Protocol
DHCPv6	Dynamic Host Configuration Protocol version 6
DLCI	data-link connection identifier
DMI	desktop management interface
DMVPN	dynamic multipoint VPN
DMZ	demilitarized zone
DN	distinguished name

DNS	Domain Name System
DSCP	Differentiated Services Code Point
DSL	Digital Subscriber Line
eBGP	external BGP
EBS	Amazon Elastic Block Storage
EC2	Amazon Elastic Compute Cloud
EGP	Exterior Gateway Protocol
ECMP	equal-cost multipath
ESP	Encapsulating Security Payload
FIB	Forwarding Information Base
FTP	File Transfer Protocol
GRE	Generic Routing Encapsulation
HDLC	High-Level Data Link Control
I/O	Input/Output
ICMP	Internet Control Message Protocol
IDS	Intrusion Detection System
IEEE	Institute of Electrical and Electronics Engineers
IGMP	Internet Group Management Protocol
IGP	Interior Gateway Protocol
IPS	Intrusion Protection System
IKE	Internet Key Exchange
IP	Internet Protocol
IPOA	IP over ATM
IPsec	IP Security
IPv4	IP Version 4
IPv6	IP Version 6

ISAKMP	Internet Security Association and Key Management Protocol
ISM	Internet Standard Multicast
ISP	Internet Service Provider
KVM	Kernel-Based Virtual Machine
L2TP	Layer 2 Tunneling Protocol
LACP	Link Aggregation Control Protocol
LAN	local area network
LDAP	Lightweight Directory Access Protocol
LLDP	Link Layer Discovery Protocol
MAC	medium access control
mGRE	multipoint GRE
MIB	Management Information Base
MLD	Multicast Listener Discovery
MLPPP	multilink PPP
MRRU	maximum received reconstructed unit
MTU	maximum transmission unit
NAT	Network Address Translation
NBMA	Non-Broadcast Multi-Access
ND	Neighbor Discovery
NHRP	Next Hop Resolution Protocol
NIC	network interface card
NTP	Network Time Protocol
OSPF	Open Shortest Path First
OSPFv2	OSPF Version 2
OSPFv3	OSPF Version 3
PAM	Pluggable Authentication Module

PAP	Password Authentication Protocol
PAT	Port Address Translation
PCI	peripheral component interconnect
PIM	Protocol Independent Multicast
PIM-DM	PIM Dense Mode
PIM-SM	PIM Sparse Mode
PKI	Public Key Infrastructure
PPP	Point-to-Point Protocol
PPPoA	PPP over ATM
PPPoE	PPP over Ethernet
PPTP	Point-to-Point Tunneling Protocol
PTMU	Path Maximum Transfer Unit
PVC	permanent virtual circuit
QoS	quality of service
RADIUS	Remote Authentication Dial-In User Service
RHEL	Red Hat Enterprise Linux
RIB	Routing Information Base
RIP	Routing Information Protocol
RIPng	RIP next generation
RP	Rendezvous Point
RPF	Reverse Path Forwarding
RSA	Rivest, Shamir, and Adleman
Rx	receive
S3	Amazon Simple Storage Service
SLAAC	Stateless Address Auto-Configuration
SNMP	Simple Network Management Protocol

SMTP	Simple Mail Transfer Protocol
SONET	Synchronous Optical Network
SPT	Shortest Path Tree
SSH	Secure Shell
SSID	Service Set Identifier
SSM	Source-Specific Multicast
STP	Spanning Tree Protocol
TACACS+	Terminal Access Controller Access Control System Plus
TBF	Token Bucket Filter
TCP	Transmission Control Protocol
TKIP	Temporal Key Integrity Protocol
ToS	Type of Service
TSS	TCP Maximum Segment Size
Tx	transmit
UDP	User Datagram Protocol
VHD	virtual hard disk
vif	virtual interface
VLAN	virtual LAN
VPC	Amazon virtual private cloud
VPN	virtual private network
VRRP	Virtual Router Redundancy Protocol
WAN	wide area network
WAP	wireless access point
WPA	Wired Protected Access
